AND AND AND AND FOR STEEL SOME STEEL SOME STEEL STEEL SOME STEEL STEEL STEEL STEEL STEEL SOME STEEL STEEL STEEL

3.2. Control of the draught of the chimney

The draught of the chimney must be measured when the cooker is first started and before the oil flow is adjusted.

- insert the measuring tube draught gauge (diag. 21) in the opening of the flame viewer; having first taken off the top screw.
- the optimum draught is about 0,03 ins.w.g at minimum speed and 0,06 ins.w.g at maximum speed.
- if the draught is lower than the values stated, it will be necessary to modify the chimney (see paragraph 2.2)
- if the draught is far above, we advise the fitting of a draught regulator to ensure a good balance of the burner in operation and optimum efficiency of the boiler.

3.3. Adjustment of the operation of the burner

The burner is checked at the factory to operate well under normal conditions:

- Mains voltage 220 volts ±10 %
- Draught at the plug: 0,04 ins.w.g. (about 0,06 in the chimney)


Under those conditions, the flame does not cling to the upper ring of the burner at minimum speed. The flame does not reach the cooking-heating flap when operating at maximum speed (selector on position 25).

Adjusting the oil flows


In case the maximum and minimum flows must be modified, see diag. 22

Control of the thermostat operation

In accordance with a certain temperature of the water in the water jacket, operate and check that the thermostat control ensures a slow speed of the burner when its setting corresponds with the water temperature;

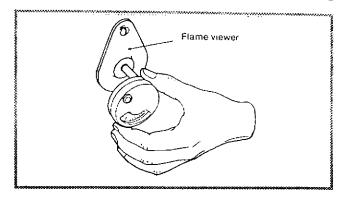

Diag. 21 - draught gauge

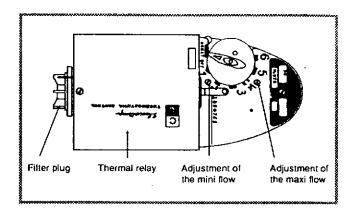

Diag. 22 - Float regulator

The burner completely stops when the thermostat control is set 10°C/50°F below this temperature.

The good operation of the appliance is guarantied as long as the equipment has not been modified by the installer and the electrical connections have been properly made as described in this manual.

4. Spare parts


For any order of spare parts, please indicate: model nr, code of the colour, description of the part, code number of the part.

Example of order: GRETALUX NL, model 871.29.01, color Z, side panel 207833


4.1. Cooker (fig. 23)

1	100605	panel fastener	
2	100940	axis	
3	100966	axis	
4	101007	magnet	
5	105118	nut	
6	105206	fire brick	
7	105501	block stop	
8	109844	hinge	
9	109845	hinge	
10	109847	hinge	
11	122807	name plate	
12	124454	stut	
13	132750	hinge support	
14	132751	hinge support	
15	134304	striking plate	
16	134505	stud	
		<u> </u>	

19	134915	wire rack	
20	137154	oven door glass	
21	137155	inner oven door glass	
22	142303	glass joint	
23	142306	glass joint	
24	142308	door gasket	
25	158613	knob	
26	158619	handle	
27	158760	handle	
28	158761	handle	
29	164558	rail	
30	166024	spring	
31	167304	washer	
32	178607	thermometer	
33	179911	stud	
34	181603	ceramics rope 13	
35	181604	ceramics rope 10x4	
36	189103	stud 27x8x6	
37	189105	stud 28x8x7	
38	200155	base	
39	200394	front panel	
40	200422	plinth	
41	200728	suppl. front panel	
42	201221	heat shield	
43	201409	top plate shield	
44	204169	rear panel	•
45	207833	side panel	
46	208104	right heat shield	
47	208205	ccreen	

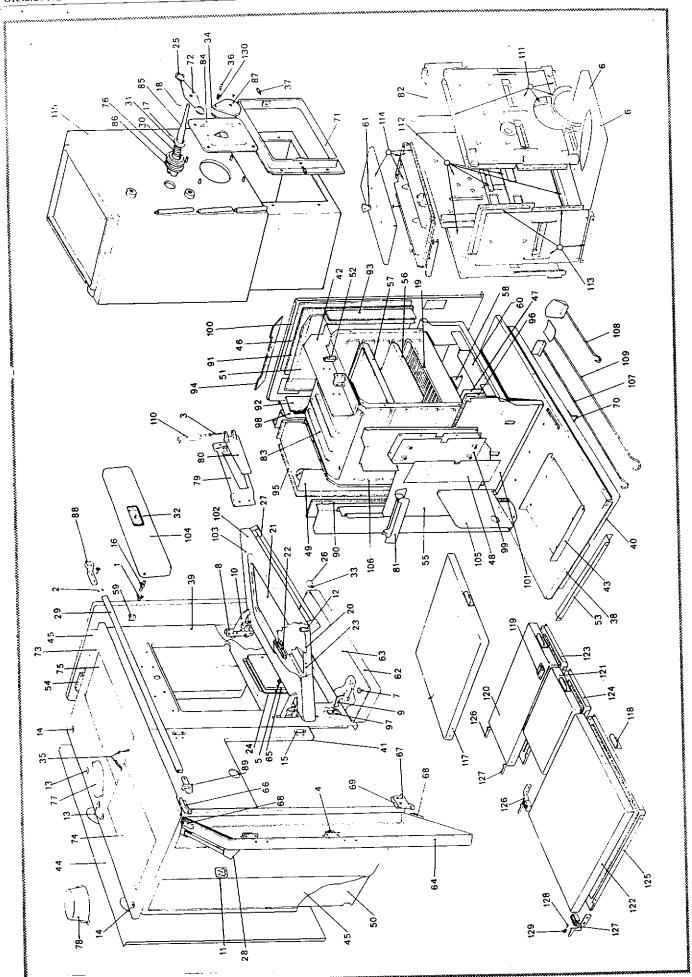

Diag 23 - Cooker

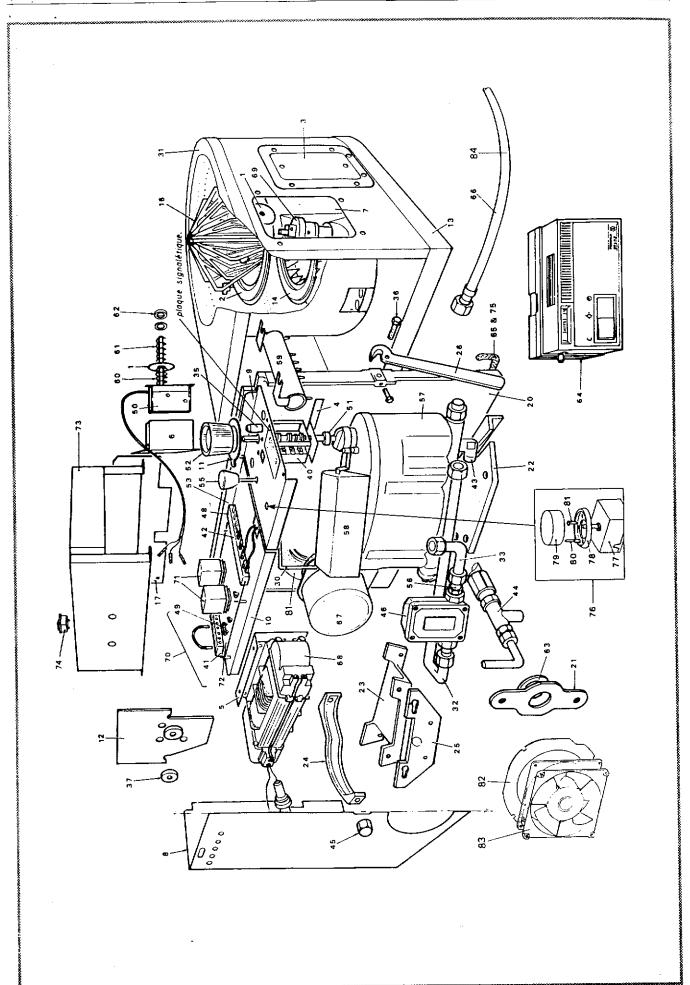

Madel	871.29.01
Model	0 1.47.01

Gretalu	IX NL		Oit- filed central neath	ilg cooker	
•	t				
49	208408	rear heat shield	128		set screw
50.	208808	left inner panel	129		cap nut
51	209305	suppl.right heat shield	130	166003	spring
52	209704	screen			
53	209907	protective	. 4.2	2. Burner ((fig. 24)
54	211900	upper flat			
55	216115	circulation duct	1	234100	Washer
56	218805	backing tray	2	234300	Upper burner ring
57 50	218904	baking dish oven flue baffle	3	236108	Access cover
58 50	222505	side square	4	237200	Selector support
59 60	228000 233008	soot guide	5	239201	Transformer support
61	158603	handle	6	241001	Thermal reverser support
62	249100	inner warming panel	7	262202	Sparking plug support
63	249200	inner warming panel	8	267400	Top casing
64	252585	lower front panel	9	268200	Top casing
65	266602	access cover	10	268401	Instrument panel
66	273206	hinge	11	277603	Index plate
67	273406	hinge	12	277901	Ignition wire support
68	273508	hinge	13	617101	Rear casing
69	274406	hinge support	14	634200	Lower burner ring
70	275301	stiffening plate	16	678102	Catalyser
71	301017	firebox frame	17	261801	Heat shield
72	301822	handle	20	301118	Firebox plate
73	302109	cast iron top	21	301314	De scaling support
74	302227	left top plate	22	316108	Float regulator support
75	302525	right top plate	23	321401	Electrovalve support
176	303409	washer	24	322600	Casing support
77	303714	blanking plate	25	322700	Electrovalve support
78	303819	flue collar	26	430000	Door latch
79	304510	draught door frame	30	461600	Float regulator rod
80	304616	direct draught door	31 32	905301	Burner
81	306304	right screen	32	982538 982539	Float regulator pipe Float regulator pipe
82	308605	firebox right inner plate	35 35		Stop
83	308882	oven top plate	36		Cam pin
84 85	316306	sight hole plate	37	105104	Nut
86	319803 320104	axis disc	40		
87	320603	shutter	41	110759	External connection
88	324902	right support for rail	42		Internal connection
89	325002	left support for rail	43	111201	Knee pipe
90	446201	insulated plate	44	119206	De scaling
91	446202	insulated plate	45	122302	Nut
92	446203	insulated plate	46	122901	Electrovalve
93	446204	insulated plate	49		Salety fuse
94	446208	insulated plate	50		Thermal reverser
95	446213	insulated plate	51		Selector coupling
96	446214	insulated plate	52		Selector Knob
97	451009	stiffening plate	55		Regulator knob
98	607504	rear heat shield	56		Oil-tight nut
99	608500	left insulated plate	57		Float regulator
100	608702	right inner panel	. 58		Thermal relay
101	639001	warming drawer top	59 60		Resistance Sering
102	647519	oven door	61		Spring Spring
103	647614	inner oven door	62		Isolating washer
104 105	653 3 93 660503	upper front panel screen	63		Isolating washer
105	691021	oven	64		Room thermostat
107	858003	scraper	66		Flexible pipe
108	858005	scraper	67		Fan
109	858200	scraper	68		Transformer
110	958600	handle	69		Sparking plug
111	905203	firebrick front plate	70		Complete control circuit
1 12	905204	firebrick rear plate	71	165703	Relay
1 13	905205	firebrick left plate	72	158360	Stripped control circuit
114	919200	baffle flap	73	112707	Protection cover
1 15	911112	water jacket	74		Switch
117	652604	right cover	75		Ceramics rope
118	158540	cover handle	76		Complete thermostat
119	109826	top hinge	77		Thermostat
120	652605	right half cover	78		Trim
121	252801	central cover	79		Thermostat knob
122	652738	left cover	. 80		Stop
123	254701	inner cover	8	671400	Joint
124	254801	inner cover			
125	254520	inner cover			