



Bosky 60/90

If you need help finding your part please call us on 01302 742520

Number	Part Number	Additional Info	Buy Part
1	60001868	Left hand side panel S1/S2 (NEW P/N B70006790)	Buy Part
2	60001869	Right hand side panel (NEW P/N B70006791)	Buy Part
3	60001871	Back panel	Buy Part
3	60001872	Back panel 90/95	Buy Part
4	60001875	Front loading door knob (NEW P/N B60004321)	Buy Part
4a	60002182	Secondary air slide	Buy Part
5	60001876	Front loading door (NEW P/N B70008657)	Buy Part
6	60001877	Front loading door rope 71 cm x 9mm soft (SAME P/N)	Buy Part
7	60001878	Plus/minus plate (NEW P/N B60004284)	Buy Part
8 & 9	60001879	"Boiler thermostat securing nut/screw No10x1/2"" zinc posi self tapper"	Buy Part
10	60001880	Boiler thermostat mechanism S1	Buy Part
10	60001881	Boiler thermostat mechanism S2	Buy Part
11	60001882	Boiler thermostat knob (NEW P/N B60005443)	Buy Part
12	60001883	Boiler thermostat lower arm	Buy Part
16	60001887	Primary air inlet flap sprint	Buy Part
17	60001888	Primary air inlet flap S1/S2	Buy Part
18	60001889	Lifting arm/frame connecting bar	Buy Part
19	60001890	Connecting bar securing pin	Buy Part
20	60001891	Ash door spring	Buy Part
21	-	Boiler cleaning plate washer	Buy Part
22	-	Release lever securing pin	Buy Part
23	60001894	Grate lifting catch	Buy Part
24	60001895	Lever assembly spacer	Buy Part
25	60001896	Lever assembly connecting bar	Buy Part

26	60001896A	2 connecting bar securing pin	Buy Part
27	60001897	Ducksfoot	Buy Part
28	60001898	Ducksfoot pin	Buy Part
29	60001899	Lifting arm/frame connecting bar	Buy Part
29	60001900	Lifting arm/frame connecting bar 90/95	Buy Part
30	60001901	Release lever	Buy Part
31	60001902	Release level knob	Buy Part
33	60001904-A	Boiler thermometer S1 - Round (NEW P/N B60004286)	Buy Part
33	60001904	Boiler thermometer S2 -Square (NEW P/N B60004286)	Buy Part
	-	Vertical panel (boiler models only) S1/S2	Buy Part
34	60001905	Lever housing clip	Buy Part
36	60001907	Over heat flap knob	Buy Part
37	60001908	Over heat flap spring	Buy Part
38	60001909	Oven heat flap spacer	Buy Part
39	60001910	Oven heat flap position locator	Buy Part
40	60001911	Oven heat flap lever	Buy Part
41	60001912	Grate shift lever knob	Buy Part
42	60001913	Grate shift lever (NEW P/N B70009811)	Buy Part
43	60001914	Ash door hinge pin	Buy Part
44	-	Left hand insulation	Buy Part
47	60001918	Ash door knob (NEW BOSKY P/N B60004423)	Buy Part
48	6001919	Booster flap	Buy Part
49	-	Ash door rope (NEW BOSKY P/N B60010335)	Buy Part
50	60001924	Ash door catch and pin	Buy Part
52	60001926	Boiler cleaning plate	Buy Part
54	60001928	Boiler cleaning plate knob/bolt	Buy Part
55	-	Lower oven hinge washer	Buy Part
56	60001930	Lower over door top strip	Buy Part
57	60001931	Lower oven door handle (NEW BOSKY P/N B6009368 GREY)	Buy Part
	-	Lower oven door handle (NEW BOSKY P/N B6004225 BROWN)	Buy Part
58	60001932	Lower oven door main body	Buy Part
59	60001933	Lower over door inner face S1/S2	Buy Part
60	60001934	Lower over door hinge (NEW BOSKY P/N B60004182)	Buy Part
64	60001938	Oven cleaning plate (NEW BOSKY P/N B70004138)	Buy Part
66	-	Right hand insulation	Buy Part
67	60001943	Large glass (NEW BOSKY P/N B60009303)	Buy Part
68	60001944	Oven door panel	Buy Part
69	60001945	Small glass (NEW BOSKY P/N B60010005)	Buy Part
70	60001946	Over thermometer (NEW BOSKY P/N B60009950)	Buy Part
72	60001948	Main oven door hinge catch	Buy Part
74	60001949	Main oven hinge (NEW BOSKY P/N B60010170)	Buy Part
75	60001950	Drip tray	Buy Part
76	60001951	Oven rack single or twin slide	Buy Part
77	60001952	Top rope 60/90	Buy Part
79	60001953	Stainless surround (NEW BOSKY P/N B60004249)	Buy Part
79	60001954	Stainless surround 90/95	Buy Part
78	60001957	Right hand inset plate (NEW BOSKY P/N B70006020)	Buy Part
80	60001958	Oven heat flap (NEW BOSKY P/N B80005359)	Buy Part
80a	60001958A	Oven top deflector (L-shaped)	Buy Part
	-	Low point thermostat (anti-con)	Buy Part
81	60001959	Comb grate (NEW BOSKY P/N B80005360)	Buy Part
83	60001961	Direct draft flap S1/S2	Buy Part
84	-	Direct draft flap pin	Buy Part
85	60001962	Centre plate (state cooker/boiler) (NEW BOSKY P/NB70006039)	Buy Part
86	60001969	Right hand front side grate (NEW BOSKY P/N B80005353)	Buy Part

90	60001974	Blanking plate	Buy Part
91	60001977	Flue spigot (NEW BOSKY P/N B80005348)	Buy Part
95	60001980	Notched side grate (NEW BOSKY P/N B80005352)	Buy Part
96	60001982	Lifting frame	Buy Part
96	60001984	Lifting frame 90/95	Buy Part
97	60002076	Left hand front inset plate (NEW BOSKY P/N 60/65 B60005930)	Buy Part
97	60002078	Left hand front inset plate (NEW BOSKY P/N 90/95 B60005932)	Buy Part
98	60002080	Left hand rear inset plate (NEW BOSKY P/N 60/65 B60005931)	Buy Part
98	60002081	Left hand rear inset plate (NEW BOSKY P/N 90/95 B60005933)	Buy Part
99	60001992	Left hand side grate (NEW BOSKY P/N B80005354)	Buy Part
100	60000001	Grate - offset riddling	Buy Part
100	60000003	Grate - offset riddling 90/95	Buy Part
100	60000002	Grate - centre riddling	Buy Part
100	60000004	Grate - centre riddling 90/95	Buy Part
101	60000005	Cradle - offset riddling (NEW BOSKY P/N B80005358) 60/65	Buy Part
101	60000007	Cradle - offset riddling 90/95	Buy Part
101	60000006	Cradle - centre riddling	Buy Part
101	60000008	Cradle - centre riddling (NEW BOSKY P/N B80005357) 90/95	Buy Part
102	60002003	Lifting tool (NEW BOSKY P/N B70009811)	Buy Part
103	-	Left hand enamel top strip S1/S2	Buy Part
104	B60009366	Left hand door handle S1/S2 60/65 Grey	Buy Part
104	B60009367	Left hand door handle S1/S2 90/95 GREY	Buy Part
104	B60004223	Left hand door handle S1/S2 60/65 Brown	Buy Part
104	B60004224	Left hand door handle S1/S2 90/95 Brown	Buy Part
105	60002009	Door handle bracket - right S1/S2 (NEW BOSKY P/N B60004175)	Buy Part
106	60002010	Left hand door enamel panel S1/S2 (NEW BOSKY P/N B70006778 60/65)	Buy Part
106	60002012	Left hand door enamel panel S1/S2 (NEW BOSKY P/N B70006779 90/95)	Buy Part
108	60002016	Door catch (male)	Buy Part
109	60002019	Left hand door frame 60/65	Buy Part
109	60002020	Left hand door frame 90/95	Buy Part
110	60002008	Door handle bracket - left S1/S2 (NEW BOSKY P/N B60004177)	Buy Part
112	60002026	Door loading catch (NEW BOSKY P/N B70005811)	Buy Part
113	60002028	Front loading door catch circlip	Buy Part
114	60002030	Front loading door hinge pin	Buy Part
117	60002040	Door restraining bracket S1/S2	Buy Part
119	60002042	Cleaning tool (NEW BOSKY P/N B60004208)	Buy Part
120	60002044	Over door lower strip	Buy Part
121	60002045	Ash door S1/S2 (NEW BOSKY P/N 60/65 B70008700)	Buy Part
121	60002047	Ash door S1/S2 (NEW BOSKY P/N 90.95 B70008650)	Buy Part
123	60002054	Door catch (female) (NEW BOSKY P/N B60004231)	Buy Part
124	60002055	Ash pan (NEW BOSKY P/N 60/65 B70004376)	Buy Part
124	60002074	Ash pan (NEW BOSKY P/N 90/95 B70004377)	Buy Part
125	60002084	Lower left hand oven inner panel	Buy Part
126	60002085	Lower right hand oven inner panel	Buy Part
127	60002086	Oven vertical grill	Buy Part
127a	60001984U	Radiation plate	Buy Part
128	60002087R	Electric element (rear) (NEW BOSKY P/N IS THE SAME)	Buy Part
128	60002087B	Electric element (bottom) (NEW BOSKY P/N B60004729)	Buy Part
128A	60002087D	Electric element (wiring)	Buy Part
129	60002088	Electric control panel - only S1/S2	Buy Part
130	60002089	Oven thermostat knob (NEW BOSKY P/N B60004226)	Buy Part
131	60002090	On/off switch (NEW BOSKY P/N B60008121)	Buy Part
132	60002091	Oven thermostat mechanism (NEW BOSKY P/N B60005706)	Buy Part
133	60002092	Oven thermostat limit piece	Buy Part
135	60002094	Insulated cover bracket - left	Buy Part
135A	60002095	Insulated cover bracket screw	Buy Part

136	60002096	Cover hinge pin - left	Buy Part
137	60002096B	Side hinge plate	Buy Part
138	60002102	Cover hinge pin - right	Buy Part
139	60002105	Insulated cover bracket - right	Buy Part
140	60002098A	Left hand insulated cover - pair (NEW BOSKY P/N 60/65 B7004481)	Buy Part
140	60002100A	Left hand insulated cover - pair (NEW BOSKY P/N 90/95 B7004482)	Buy Part
141	60002108	Right hand insulated cover (NEW BOSKY P/N B7004480)	Buy Part
142	60002109	Middle cover knob	Buy Part
143	60002111	Middle cover hinge	Buy Part
144	60002113	Left and right insulated cover handle	Buy Part
146	70006036W	Wiring loom - through the oven 60/90	Buy Part
	70006037W	Wiring loom - through the oven 65/95	Buy Part
	-	Wiring loom - short	Buy Part
	-	Wiring loom - long	Buy Part
147	60002087C	Electric cable ducting	Buy Part
148	60002002	Riddling Handle	Buy Part
200	60000009	"Flue Box 6""	Buy Part
200	60000010	"Flue Box 8""	Buy Part
220	60002180	Ring	Buy Part
221	60002181	Circlip	Buy Part
222	600012954	Complete rope for under hotplate bosky 65/95	Buy Part
	60002121	Cooker Insulated covers 60	Buy Part
	60002122	Cooker Insulated covers 90	Buy Part
	60002123	Boiler insulated covers 65	Buy Part
	60002124	Boiler insulated covers 95	Buy Part
	60002168	Left hand enamel door (NEW P/N B70006778 60/65)	Buy Part
	60002169	Left hand enamel door (NEW P/N 90/95 B70006779)	Buy Part
	60002170	Main oven door	Buy Part
	60002171	Lower oven door (NEW BOSKY P/N B70006780)	Buy Part
	60002172	Front loading door (NEW BOSKY P/N B70008657)	Buy Part
	60002173	Ash pan door (NEW BOSKY P/N B70008700 60/65)	Buy Part
	70008650	Ash pan door (NEW BOSKY P/N B70008650 90/95)	Buy Part
	70009037	Electric control panel - cooker (NEW BOSKY P/N B70009037)	Buy Part
	70009037	Electric control panel - boiler (NEW BOSKY P/N B70009037)	Buy Part
	-	Over heat flap assembly	Buy Part
	183701	Zebracier (per tube)	Buy Part
	-	Cook tops	Buy Part
	-	Summer shields 60/90	Buy Part
	77-01-735	Boiler Connectors B65/95 (1 1/4)	Buy Part
	77-01-752	Reducers (1 1/4 to 28mm)	Buy Part

Harworth Heating Ltd

For Sales and enquires please call: 01302 742520

www.oilstoves.co.uk