



Note: No spares are available on the flue box

**Bosky 65/95**

If you need help finding your part please call us on 01302 742520

Number	Part Number	Additional Info	Buy Part
1	60001868	Left hand side panel S1/S2 (NEW P/N B70006790)	<a href="#">Buy Part</a>
2	60001869	Right hand side panel (NEW P/N B70006791)	<a href="#">Buy Part</a>
3	60001871	Back panel 65	<a href="#">Buy Part</a>
3	60001872	Back panel 95	<a href="#">Buy Part</a>
4	60001875	Front loading door knob (NEW P/N B60004321)	<a href="#">Buy Part</a>
4a	60002182	Secondary air slide	<a href="#">Buy Part</a>
5	60001876	Front loading door (NEW P/N B70008657)	<a href="#">Buy Part</a>
6	60001877	Front loading door rope 71 cm x 9mm soft (SAME P/N)	<a href="#">Buy Part</a>
7	60001878	Plus/minus plate (NEW P/N B60004284)	<a href="#">Buy Part</a>
8 & 9	60001879	"Boiler thermostat securing nut/screw No10x1/2"" zinc posi self tapper"	<a href="#">Buy Part</a>
10	60001880	Boiler thermostat mechanism S1	<a href="#">Buy Part</a>
10	60001881	Boiler thermostat mechanism S2	<a href="#">Buy Part</a>
11	60001882	Boiler thermostat knob (NEW P/N B60005443)	<a href="#">Buy Part</a>
12	60001883	Boiler thermostat lower arm	<a href="#">Buy Part</a>
16	60001887	Primary air inlet flap sprint	<a href="#">Buy Part</a>
17	60001888	Primary air inlet flap S1/S2	<a href="#">Buy Part</a>
18	60001889	Lifting arm/frame connecting bar	<a href="#">Buy Part</a>
19	60001890	Connecting bar securing pin	<a href="#">Buy Part</a>
20	60001891	Ash door spring	<a href="#">Buy Part</a>
21	-	Boiler cleaning plate washer	<a href="#">Buy Part</a>
22	-	Release lever securing pin	<a href="#">Buy Part</a>

23	60001894	Grate lifting catch	<a href="#">Buy Part</a>
24	60001895	Lever assembly spacer	<a href="#">Buy Part</a>
25	60001896	Lever assembly connecting bar	<a href="#">Buy Part</a>
26	60001896A	2 connecting bar securing pin	<a href="#">Buy Part</a>
27	60001897	Ducksfoot	<a href="#">Buy Part</a>
28	60001898	Ducksfoot pin	<a href="#">Buy Part</a>
29	60001899	Lifting arm/frame connecting bar 65	<a href="#">Buy Part</a>
29	60001900	Lifting arm/frame connecting bar 95	<a href="#">Buy Part</a>
30	60001901	Release lever	<a href="#">Buy Part</a>
31	60001902	Release level knob	<a href="#">Buy Part</a>
33	60001904-A	Boiler thermometer S1 - Round (NEW P/N B60004286)	<a href="#">Buy Part</a>
33	60001904	Boiler thermometer S2 -Square (NEW P/N B60004286)	<a href="#">Buy Part</a>
	-	Vertical panel (boiler models only) S1/S2	<a href="#">Buy Part</a>
34	60001905	Lever housing clip	<a href="#">Buy Part</a>
36	60001907	Over heat flap knob	<a href="#">Buy Part</a>
37	60001908	Over heat flap spring	<a href="#">Buy Part</a>
38	60001909	Oven heat flap spacer	<a href="#">Buy Part</a>
39	60001910	Oven heat flap position locator	<a href="#">Buy Part</a>
40	60001911	Oven heat flap lever	<a href="#">Buy Part</a>
41	60001912	Grate shift lever knob	<a href="#">Buy Part</a>
42	60001913	Grate shift lever (NEW P/N B70009811)	<a href="#">Buy Part</a>
43	60001914	Ash door hinge pin	<a href="#">Buy Part</a>
44	-	Left hand insulation	<a href="#">Buy Part</a>
47	60001918	Ash door knob (NEW BOSKY P/N B60004423)	<a href="#">Buy Part</a>
48	6001919	Booster flap	<a href="#">Buy Part</a>
49	-	Ash door rope (NEW BOSKY P/N B60010335)	<a href="#">Buy Part</a>
50	60001924	Ash door catch and pin	<a href="#">Buy Part</a>
52	60001926	Boiler cleaning plate	<a href="#">Buy Part</a>
54	60001928	Boiler cleaning plate knob/bolt	<a href="#">Buy Part</a>
55	-	Lower oven hinge washer	<a href="#">Buy Part</a>
56	60001930	Lower over door top strip	<a href="#">Buy Part</a>
57	60001931	Lower oven door handle (NEW BOSKY P/N B6009368 GREY)	<a href="#">Buy Part</a>
	-	Lower oven door handle (NEW BOSKY P/N B6004225 BROWN)	<a href="#">Buy Part</a>
58	60001932	Lower oven door main body	<a href="#">Buy Part</a>
59	60001933	Lower over door inner face S1/S2	<a href="#">Buy Part</a>
60	60001934	Lower over door hinge (NEW BOSKY P/N B60004182)	<a href="#">Buy Part</a>
64	60001938	Oven cleaning plate (NEW BOSKY P/N B70004138)	<a href="#">Buy Part</a>
66	-	Right hand insulation	<a href="#">Buy Part</a>
67	60001943	Large glass (NEW BOSKY P/N B60009303)	<a href="#">Buy Part</a>
68	60001944	Oven door panel	<a href="#">Buy Part</a>
69	60001945	Small glass (NEW BOSKY P/N B60010005)	<a href="#">Buy Part</a>
70	60001946	Over thermometer (NEW BOSKY P/N B60009950)	<a href="#">Buy Part</a>
72	60001948	Main oven door hinge catch	<a href="#">Buy Part</a>
74	60001949	Main oven hinge (NEW BOSKY P/N B60010170)	<a href="#">Buy Part</a>
75	60001950	Drip tray	<a href="#">Buy Part</a>
76	60001951	Oven rack single or twin slide	<a href="#">Buy Part</a>
77	60001952	Top rope 60/90	<a href="#">Buy Part</a>
79	60001953	Stainless surround 65 (NEW BOSKY P/N B60004249)	<a href="#">Buy Part</a>
79	60001954	Stainless surround 95	<a href="#">Buy Part</a>
78	60001957	Right hand inset plate (NEW BOSKY P/N B70006020)	<a href="#">Buy Part</a>
80	60001958	Oven heat flap (NEW BOSKY P/N B80005359)	<a href="#">Buy Part</a>
80a	60001958A	Oven top deflector (L-shaped)	<a href="#">Buy Part</a>
	-	Low point thermostat (anti-con)	<a href="#">Buy Part</a>
81	60001959	Comb grate (NEW BOSKY P/N B80005360)	<a href="#">Buy Part</a>
83	60001961	Direct draft flap S1/S2	<a href="#">Buy Part</a>

84	-	Direct draft flap pin	<a href="#">Buy Part</a>
85	60001962	Centre plate (state cooker/boiler) ( NEW BOSKY P/NB70006039)	<a href="#">Buy Part</a>
86	60001969	Right hand front side grate (NEW BOSKY P/N B80005353)	<a href="#">Buy Part</a>
90	60001974	Blanking plate	<a href="#">Buy Part</a>
91	60001977	Flue spigot (NEW BOSKY P/N B80005348)	<a href="#">Buy Part</a>
95	60001980	Notched side grate (NEW BOSKY P/N B80005352)	<a href="#">Buy Part</a>
96	60001982	Lifting frame 65	<a href="#">Buy Part</a>
96	60001984	Lifting frame 95	<a href="#">Buy Part</a>
97	60002076	Left hand front inset plate (NEW BOSKY P/N 60/65 B60005930)	<a href="#">Buy Part</a>
97	60002078	Left hand front inset plate (NEW BOSKY P/N 90/95b60005932)	<a href="#">Buy Part</a>
98	60002080	Left hand rear inset plate ( NEW BOSKY P/N 60/65 B60005931)	<a href="#">Buy Part</a>
98	60002081	Left hand rear inset plate ( NEW BOSKY P/N 90/95 B60005933)	<a href="#">Buy Part</a>
99	60001992	Left hand side grate (NEW BOSKY P/N B80005354)	<a href="#">Buy Part</a>
100	60000001	Grate - offset riddling 65	<a href="#">Buy Part</a>
100	60000003	Grate - offset riddling 95	<a href="#">Buy Part</a>
100	60000002	Grate - centre riddling 65	<a href="#">Buy Part</a>
100	60000004	Grate - centre riddling 95	<a href="#">Buy Part</a>
101	60000005	Cradle - offset riddling (NEW BOSKY P/N B80005358) 60/65	<a href="#">Buy Part</a>
101	60000007	Cradle - offset riddling	<a href="#">Buy Part</a>
101	60000006	Cradle - centre riddling	<a href="#">Buy Part</a>
101	60000008	Cradle - centre riddling (NEW BOSKY P/N B80005357) 90/95	<a href="#">Buy Part</a>
102	60002003	Lifting tool (NEW BOSKY P/N B70009811)	<a href="#">Buy Part</a>
103	-	Left hand enamel top strip S1/S2	<a href="#">Buy Part</a>
	-	Left hand door handle S1/S2 (NEW BOSKY P/N B60009366 GREY	<a href="#">Buy Part</a>
	-	60/65.90/95 IS B60009367	<a href="#">Buy Part</a>
	-	Left hand door handle S1/S2 (NEW BOSKY P/N B60004223 BROWN	<a href="#">Buy Part</a>
	-	60/65 90/95 IS B60004224)	<a href="#">Buy Part</a>
104	60002006	Left hand door handle S1/S2 (NEW BOSKY P/N B60009366 60/65 GREY)	<a href="#">Buy Part</a>
104	60002007	Left hand door handle S1/S2 (NEW BOSKY P/N B60009367 90/95 GREY)	<a href="#">Buy Part</a>
104	B60004223	Left hand door handle S1/S2 60/65 BROWN	<a href="#">Buy Part</a>
104	B60004224	Left hand door handle S1/S2 90/95 BROWN	<a href="#">Buy Part</a>
105	60002009	Door handle bracket - right S1/S2 (NEW BOSKY P/N B60004175)	<a href="#">Buy Part</a>
106	60002010	Left hand door enamel panel S1/S2 (NEW BOSKY P/N 60/65 B70006778)	<a href="#">Buy Part</a>
106	60002012	Left hand door enamel panel S1/S2 (NEW BOSKY P/N 90/95 B70006779)	<a href="#">Buy Part</a>
108	60002016	Door catch (male)	<a href="#">Buy Part</a>
109	60002019	Left hand door frame 60/65	<a href="#">Buy Part</a>
109	60002020	Left hand door frame 90/95	<a href="#">Buy Part</a>
110	60002008	Door handle bracket - left S1/S2 (NEW BOSKY P/N B60004177)	<a href="#">Buy Part</a>
112	60002026	Door loading catch (NEW BOSKY P/N B70005811)	<a href="#">Buy Part</a>
113	60002028	Front loading door catch circlip	<a href="#">Buy Part</a>
114	60002030	Front loading door hinge pin	<a href="#">Buy Part</a>
117	60002040	Door restraining bracket S1/S2	<a href="#">Buy Part</a>
119	60002042	Cleaning tool (NEW BOSKY P/N B60004208)	<a href="#">Buy Part</a>
120	60002044	Over door lower strip	<a href="#">Buy Part</a>
121	60002045	Ash door S1/S2 ( NEW BOSKY P/N 60/65 B70008700)	<a href="#">Buy Part</a>
121	60002047	Ash door S1/S2 ( NEW BOSKY P/N 90.95 B70008650)	<a href="#">Buy Part</a>
123	60002054	Door catch (female) (NEW BOSKY P/N B60004231)	<a href="#">Buy Part</a>
124	60002055	Ash pan (NEW BOSKY P/N 60/65 B70004376)	<a href="#">Buy Part</a>
124	60002074	Ash pan (NEW BOSKY P/N 90/95 B70004377)	<a href="#">Buy Part</a>
125	60002084	Lower left hand oven inner panel	<a href="#">Buy Part</a>
126	60002085	Lower right hand oven inner panel	<a href="#">Buy Part</a>
127	60002086	Oven vertical grill	<a href="#">Buy Part</a>
127a	60001984U	Radiation plate	<a href="#">Buy Part</a>
128	60002087R	Electric element (rear) (NEW BOSKY P/N IS THE SAME)	<a href="#">Buy Part</a>
128	60002087B	Electric element (bottom) (NEW BOSKY P/N B60004729)	<a href="#">Buy Part</a>
128A	60002087D	Electric element (wiring)	<a href="#">Buy Part</a>

129	60002088	Electric control panel - only S1/S2	<a href="#">Buy Part</a>
130	60002089	Oven thermostat knob (NEW BOSKY P/N B60004226)	<a href="#">Buy Part</a>
131	60002090	On/off switch (NEW BOSKY P/N B60008121)	<a href="#">Buy Part</a>
132	60002091	Oven thermostat mechanism (NEW BOSKY P/N B60005706)	<a href="#">Buy Part</a>
133	60002092	Oven thermostat limit piece	<a href="#">Buy Part</a>
135	60002094	Insulated cover bracket - left	<a href="#">Buy Part</a>
135A	60002095	Insulated cover bracket screw	<a href="#">Buy Part</a>
136	60002096	Cover hinge pin - left	<a href="#">Buy Part</a>
137	60002096B	Side hinge plate	<a href="#">Buy Part</a>
138	60002102	Cover hinge pin - right	<a href="#">Buy Part</a>
139	60002105	Insulated cover bracket - right	<a href="#">Buy Part</a>
140	60002098A	Left hand insulated cover - pair (NEW BOSKY P/N 60/65 B7004481)	<a href="#">Buy Part</a>
140	60002100A	Left hand insulated cover - pair (NEW BOSKY P/N 9095 B7004482)	<a href="#">Buy Part</a>
141	60002108	Right hand insulated cover (NEW BOSKY P/N B7004480)	<a href="#">Buy Part</a>
142	60002109	Middle cover knob	<a href="#">Buy Part</a>
143	60002111	Middle cover hinge	<a href="#">Buy Part</a>
144	60002113	Left and right insulated cover handle	<a href="#">Buy Part</a>
146	70006036W	Wiring loom - through the oven 60/90	<a href="#">Buy Part</a>
	70006037W	Wiring loom - through the oven 65/95	<a href="#">Buy Part</a>
	-	Wiring loom - short	<a href="#">Buy Part</a>
	-	Wiring loom - long	<a href="#">Buy Part</a>
147	60002087C	Electric cable ducting	<a href="#">Buy Part</a>
148	60002002	Riddling Handle	<a href="#">Buy Part</a>
200	60000009	"Flue Box 6""	<a href="#">Buy Part</a>
200	60000010	"Flue Box 8""	<a href="#">Buy Part</a>
220	60002180	Ring	<a href="#">Buy Part</a>
221	60002181	Circlip	<a href="#">Buy Part</a>
222	600012954	Complete rope for under hotplate bosky 65/95	<a href="#">Buy Part</a>
	60002121	Cooker Insulated covers 60	<a href="#">Buy Part</a>
	60002122	Cooker Insulated covers 90	<a href="#">Buy Part</a>
	60002123	Boiler insulated covers 65	<a href="#">Buy Part</a>
	60002124	Boiler insulated covers 95	<a href="#">Buy Part</a>
	60002168	Left hand enamel door (NEW P/N B70006778 60/65)	<a href="#">Buy Part</a>
	60002169	Left hand enamel door (NEW P/N 90/95 B70006779)	<a href="#">Buy Part</a>
	60002170	Main oven door	<a href="#">Buy Part</a>
	60002171	Lower oven door (NEW BOSKY P/N B70006780)	<a href="#">Buy Part</a>
	60002172	Front loading door (NEW BOSKY P/N B70008657)	<a href="#">Buy Part</a>
	60002173	Ash pan door (NEW BOSKY P/N B70008700 60/65)	<a href="#">Buy Part</a>
	70008650	Ash pan door (NEW BOSKY P/N B70008650 90/95)	<a href="#">Buy Part</a>
	70009037	Electric control panel - cooker (NEW BOSKY P/N B70009037)	<a href="#">Buy Part</a>
	70009037	Electric control panel - boiler (NEW BOSKY P/N B70009037)	<a href="#">Buy Part</a>
	-	Over heat flap assembly	<a href="#">Buy Part</a>
	183701	Zebracier (per tube)	<a href="#">Buy Part</a>
	-	Cook tops	<a href="#">Buy Part</a>
	-	Summer shields 60/90	<a href="#">Buy Part</a>
	77-01-735	Boiler Connectors B65/95 (1 1/4)	<a href="#">Buy Part</a>
	77-01-752	Reducers (1 1/4 to 28mm)	<a href="#">Buy Part</a>

## Harworth Heating Ltd

For Sales and enquires please call: 01302 742520

[www.oilstoves.co.uk](http://www.oilstoves.co.uk)