


METHOD OF CHANGING INNER HINGES ON BOSKY COOKERS MODEL 60/90

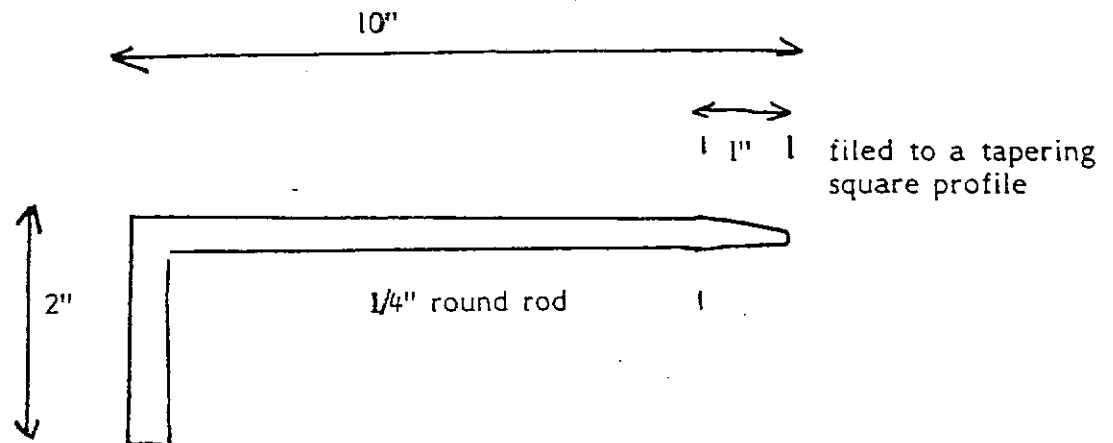

METHOD

1. The existing hinge is dismantled by removing the two Philips screws situated on the front panel, one above and one below the inner hinge.
2. The inner hinge will drop into the cleaning access area situated between the two ovens and can then be removed.
3. Using the special tool the new hinge may be fitted (see diagram).

Push the tapered end of the tool into the hole in the bottom left side of the hinge, using the tool, the hinge may be repositioned into the unit. Should it be difficult to re position the hinge, the covered guard of the hinge maybe pushed back using a long screwdriver to make the access easier.

4. After fitting new hinge ensure that the rollers and other moving parts are well lubricated

