

## Outside Adapter - Installation Instructions

Models: 0003180, 0003185

for use on Defiant and Encore FlexBurn Woodburning Stoves

# VERMONT CASTINGS

**Please read these instructions before proceeding with the installation.**


The Outside Air Adapter channels air for combustion directly from outside the home to the appliance. This can improve the comfort level of the home by reducing the uncontrolled infiltration of outside air and can improve performance in extremely tight homes by increasing the combustion air supply.

**Materials Provided:** Outside Air Adapter

**Tools Required:** 7/16" open end wrench, Phillips screwdriver

### Installation Instructions

1. Remove the two (2) hex head bolts or one (1) hex bolt and (1) pan head Phillips screw from the bottom rear of the stove as indicated. Figure 1.

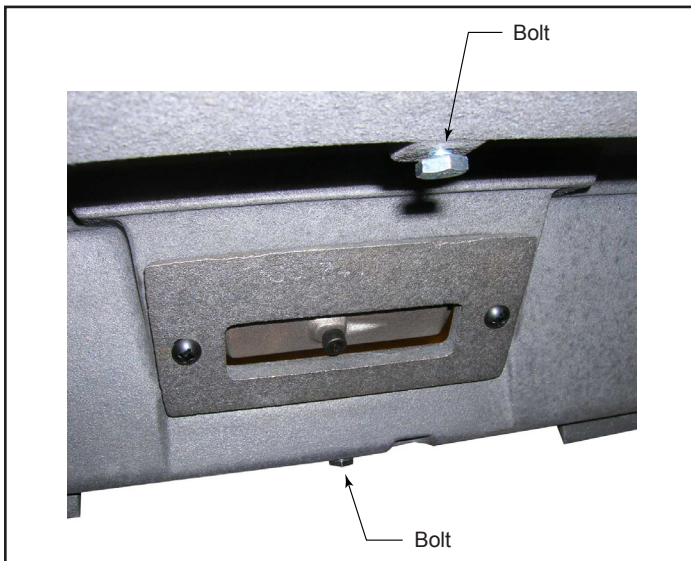


**Figure 1** - Remove Bolts from Bottom of Stove

2. Position the outside air adapter onto stove and reinstall bolts.
3. If the stove is equipped with a bottom heat shield, remove perforated knockout for outside air pipe or hose connection to bottom of stove.



**Figure 2** - Install Air Adapter and Replace Bolts

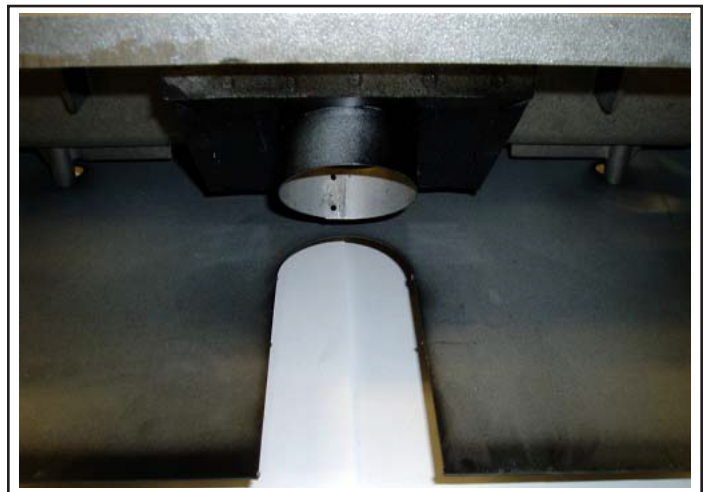

**Figure 3** - Outside Air Adapter Installed with Bottom Heat Shield in Place

# VERMONT CASTINGS

352 Mountain House Road • Halifax, PA 17032  
www.vermontcastings.com