

INSTALLATION INSTRUCTIONS 11-02-22

BUBBLE PJ MAX MARINE

230 VAC Automatic Pressure Jet Diesel and HVO Boiler


Horizontal and Vertical versions

CE - C17873A 08-04-03

Front View Vertical Boiler



Front View Horizontal Boiler

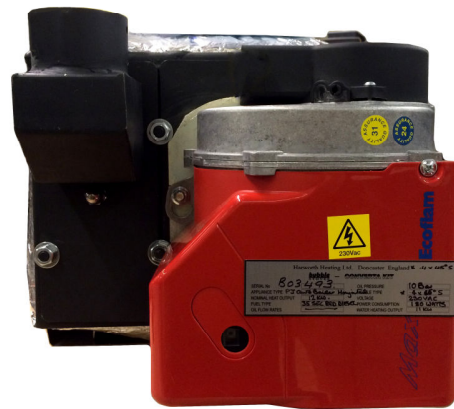

Index

1. Installation.	4
Power Supply.	4
Fuel supply.	4
Filter and KBB Fire valve set up Fig 2.	5
Ventilation.	5
Flueing.	5
Fig 3. Vertical Flue Options for vertical and horizontal boilers.	6
Horizontal Flue Options.	6
Fig 4. Horizontal Flue-Inland Waterways.	7
Fig 5. Horizontal Boiler with Horizontal Flue.	7
Fig 6. Horizontal Flue-Sea Going.	8
Prevention of Sea Water Ingress through the Side Flue Adaptor.	8
Fire Hazards.	8
Clearances From Combustibles for Vertical version.	9
Clearances From Combustibles for Horizontal version.	9
Fastening Down for vertical version.	9
Fitting and Fastening Down for Horizontal version.	9
Fig 6a Base Support Frame	10
Fig 7 General Side View of Horizontal Boiler	11
Plumbing.	11
Hot water.	11
Schematic Grundfoss Twin Pump System.	12
Schematic Y Plan System.	12
Schematic S Plan.	13
Controls.	14
Schematic Wiring Layout for Y Plan.	14
Schematic Wiring Diagram For Vertical Boiler.	15
Schematic Wiring Diagram For Horizontal Burner.	16
Water Pressure Switch	16
Water pressure switch description.	16
Water pressure switch installation.	17
Water Pressure switch Wiring.	17
Boiler Dimensions Vertical Version.	17
Boiler Dimensions Horizontal Version.	17
2. Commissioning.	18
Commission the heating pressure system if fitted.	19
Check the heating system.	19
The effect of TRV's.	19
Check hot water system, expansion vessel and pressure release devices.	19
Checking the Flue Gas Emissions.	19
3. Maintenance.	20
Service the Eco Flam Max Burner.	20
Service the Vertical Boiler.	21
Service the Horizontal Boiler.	21
Clean out the flue system.	21
Checking the oil line.	21
Checking the firevalves.	22
Checking the flue system.	23
Checking the provision of ventilation.	23
4. Fault Finding.	23
Black Smoke is emitted from the flue terminal.	25
Grey smoke is emitted from the flue terminal.	25
Burner goes to lockout after initially firing up for a short period.	25
Burner locks out and will not attempt to Ignite.	26
Burner is completely dead with no lock out light showing.	26
External controls faults.	26
Inverter faults.	26
Flue and exhaust faults.	26
Vertical Boiler parts list.	26
Burner parts list.	28
5. Warranty.	29

1. INSTALLATION.

To allow the best usage of space, the PJ auto boiler can be ordered as either a vertical or horizontal version.

See Fig 2 for vertical configuration

See Fig 2a for horizontal configuration.

For detailed burner information, read this literature in conjunction with the Ecoflam Max 1 burner booklet, LB1390 28-04-2006 which shows spares, wiring and maintenance details.

A single boiler can be configured to produce a maximum output of up to 14.6 kW.

On larger vessels, where higher outputs are required one, two or more boilers can be fitted together on a low loss header manifold system to provide higher outputs.

POWER SUPPLY.

The boiler-boilers can only be connected to a 230 Volt A.C. mains electrical supply or an equivalent pure sine wave inverter, quasi sine wave inverters are not suitable for use with this equipment.

If the voltage falls below 207Volts problems with the Thermowat digital controller used on the burner will ensue. The digital controller is sensitive to low voltage situations.

The boiler-boilers must be connected to the electrical supply via a switch fused isolator with a 3amp fuse fitted.

The live, earth and neutral electrical connections made in the power supply plug are as per normal, UK convention.

The boiler-boilers must be adequately earthed.

Below is a chart showing current draw at various voltages.

Note that when using an inverter to provide full sine 230VAC supply the resultant current draw is illustrated on either a 12 or 24 volt battery bank.

$\text{Amps} = \frac{\text{Watts}}{\text{Volts}}$	240VAC	24DC	12VDC
200w	0.83A	8.33A	16.66A
180w	0.75A	7.50A	15.00A
160w	0.66A	6.66A	13.33A

FUEL SUPPLY.

The burner is supplied pre commissioned for use with red diesel, it can also be supplied set up for use with HVO.

On both versions of the boiler, the burner is supplied set up with the pump configured for a double pipe system with two flexible fuel lines to ISO 7840 which allow the burner to be lifted easily from the boiler for servicing.

Do not attempt to block off either of the pump connections when the pump is configured for two pipe operation.

Installing engineers should fit a Tiger loop Combi Bio de airator (See Our Part No 77-01-857-A.) which offers several advantages thanks to the integrated filter and isolation valve allowing the installation to be carried out with fewer connections, simplifying work and reducing the risk of leakage.

DE AIRATOR



The Tiger loop de aerator should be securely mounted.

(Tiger loop fitting instructions are included in it's packaging.)

A 90 deg C, KBB remote sensing fire valve, should be fitted before the Tiger loop with the KBB sensor 200mm above the boiler, note that the KBB is designed to automatically stop the flow of oil should the sensor be triggered by an overheat situation.


Fuel tanks and fuel lines should be installed to BS EN ISO 10088:2001.

Oil supply lines to the burner can be via 8 or 10 mm copper pipe, thick wall hydraulic grade is recommended.

FILTER AND KBB FIRE VALVE SET UP FIG 2.

Isolation valves should be fitted to either side of the remote sensing fire valve to allow for easy isolation and replacement should the valve fail.

Fig 2 below, illustrates a single feed pipe system into a replaceable cartridge fuel filter/ water trap.

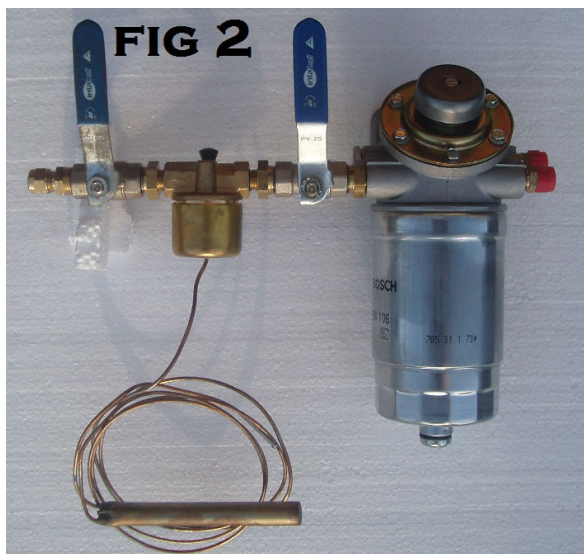

VENTILATION.

In the location where the boiler is fitted, **adequate ventilation** must be provided and this will be calculated at 5cm sq per kW of output.

If the boiler is fitted in to a compartment the compartment must be adequately vented to allow for the provision of both cooling and combustion air via both high and low level vents.

Note: - If the boiler is fitted in an engine room which is subject to an internal negative air pressure then air can be drawn into the engine room through the boiler flue system

causing the boiler to be noisy and unreliable on start up.


A quick check for this situation is to check that air is not being exhausted out of the burner air inlet when the boiler is not under fire, if it is, and then the air inlet to the burner must be ducted from a suitable, unobstructed, external air supply.

FLUEING.

The boiler is fitted with a vertical top flue take off.

The boiler can be flue' d horizontally if required via a 90 degree elbow, flexi stainless steel flue pipe and a through side adaptor.

FIG 3. VERTICAL FLUE OPTIONS FOR VERTICAL AND HORIZONTAL BOILERS.

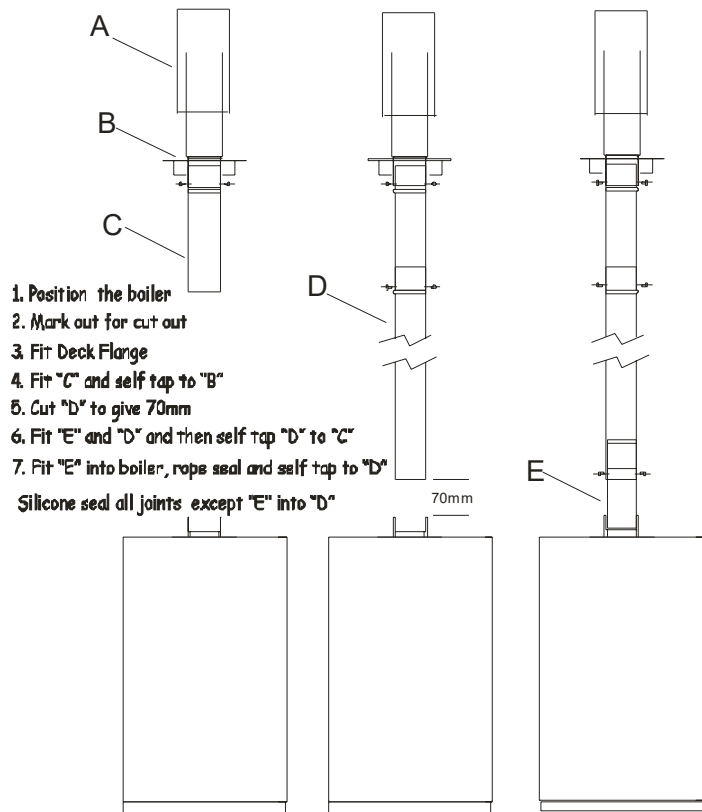

In all cases the horizontal or vertical flue pipe must be fitted so as to allow a vertical movement of 70mm min to facilitate boiler servicing.

On vertical flue applications this means that the lower part of the flue must be so designed so as to slide up into the upper part of the flue.

The upper part of the flue will need to be secured to the through deck adaptor so as to make it self-supporting when the lower part is not fitted to the boiler.

The flue pipe should be mechanically secured into the boiler outlet socket via two, stainless self-tapping screws at 90 deg orientation

To prevent fire hazards, the flue pipe must be fully insulated or wrapped with glass fibre insulation.

HORIZONTAL FLUE OPTIONS.

TAKE CARE WHEN HANDLING THE CUT ENDS OF FLEXI FLUE. IT IS VERY SHARP AND SUITABLE LONG SLEEVE GAUNTLETS MUST ALWAYS BE WORN

On vertical boilers, a 90 deg bend is fitted into the top outlet of the boiler; the bend has flat fibre glass sealing rope attached to form a good seal into the boiler outlet socket.

The bend should be mechanically secured into the boiler outlet socket via two, stainless self-tapping screws at 90 deg orientation. When commissioning the boiler make sure that there are no fumes leaking from the flue outlet joint.

The flexi flue pipe is sealed into the bend using high temperature silicone sealant and at the other end the flexi flue pipe is fitted over the through side fitting and sealed using the black silicone sealant and the clamp band provided with the kit.

Make sure that the flexi flue pipe is always lagged using 75mm x 3mm lagging our pt no 87-06-020

The lagging should be over wrapped using aluminium foil tape pt no TAPE001.

Before applying the lagging put two stripes of HT silicone adhesive, our pt no 77-01-996, down either side of the flexi flue pipe to secure the lagging.

FIG 4. HORIZONTAL FLUE-INLAND WATERWAYS.

ALLOW ENOUGH MOVEMENT FOR FLU TO LIFT CLEAR OF SOCKET FOR SERVICING

STAINLESS SELF TAPPING SCREWS
ON EACH JOINT


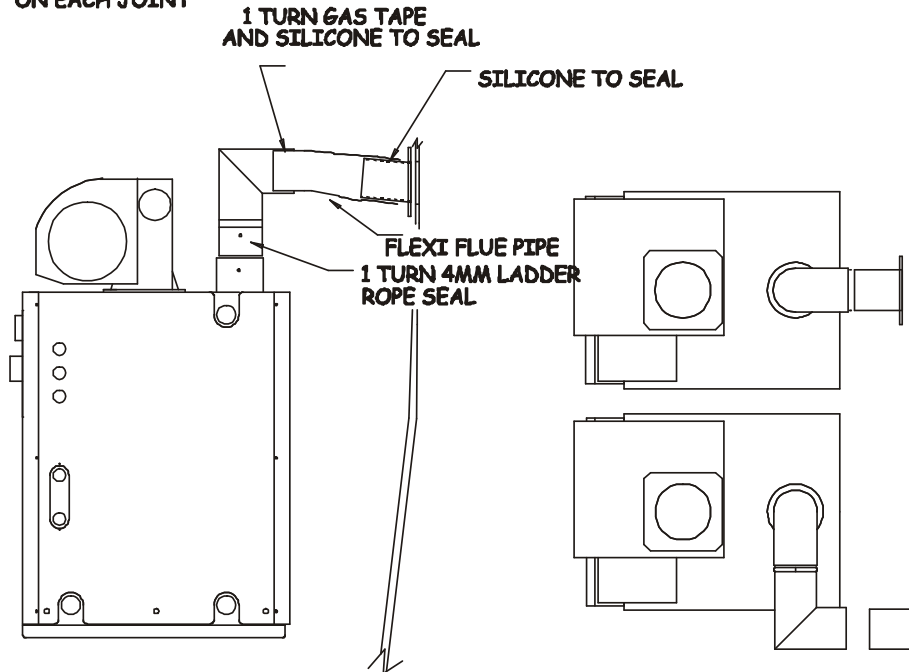



FIG 5. HORIZONTAL BOILER WITH HORIZONTAL FLUE.

Make sure that the boiler and flue pipe
are securely fastened and strapped down

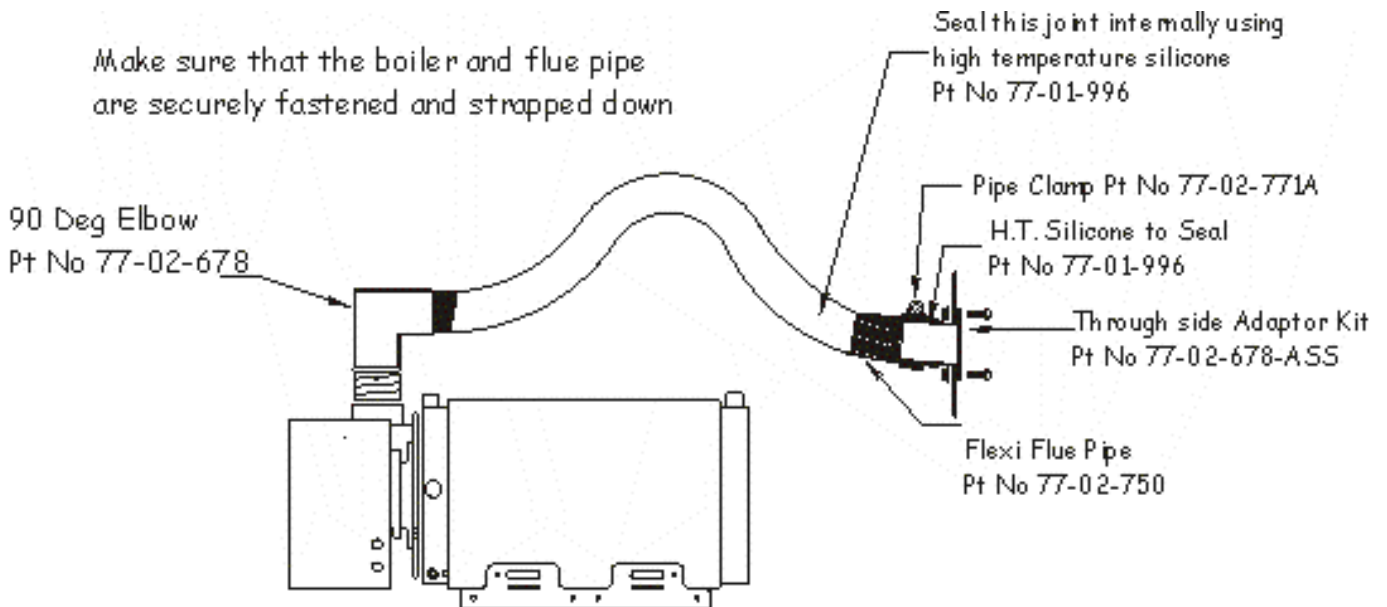

Note that for vertical flues fitted to the horizontal boiler the same set up as the vertical boiler can be used.

FIG 6. HORIZONTAL FLUE-SEA GOING.

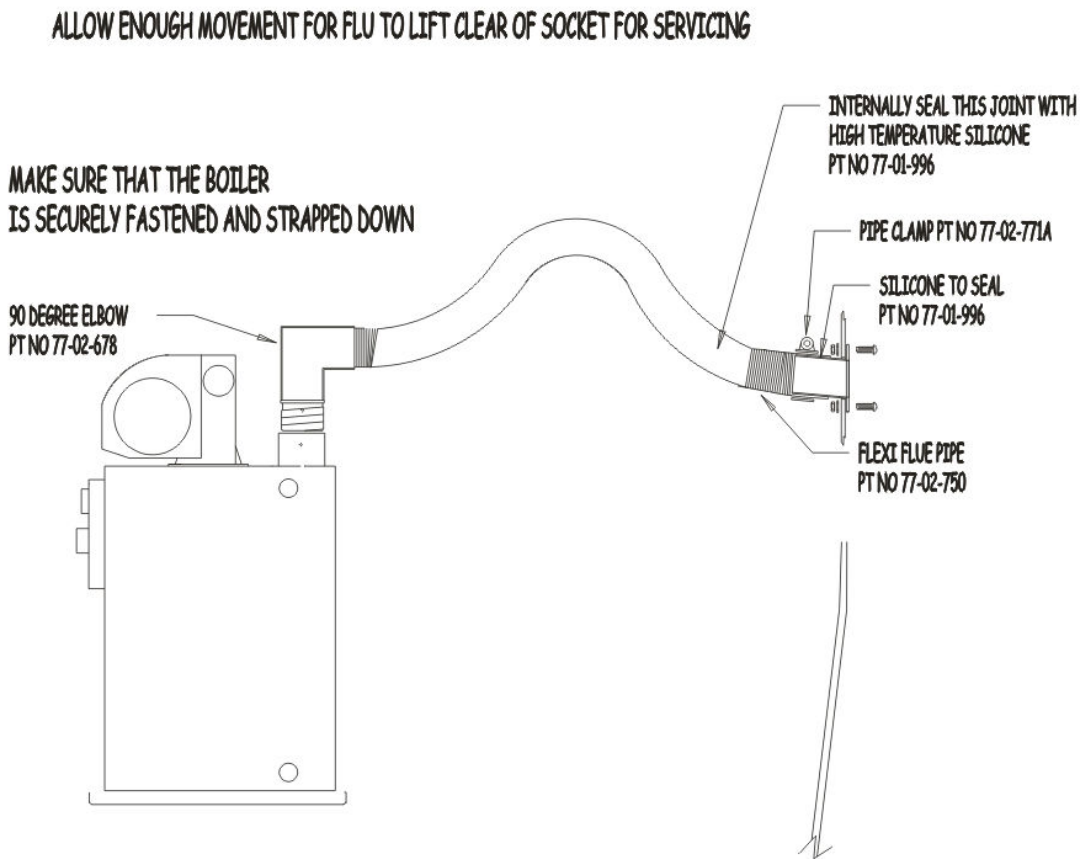

Where vessels are likely to go to sea take adequate precautions to:-

Prevent sea water entering the boiler via the side flue connection.

Make sure that the boiler is securely fastened to the vessel via both vertical and horizontal fixings.

PREVENTION OF SEA WATER INGRESS THROUGH THE SIDE FLUE ADAPTOR.

The through side adaptor is designed with a 10 degree angle to offset the possibility of water entry, in addition to this, sea going vessels must have an adequately designed swans neck to prevent water ingress into the boiler.

The orientation of the 10 degree's is marked via two small cut outs on the outer diameter of the adaptor.

The adaptor is provided with a series of holes through which it can be bolted to the hull side plates and adequately sealed with high temperature silicone seal.

In all cases the horizontal or vertical flue pipe must be fitted so as to allow a movement of 70mm min to facilitate boiler servicing.

FIRE HAZARDS.

To prevent fire hazards, the horizontal or vertical flue pipe must be fully insulated with a fireproof wrap, the temperature of the flue outlet is likely to be around 230 deg C depending upon the duty cycle of the boiler.

Make sure that combustible materials are at the safe distance from the flue pipe as detailed below.

Make sure that a 90 deg remote sensing firevalve is fitted above the top surface of the boiler within a vertical distance of 200mm.

Do not fit the boiler next to or adjacent to a heat producing appliance such as a genset or engine exhaust system.

Make sure that a suitable smoke alarm is fitted above the appliance within a distance of 1 metre from the appliance.

Do not fill the boiler or heating system with antifreeze having any portion of combustible content.

CLEARANCES FROM COMBUSTIBLES FOR VERTICAL VERSION.

Clearance Sides 0mm

When fitting the boiler make sure that the burner oil pump is not fitted tightly up to a wall or panel, the commissioning and service engineers will have to gain easy access to adjust the fuel pump pressure and from time to time replace the flexi fuel feed hoses.

Clearance Base 0mm

Clearance Back 0mm

Clearance Front 0mm

Clearance above 200mm

Clearance from uninsulated flue pipe 200mm.

Clearance from insulated, twin wall flue pipe 25mm. (Maker dependant.)

To prevent fire hazards and danger to service or operator personnel, the horizontal or vertical flue pipe must be fully insulated.

To prevent a blockage of the burner air inlet, do not allow any loose materials such as dusters, wiper cloths, paper towels etc within 200mm of the burner.

CLEARANCES FROM COMBUSTIBLES FOR HORIZONTAL VERSION.

Clearance Base 50mm

Clearance Back 50mm

Clearance Front 200mm

Clearance above 300mm

Clearance from uninsulated flue pipe 150mm.

Clearance from insulated flue pipe 25mm.

FASTENING DOWN FOR VERTICAL VERSION.

The boiler must be securely fastened down; the degree of security depends on the marine category of use.

Category C and D, use the 4 off standard clips provided.

Category B, optional special fixing brackets can be welded to the drip tray.

Category A, additional fixing straps and support frame would be required for both horizontal and vertical security.

FITTING AND FASTENING DOWN FOR HORIZONTAL VERSION.

For safety in transport the horizontal boiler is delivered strapped down to its base frame with the thermostat files fitted to the boiler phial sockets.

Make sure that the boiler is securely fixed so as to avoid any movement should the vessel impact on an obstruction or encounter heavy weather.

To fix the boiler support frame down to a secure base, proceed as follows:-

1. Remove the straps.
2. Remove the thermostat phials from the boiler, note that the thermostat phials are held in place by a small bent wire which is fitted in a cross drilling at the end of the phial holder tube which should be pulled out using a pair of snipe nosed pliers. When the securing wires have been removed gently pull out the sensors to allow the boiler to be lifted free from the base support plate.

(Take great care with the phials and capillaries, do not kink the capillaries.)

3. Lift the boiler up and off the support frame and then fasten the support frame down.

The boiler must be securely fastened down, the degree of security depends on the marine category of use either A, B, C or D.

The horizontal base frame has pre-cut holes provided for fastening it down to a secure base.

When the base frame has been securely fastened down, the boiler is positioned equi spaced on it and then strapped down to it using suitable straps which are fitted through the slots in the base frame.

FIG 6A BASE SUPPORT FRAME


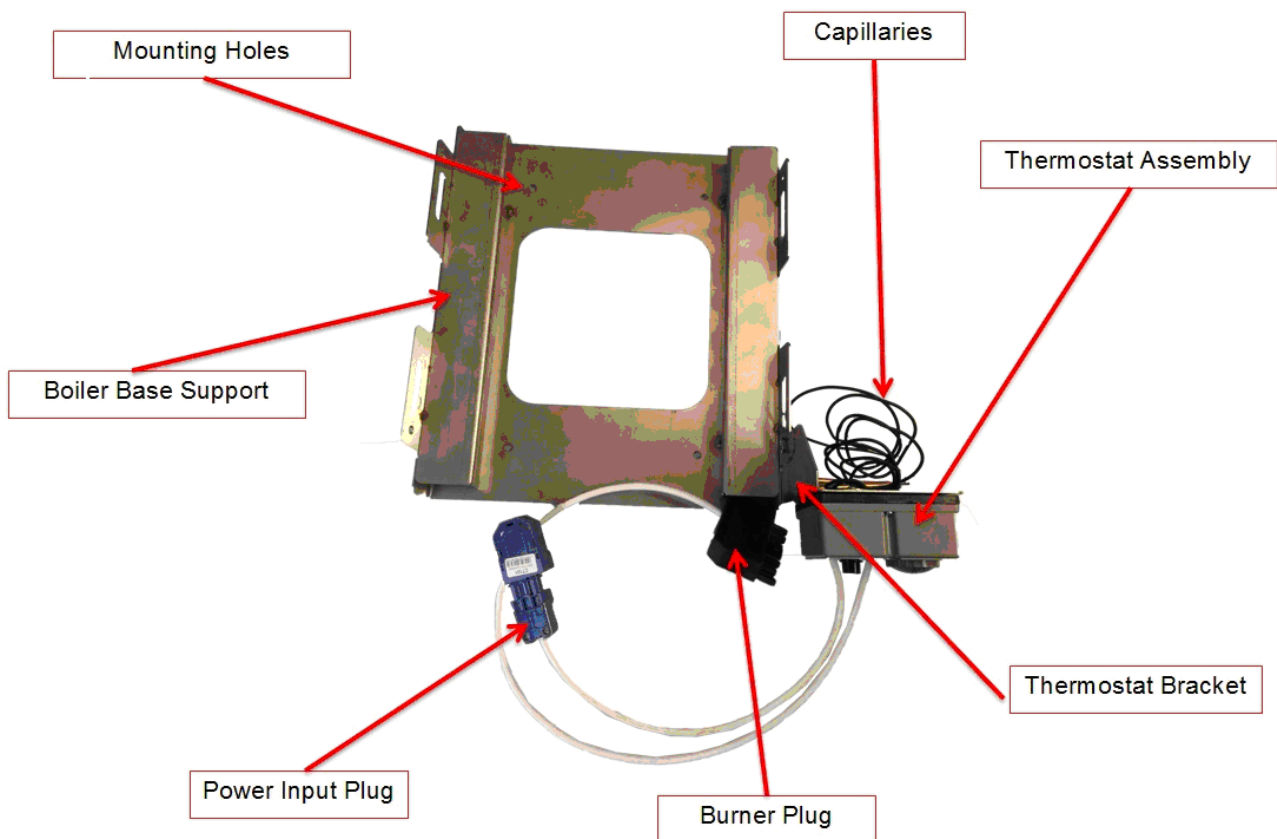


FIG 7 GENERAL SIDE VIEW OF HORIZONTAL BOILER.

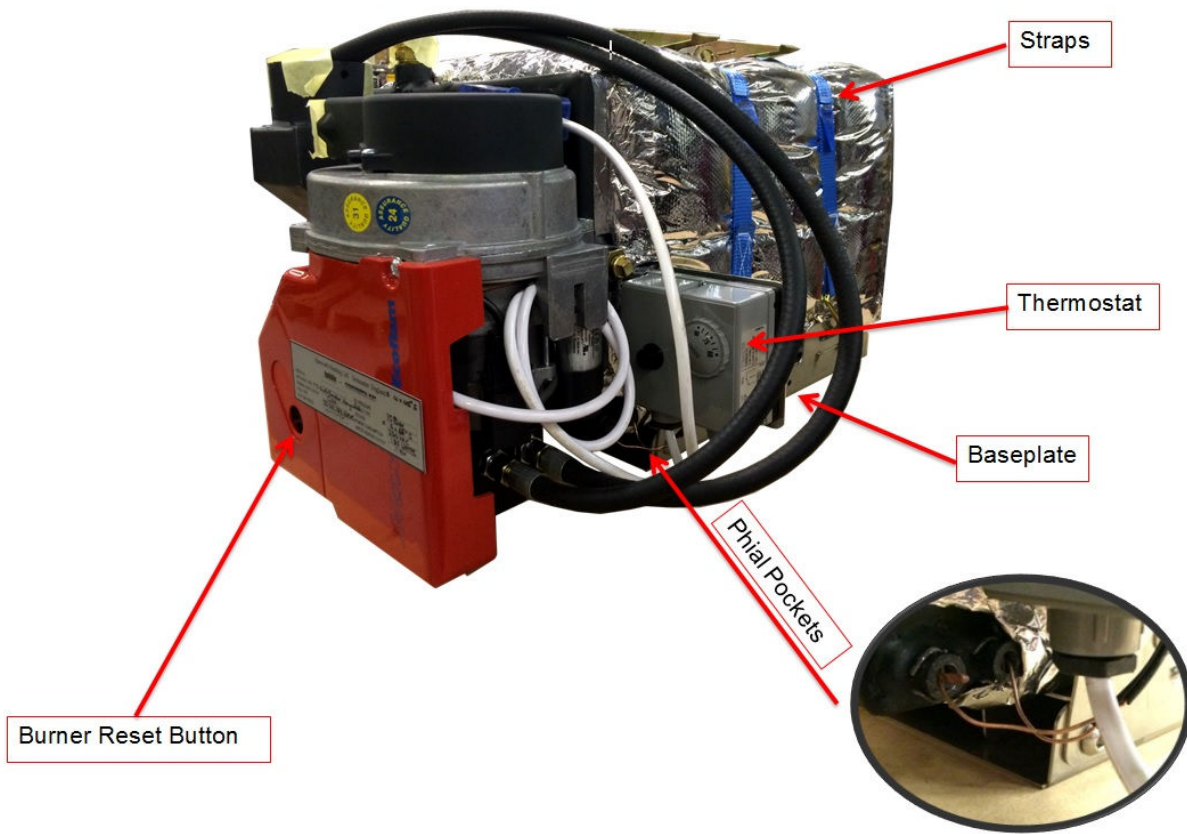

PLUMBING.

Connection to the boiler is made via two $\frac{3}{4}$ " B.S.P.T. male fittings.

It is assumed that the boiler will be installed using conventional pipe layouts and controls.

All pipe work (Primary and Secondary) must be free of air traps, where there is a potential for air traps to occur, automatic air vents must be fitted.

HOT WATER.


Hot water can be supplied by a calorifier.

The size of the calorifier would be determined by the space available and the volume of hot water requirement.


For showering a 60 litre capacity should suffice, for baths a 200 litre capacity would be required

Where unvented systems are used the calorifier must be of a suitable design with a high recovery coil fitted.

SCHEMATIC GRUNDFOSS TWIN PUMP SYSTEM.

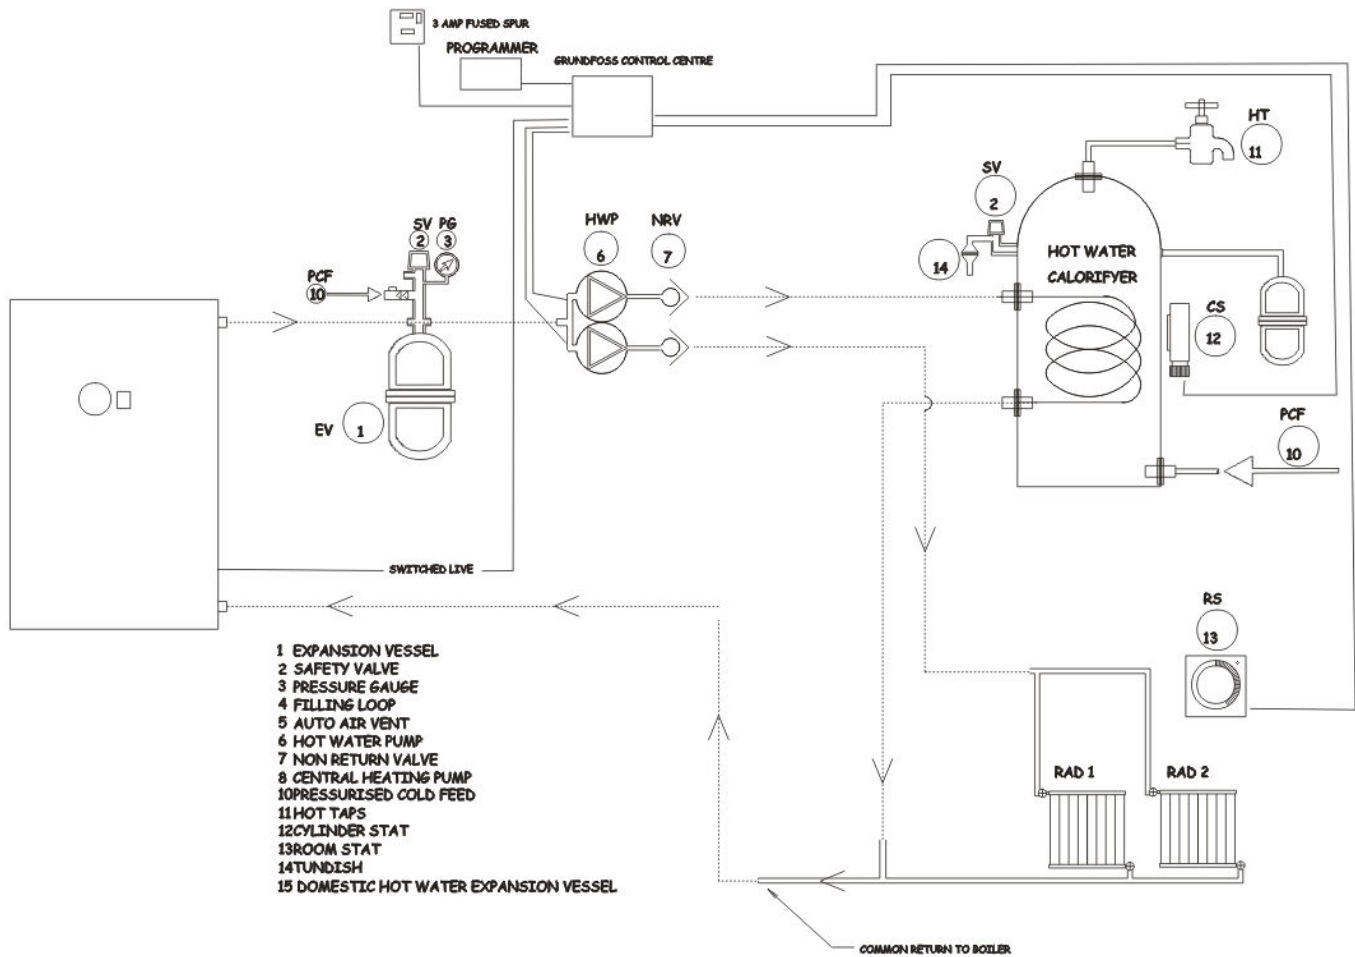


SCHEMATIC Y PLAN SYSTEM.

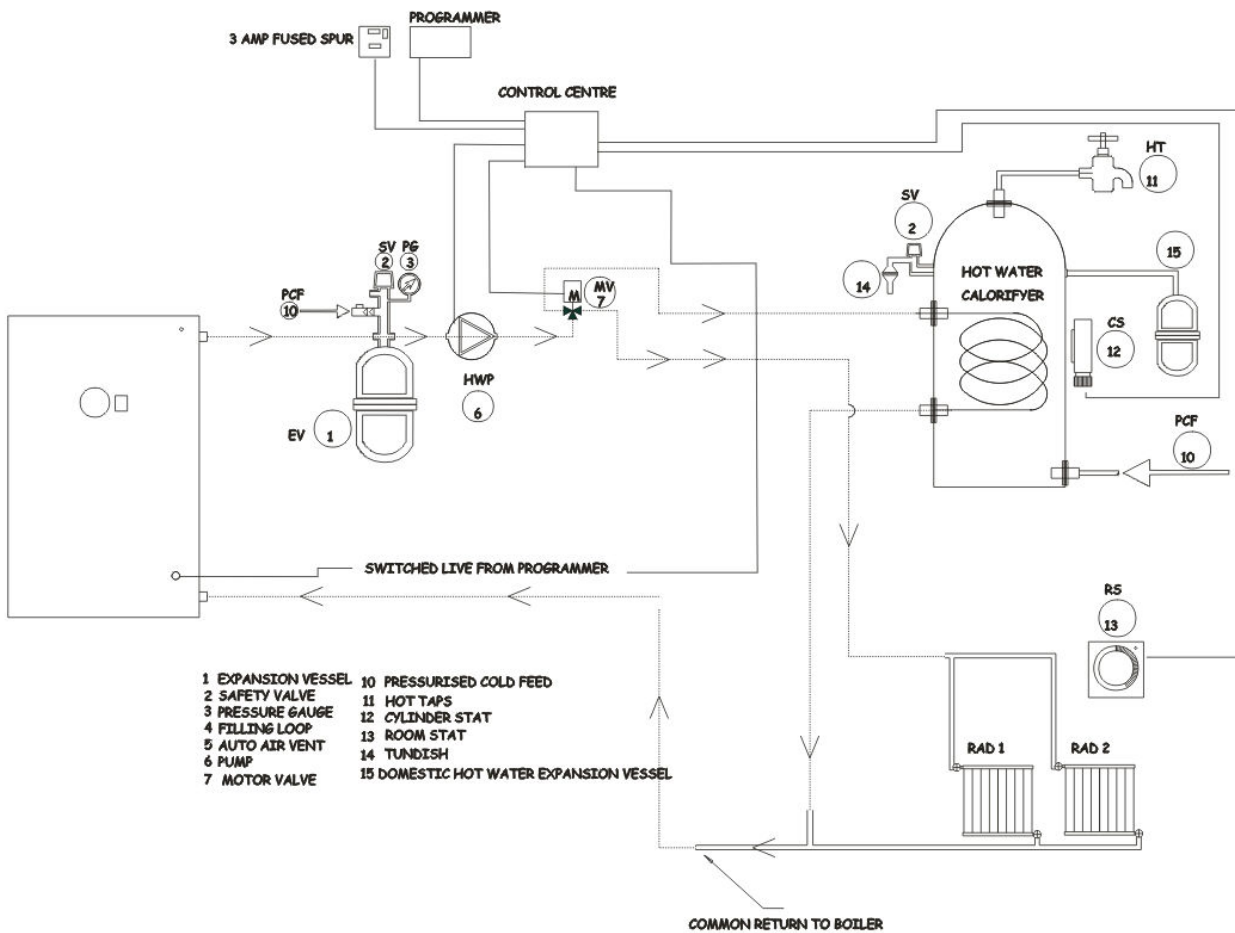

SCHEMATIC S PLAN.

230 V PJ
 PRESSURIZED HYDRAULIC LAYOUT
 S PLAN 10-08-04

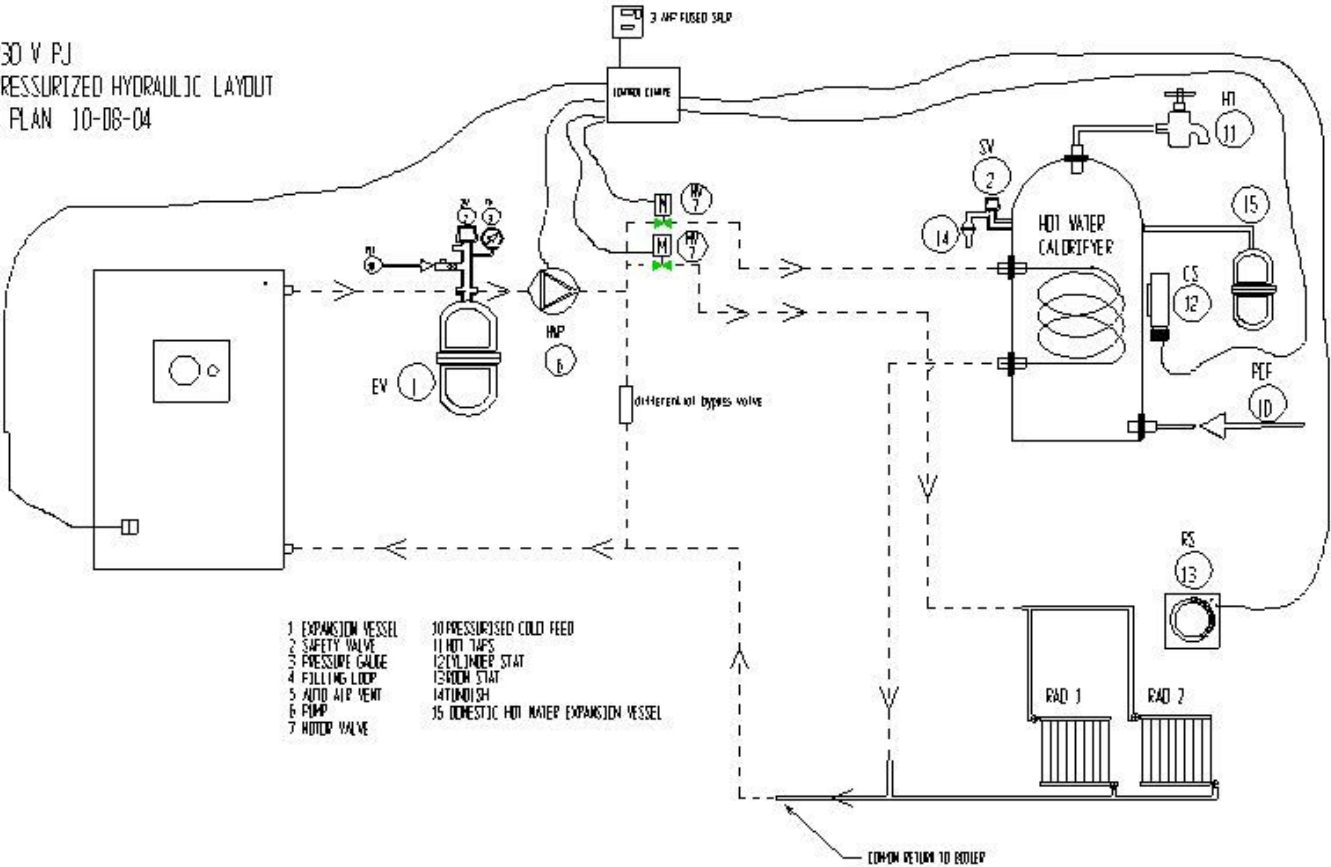

- | | |
|--------------------|--|
| 1 EXPANSION VESSEL | 10 PRESSURISED COLD FEED |
| 2 SAFETY VALVE | 11 HOT TAPS |
| 3 PRESSURE GAUGE | 12 RT ROOM STAT |
| 4 FILLING LOOP | 13 ROOM STAT |
| 5 AUTO AIR VENT | 14 THERMOSH |
| 6 PUMP | 15 DOMESTIC HOT WATER EXPANSION VESSEL |
| 7 MOTOR VALVE | |

CONTROLS.

Typical control is by either Y plan, S plan or Pump plan.

Third party control systems will have detailed wiring instructions provided with the package of components which will usually comprise of -:

TIME CLOCK PROGRAMMER.

EITHER ONE THREE PORT, (Y Plan) OR TWO SINGLE PORT, (S Plan) MOTOR VALVES.

ROOM STAT.


CYLINDER STAT.

WIRING CENTRE.

Make sure that all wiring into the boiler is correct polarity.

Only qualified electricians are allowed to carry out electrical work on 230vac wiring and systems.


SCHEMATIC WIRING LAYOUT FOR Y PLAN.

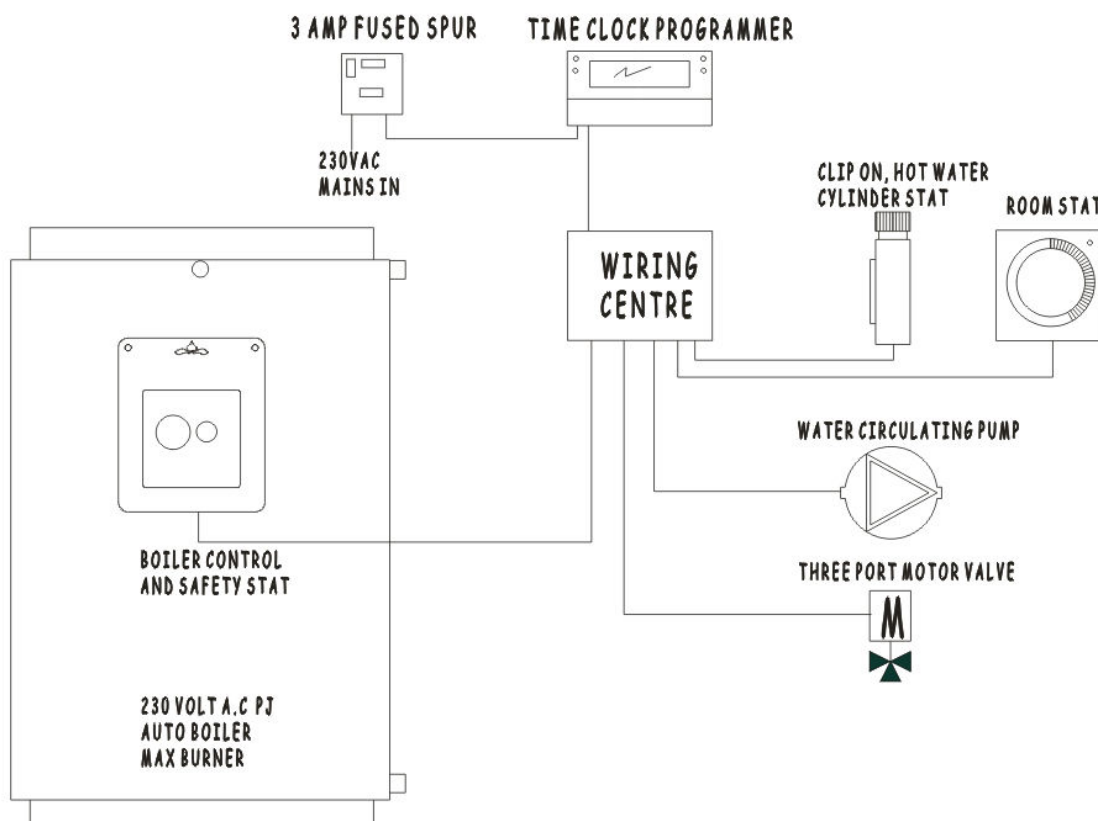

SCHEMATIC WIRING DIAGRAM FOR VERTICAL BOILER.

Thermowatt control, without pressure switch.

thermowatt E-BCU OIL

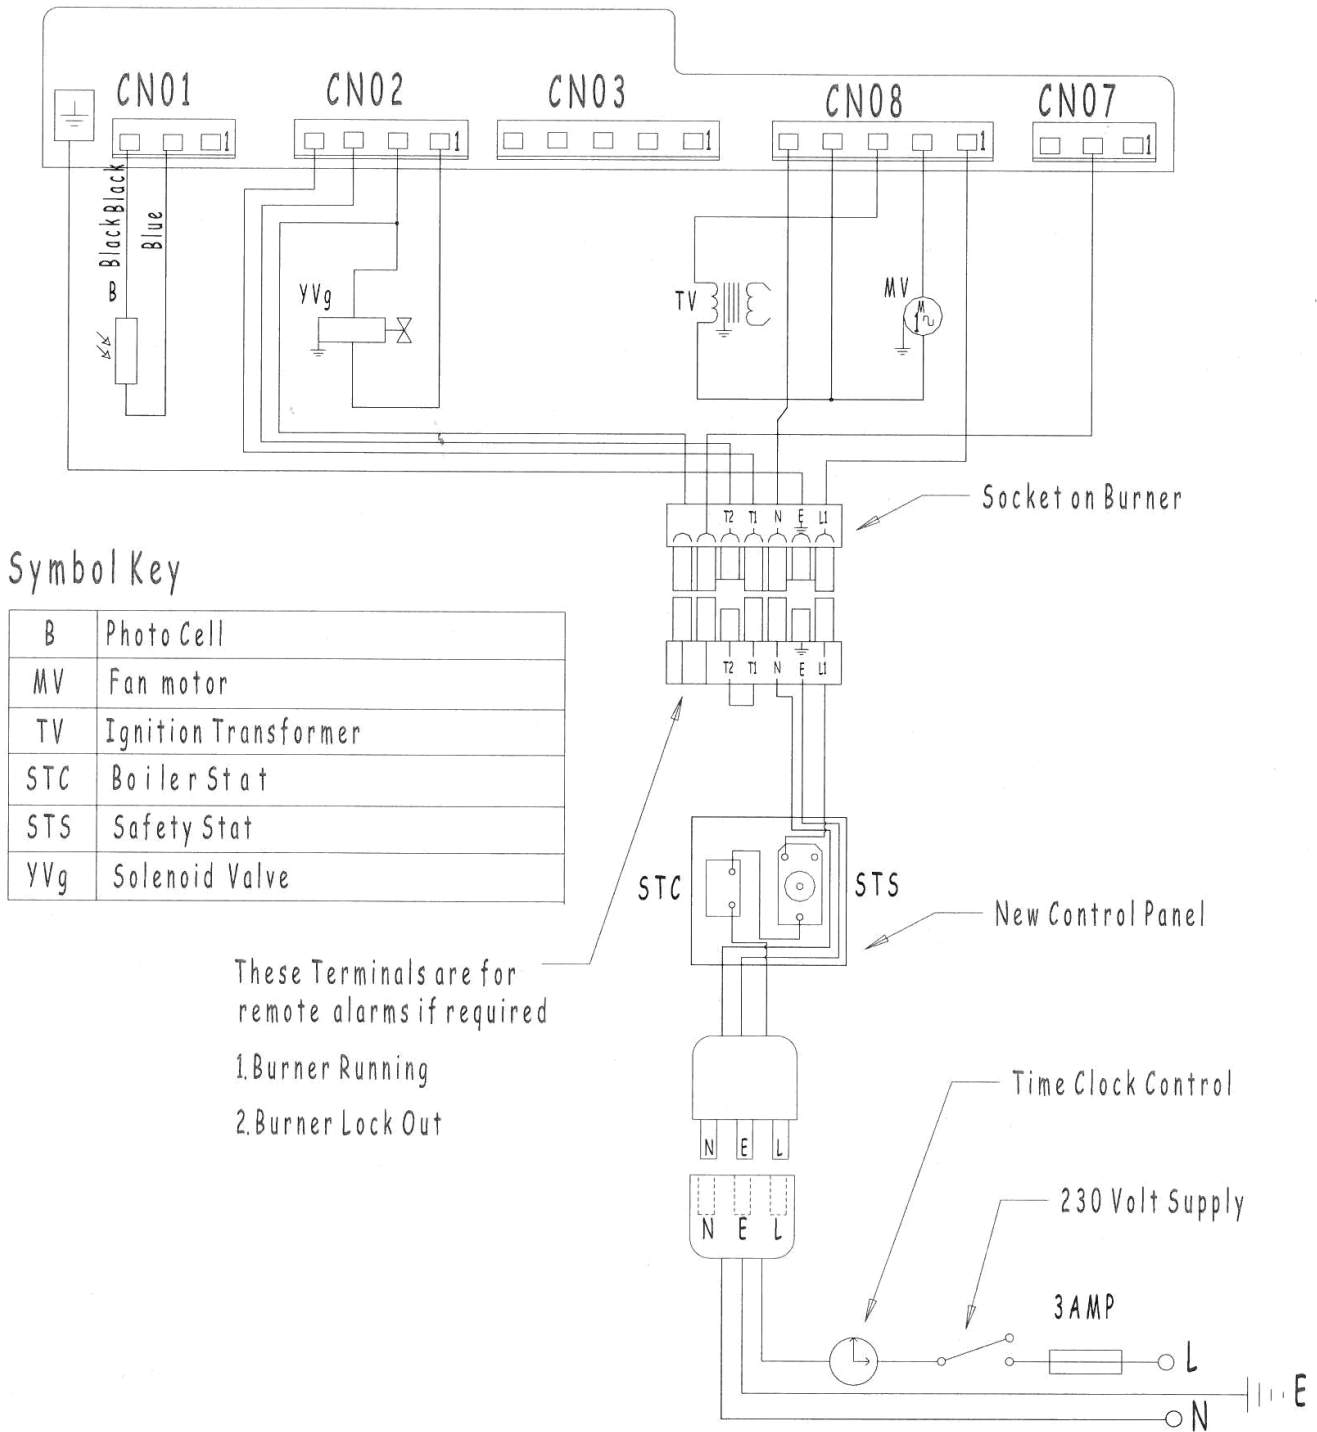

Symbol Key


B	Photo Cell
MV	Fan motor
TV	Ignition Transformer
STC	Boiler Stat
STS	Safety Stat
YVg	Solenoid Valve

These Terminals are for remote alarms if required

1. Burner Running
2. Burner Lock Out

SCHEMATIC WIRING DIAGRAM FOR HORIZONTAL BURNER.

Thermowatt control, with system water pressure switch (added 12-02-22.)

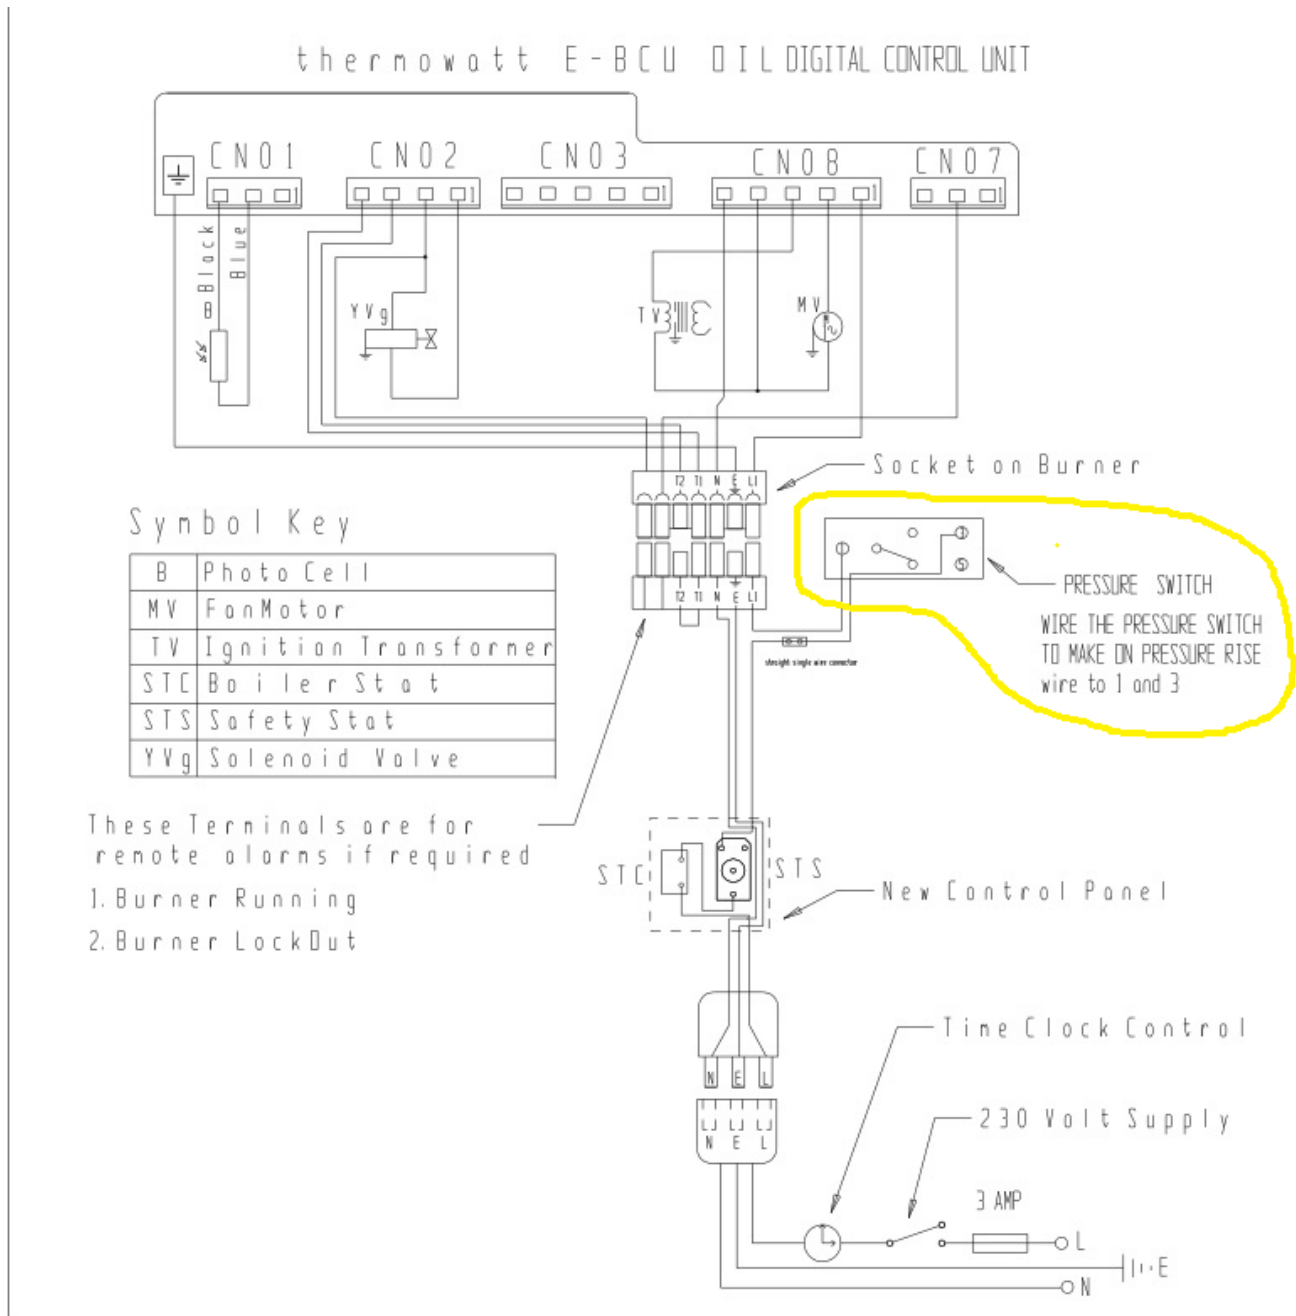

WATER PRESSURE SWITCH

The horizontal version of the PJ auto Boiler has a water pressure switch fitted designed to shut the burner down if the water pressure in the heating system drops below .5 Bar.

WATER PRESSURE SWITCH DESCRIPTION.

The switch is a differential pressure switch manufactured by Bourdon.

Reference no 184-6110.

The model no is UT3

Pressure adjustment settings on the switch are described under the headings of RANGE and DIFFERENTIAL.

WATER PRESSURE SWITCH INSTALLATION.

For connection to the heating system pipework, the switch is provided with a $\frac{1}{4}$ " female BSP socket.

The switch should be connected to the system pressure via suitable leak-proof fittings and pipework as close to the boiler as possible and fixed securely via the fixing bracket supplied in the switch packaging.

A close proximity to the boiler will allow for a shorter run of additional wiring.

The switch should be configured to shut power off should the system pressure fall below .5 bar and so to **achieve this RANGE is set at 1 bar and the DIFFERENTIAL is set at .5 bar.**

Both settings can be adjusted via the Philips head adjusters located in the top metallic surface of the switch housing.

WATER PRESSURE SWITCH WIRING.


Do not work on the switch or any wiring unless the electrical supply is disconnected or correctly isolated.

Do not attempt to wire this switch unless you are suitably qualified to do so.

With the plastic cover removed the switch has three terminals numbered 1, 5 and 3
Use connection numbers 1 and 3 to allow the switch to turn the live feed off should the system pressure fall below .5 bar.

After installation check for correct switching at the designed pressure.

BOILER DIMENSIONS VERTICAL VERSION.

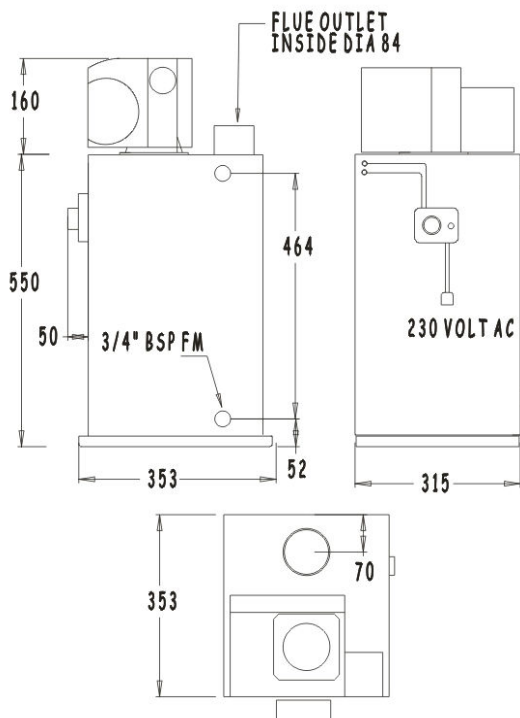


BOILER DIMENSIONS HORIZONTAL VERSION.

1. Note that the thermostat control box can be fitted to the right side, left side or remotely from the burner, please specify when ordering.

2. Note that the thermostat control box can be fitted at a maximum distance of 750mm from the boiler, if this is required then advise our sales team accordingly, when placing an order.

3. Note that there must be enough space in front of the boiler to allow the burner to be withdrawn horizontally from the front of the boiler for servicing the burner and cleaning out the boiler.

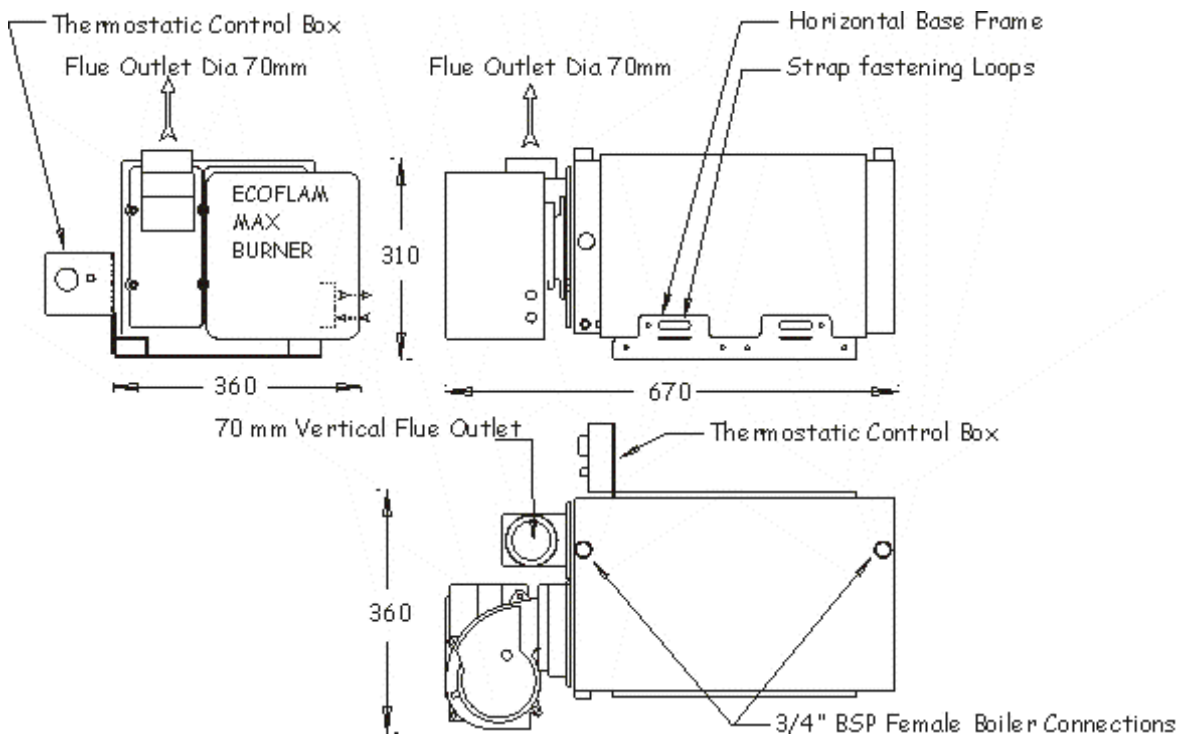

2. COMMISSIONING.

Before attempting to fire the boiler you will need to make sure that:-

- ❑ Air is not blowing out of the burner air intake, if it is this would indicate that the area or space in which the boiler is fitted is under a negative pressure which could stop the burner firing correctly.
- ❑ Using the temporary filling loop, fill the central heating system and vent all air from it; watch the pressure gauge and pressurise the heating circuit up to 1.5 bar.

(It may be necessary to keep topping up until the system until it is vented of all air, when it is, the pressure gauge should hold at 1.5bar.)

- ❑ Make sure that the boiler, the hot water and heating systems are free from air or air locks, air in the boiler could stop the pump from circulating and cause the burner to rapidly shut down.
- ❑ If fitted, make sure that the programmer, room stat, the cylinder stat, and the boiler stat are all set to call.
- ❑ If the boiler is fed with oil via a negative head oil supply, use the ignition process to pull oil from the tank and up to the burner, air can be vented from the fuel pump. It may need several ignition attempts to pull oil through from the fuel tank to the

burner fuel pump. When the oil supply is purged through to the burner, it is sometimes possible to hear the return oil trickling back into the fuel tank.

- ❑ If the burner does not fire it will lock out after the ignition attempt, to reset it, press the red button on the burner control box.
- ❑ Make sure that any flexible oil lines are manufacture to the standard ISO 7840
- ❑ If the boiler stat becomes satisfied it will shut the burner down.
- ❑ It is normal for the boiler to pulse on and off; up to its maximum operating temperature.
- ❑ Check the flue system and make sure that there are no fumes leaking from it, check the flue connection at the boiler and the flue connection to the through deck fitting.

COMMISSION THE HEATING PRESSURE SYSTEM IF FITTED.

Check the action of all pressure release devices.

Using the temporary filling loop, fill the central heating system and vent all air from it.

Watch the pressure gauge and pressurise the heating circuit up to 1.5 bar.

It may be necessary to keep topping up until the system until it is vented of all air, when it is, the pressure gauge should hold at 1.5bar.

Make sure that the temporary filling loop is disconnected.

Check that all off the safety devices are functioning correctly.

CHECK THE HEATING SYSTEM.

Make sure that all the vents are closed off and balance the system to provide equal flow across all the radiators.

THE EFFECT OF TRV'S.

If you intend to fit TRV's to the heating system you will need to fit a 22mm differential by pass valve.

The by pass valve will be fitted in between the output of the circulating pump and the three port or two single port motor valves as shown on he various hydraulic layouts.

CHECK HOT WATER SYSTEM, EXPANSION VESSEL AND PRESSURE RELEASE DEVICES.

To fill the hot water system open all the hot taps and admit water into the cylinder, check all the joints as the cylinder fills up and vent off all trapped air via all the hot outlets.

When the air has vented off, close the hot outlets and allow the system to come up to pressure.

Check all the pressure release devices and repeat the checks when the cylinder is up to temperature

CHECKING THE FLUE GAS EMISSIONS.

Generally the burner air setting needs to be at its lowest setting on the air scale.

Before proceeding with testing the flue gas make sure that: -

You have Dwyer test point plugs and a suitable size of drill.

You have suitable Allen keys.

Your flue gas analyser is in good condition and set for the appropriate fuel.

Drill a suitable hole into the flue approximately 100 mm from the boiler outlet to allow insertion of the flue gas analyser probe.

Fire the burner up and allow the boiler to come up to 60 deg C.

(Whilst the boiler is coming up to temperature keep an eye on the terminal, if there is smoke about increase the air until it goes.)

Nozzle	Danfoss 0.4 U.S. gal x 45° S.
Fuel Pump pressure	10 bar.
Smoke	Zero to one on the Bacharach scale.
Efficiency	86 to 87%.
CO ²	Between 10.5%. to 12.5%
O ²	Between 4% to 6.5%.
CO	Between 45-75 ppm

Note that high CO would generally indicate that the flame is too cold or the nozzle has a minor blockage disturbing the flame pattern.

The head position is in the position set by the manufacturer and would not normally need to be disturbed.

3. MAINTENANCE.

Depending upon the intensity of its use, the boiler should be serviced once or twice per year.

OFTEC registered, oil fired service engineers will be able to service the boiler as per the routine maintenance section. www.oftec.org

Before any service work is carried out make sure that the appliance is fully and safely isolated.

Note that on horizontal boilers there must be enough space in front of the boiler to allow the burner to be withdrawn horizontally from the front of the boiler for servicing the burner and cleaning out the boiler. (Approx 100mm)

Note that on vertical boilers there must be enough space above the boiler to allow the burner to be withdrawn vertically from the top of the boiler for servicing the burner and cleaning out the boiler. (Approx 100mm)

SERVICE THE ECO FLAM MAX BURNER.

Remove the burner from the boiler.

Remove and clean the dust from the internals and externals of the burner.

Clean the air diffuser and flame tube.

Change the nozzle every second year. (Danfoss .4 x45 deg solid)

Examine and if necessary adjust the electrode.

Remove and clean the photocell.

If considered necessary, check the fuel pump pressure.

SERVICE THE VERTICAL BOILER.

Remove the burner from the boiler.

Slip the flue pipe up away from the boiler flue spigot.

The boiler has front and rear removable top plates held in place by 6 x m10 fasteners.

Undo the fasteners and remove the front top plate under which is a ceramic top board 87-01-900-72. and then remove the rear top plate.

When the rear top plate has been removed withdraw the 4 baffles underneath it.

Clean all of the internals of the boiler and vac the debris out making sure that all the internal surfaces of the boiler are clean and soot free.

When this is done, rebuild the boiler in reverse order.

SERVICE THE HORIZONTAL BOILER.

Remove the burner from the boiler.

Slip the flue pipe up away from the boiler flue spigot.

The boiler has front and rear removable front plates held in place by 6 x m10 fasteners.

Undo the fasteners and remove the right hand side access plate under which is a ceramic top board 87-01-900-72.

Then remove the left hand side access plate and withdraw the 4 baffles behind it.

Clean all of the internals of the boiler and vac the debris out making sure that all the internal surfaces of the boiler are clean and soot free.

When this is done, rebuild the boiler in reverse order.

CLEAN OUT THE FLUE SYSTEM.

After cleaning and servicing both the burner and the boiler, make sure that the flue system is clean and free from obstruction.

Using a small 70mm dia flexi brush, clean the flue system out every year.

CHECKING THE OIL LINE.

Flexible oil lines are prone to deteriorate, check them for leaks every year and replace every two years.

Fault finding information on the Tiger loop is provided on line.

www.tigerholm.com

Service - Troubleshooting

Fault diagnosis and repair

In the event of a malfunction, first check that the prerequisites for correct operation are fulfilled:

1. is the system connected to the power supply?
2. is there oil in the tank?
3. are all shut-off valves open?
4. are all control and safety devices, such as the boiler thermostat, low-water detector, limit switch, etc. adjusted correctly?

If the malfunction persists, use the following table.

It is not permitted to repair any components relevant to safety. These


components must be replaced by parts with the same order number.

Only use original spare parts.

NB: after each operation:

- under normal operating conditions (doors closed, hood fitted, etc.), check combustion and check the individual lines for leaks.
- Record the results in the relevant documents.

E-BCU display interface must be used to read the faults by service personnel.

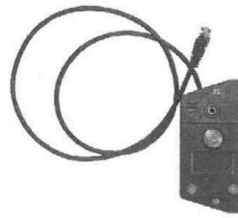

Symbol fault	Fault	Cause	Remedy
	No heat request	Thermostats defective or incorrectly adjusted	Adjust the thermostats, replace if necessary.
	Burner does not start after thermostat shutdown. No malfunction indicated on the automatic combustion control unit.	Drop in supply voltage or power failure. Control unit malfunction	Check the cause of the fall in voltage or the power failure. Replace the control unit.
	Burner starts at switch-on for very short period and then shuts down and the red LED lights up	The control unit has been intentionally locked	Reset control unit.
	Burner starts and then shuts down after pre-ventilation	Flaring during pre-ventilation or pre-ignition	Check ignition sparks/adjust or replace electrode Check/replace fuel-oil solenoid valve
	Burner starts and then shuts down after the solenoid valves have opened	No flame signal at end of safety time	Check the oil level in the tank. Top tank up as required. Open the valves. Check the oil pressure and the operation of the pump, coupling, filter, solenoid valve. Check ignition circuit, electrode adjustment. Clean/replace electrodes. Clean/replace flame monitor.
	Flame extinguishing during operation	Flame goes out during operating phase	Replace the following items as required: Ignition electrodes/ignition cables/ignition transformer/nozzle/pump/solenoid valve/ automatic combustion control unit.

Part no for the diagnostic kit 87-01-900-DK.

CHECKING THE FIREVALVES.

The boiler must be fitted with a 60 deg C, remote sensing fire valve, which should be inspected and tested every year.

The sensor of the valve should be located over the boiler at a distance of 200mm above the burner.

CHECKING THE FLUE SYSTEM.

The flue system needs to be checked to make sure that it is airtight and working correctly.

There are three potential situations:-

1. Positive air pressure where smoke is drawn into the boiler and out through the flue system.
2. Neutral pressure where smoke does not go into or out of the boiler.
3. Negative air pressure where smoke is blown out of the burner air intake.

If the compartment in which the boiler is subject to a negative pressure, air can be drawn into the compartment through the flue system, boiler and burner.

A quick check for this situation is to check that air is not being blown out of the burner air inlet, if it is then the air inlet to the burner must be ducted from a suitable vent.

Use a smoke bomb to carry out this procedure.

CHECKING THE PROVISION OF VENTILATION.

Make sure that the boiler has adequate ventilation for cooling and combustion purposes.

Check on a regular basis and make sure that all purpose made vents are free from obstruction.

In certain cases where negative air pressure is encountered either permanently or intermittently, it may be necessary to duct air into the burner air inlet from an outside source.

Checking the fuel filters and change where necessary.

The fuel filter should be changed every year but this depends upon the cleanliness of the fuel, if the tank is contaminated or infected with diesel bug then appropriate cleaning out measures will be necessary.

If there has been a water or bacterial contamination, clean out the tank and replace all filters.

Dirt in the fuel line will cause nozzles to block or emit a uniform fuel spray pattern.

If there are any air leaks on the fuel supply, this can cause the boiler not to start cleanly.

4. FAULT FINDING.

In the unlikely event of a malfunction check the following:-

If you have a side outlet flue and you have recently been to sea or in rough water conditions and the boiler refuses to fire up, remove the burner from the mounting flange, then remove the top plate and top board.

Look down into the flue ways and make sure that there is no water in the bottom of the boiler.

If the boiler is free from water contamination, check the following.

1. Is 230 volt ac connected to the boiler and live? If power is supplied through a landline, is the supply 230V? Supply voltages can vary substantially in response to the combined applied load of other vessels
2. Is there fuel oil in the supply tank?
3. Are all or any shut off valves open?

4. Has the KBB remote sensing fire valve tripped off?

5. Are all controls such as the time clock and boiler stat set correctly?

To help sort out problems with your burner Ecoflam have produced an optional digital diagnostic device which plugs into the burner control unit and can be used to access stored historical data as detailed under Service - Troubleshooting below.

www.tigerholm.com

Service - Troubleshooting

Fault diagnosis and repair

In the event of a malfunction, first check that the prerequisites for correct operation are fulfilled:

1. is the system connected to the power supply?
2. is there oil in the tank?
3. are all shut-off valves open?
4. are all control and safety devices, such as the boiler thermostat, low-water detector, limit switch, etc. adjusted correctly?

If the malfunction persists, use the following table.

It is not permitted to repair any components relevant to safety. These


components must be replaced by parts with the same order number.

Only use original spare parts.

NB: after each operation:

- under normal operating conditions (doors closed, hood fitted, etc.), check combustion and check the individual lines for leaks.
- Record the results in the relevant documents.

E-BCU display interface must be used to read the faults by service personell.

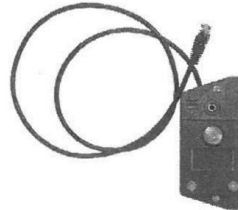

Symbol fault	Fault	Cause	Remedy
	No heat request	Thermostats defective or incorrectly adjusted	Adjust the thermostats, replace if necessary.
	Burner does not start after thermostat shutdown. No malfunction indicated on the automatic combustion control unit.	Drop in supply voltage or power failure. Control unit malfunction	Check the cause of the fall in voltage or the power failure. Replace the control unit.
	Burner starts at switch-on for very short period and then shuts down and the red LED lights up	The control unit has been intentionally locked	Reset control unit.
	Burner starts and then shuts down after pre-ventilation	Flaring during pre-ventilation or pre-ignition	Check ignition sparks/adjust or replace electrode Check/replace fuel-oil solenoid valve
	Burner starts and then shuts down after the solenoid valves have opened	No flame signal at end of safety time	Check the oil level in the tank. Top tank up as required. Open the valves. Check the oil pressure and the operation of the pump, coupling, filter, solenoid valve. Check ignition circuit, electrode adjustment. Clean/replace electrodes. Clean/replace flame monitor.
	Flame extinguishing during operation	Flame goes out during operating phase	Replace the following items as required: Ignition electrodes/ignition cables/ignition transformer/nozzle/pump/solenoid valve/automatic combustion control unit.

BLACK SMOKE IS EMITTED FROM THE FLUE TERMINAL.

This indicates bad combustion generally caused by excess fuel or a lack of air.

Check for an obstruction on the burner air inlet.

Change the nozzle.

Check that the burner fan motor is running at full revolutions.

Check that the internal boiler baffle system is not distorted, damaged or sooty.

Remove the boiler internal baffle system and check that the boiler is not contaminated with excess soot, if it is, brush and scrape both of the boiler flue ways and vac the soot out from the bottom of the boiler, making sure that there is no obstruction in the base of the boiler.

GREY SMOKE IS EMITTED FROM THE FLUE TERMINAL.

This situation is caused where the boiler has failed to ignite and several ignition attempts have been made.

Where the burner has been flooded with excess unburned fuel, when it eventually lights, dense plumes of light grey smoke will issue from the exhaust as the fuel evaporates off.

If this situation is noticed, turn the boiler off, remove the burner and strip out all the baffles, remove all traces of unburned fuel, replace the baffles.

Re ignite the boiler and keep turning it off every two minutes until the grey smoke clears, in bad cases this process can last for up to 1 hour.

BURNER GOES TO LOCKOUT AFTER INITIALLY FIRING UP FOR A SHORT PERIOD.

The boiler is energised via a live 230vac input from a manual or automatic switching.

The Motor runs and the H.F. spark is discharged across the electrodes.

A few seconds later the fuel is released by the solenoid valve, (note that the fuel release is deliberately delayed and must not occur simultaneously with the spark release.)

At this point Ignition occurs.

The Photocell recognizes ignition has occurred.

The Photocell sends signal to the control unit, which turns the H.F. ignition off and then allows the burner to go into run mode.

The burner will run until it reaches the pre-set temperature at which point it will shut down and then modulate in on-off mode until either the auto or manual supply is removed.

If the burner locks out after the flame has been heard to establish this would indicate that the fuel has been released too early and the photo cell and controller have recognised this fault consequently putting the burner into lockout mode.

This situation can be caused by -:

1. A damaged solenoid spindle. (Bent)
2. A faulty solenoid actuator coil.

3. Micro particles of dirt lodged under the solenoid valve causing it not to be able to close, generally known as **let by**. (This situation allows the flame to establish too quickly causing a stray light fault and subsequently locking the burner out.)

BURNER LOCKS OUT AND WILL NOT ATTEMPT TO IGNITE.

Check the mains voltage available. Should be 230vac. Plus or Minus 8%.

BURNER IS COMPLETELY DEAD WITH NO LOCK OUT LIGHT SHOWING.

Check that there is a 230 Volt feed to the appliance.

EXTERNAL CONTROLS FAULTS.

Not covered under this manual.

INVERTER FAULTS.

If a fault develops and the inverter does not output a full sign wave supply, damage will be caused to the Digital Thermowatt burner control box located on the burner.

FLUE AND EXHAUST FAULTS.


The flue should be cleaned and swept every 12 months.

If the boiler is subject to a negative pressure, air can be drawn into the boiler flue system.


A quick check for this situation is to check that air is not being blown out of the burner air inlet, if it is then the air inlet to the burner must be ducted from a suitable vent. Note that if this problem exists either permanently or intermittently it can cause faulty starts and a noisy burner.

VERTICAL BOILER PARTS LIST.


Note that the horizontal boiler has a different flue outlet and a different rear access plate.

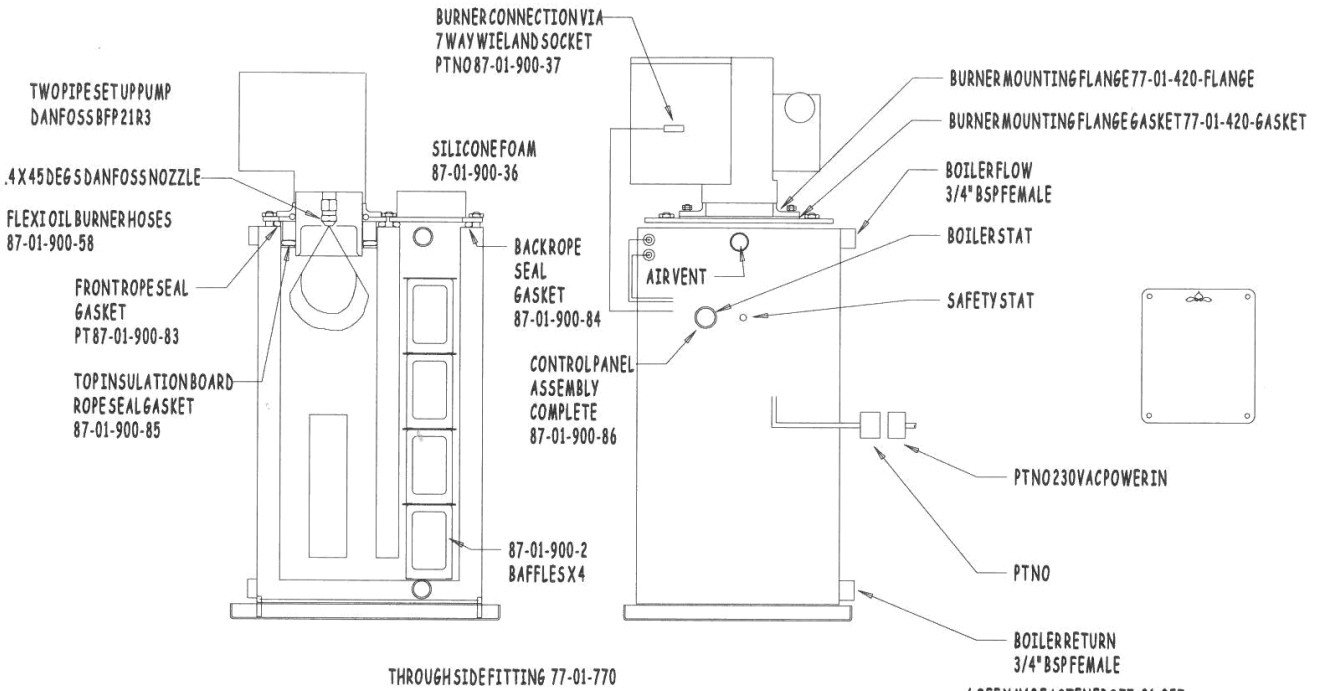

TOP PLATE GASKETS ARE HELD IN PLACE WITH HIGH TEMPERATURE SILICONE PTNO 77-01-996
 BACK TOP PLATE ROPE SEAL GASKET 87-01-900-84
 FRONT TOP PLATE ROPE SEAL GASKET 87-01-900-83
 TOP INSULATION BOARD ROPE SEAL GASKET 87-01-900-85

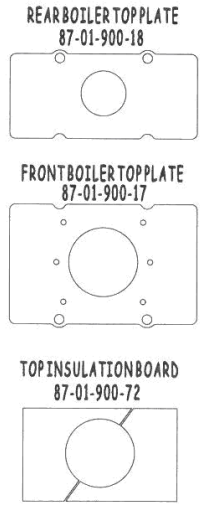


TERTIARY BAFFLE 87-01-900-2 4 PER SET AND SOLD IN SINGLES
 TOP VIEW
 SIDE VIEW

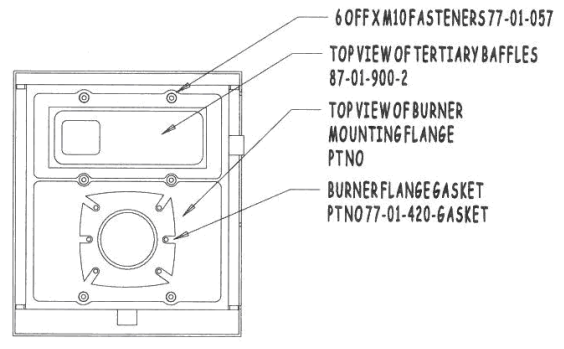

THINSULATE PANEL 450 X 900 77-01-345A HELD IN PLACE WITH ALUMINIUM FOIL ADHESIVE TAPE 50MM WIDE

BURNER PARTS LIST.

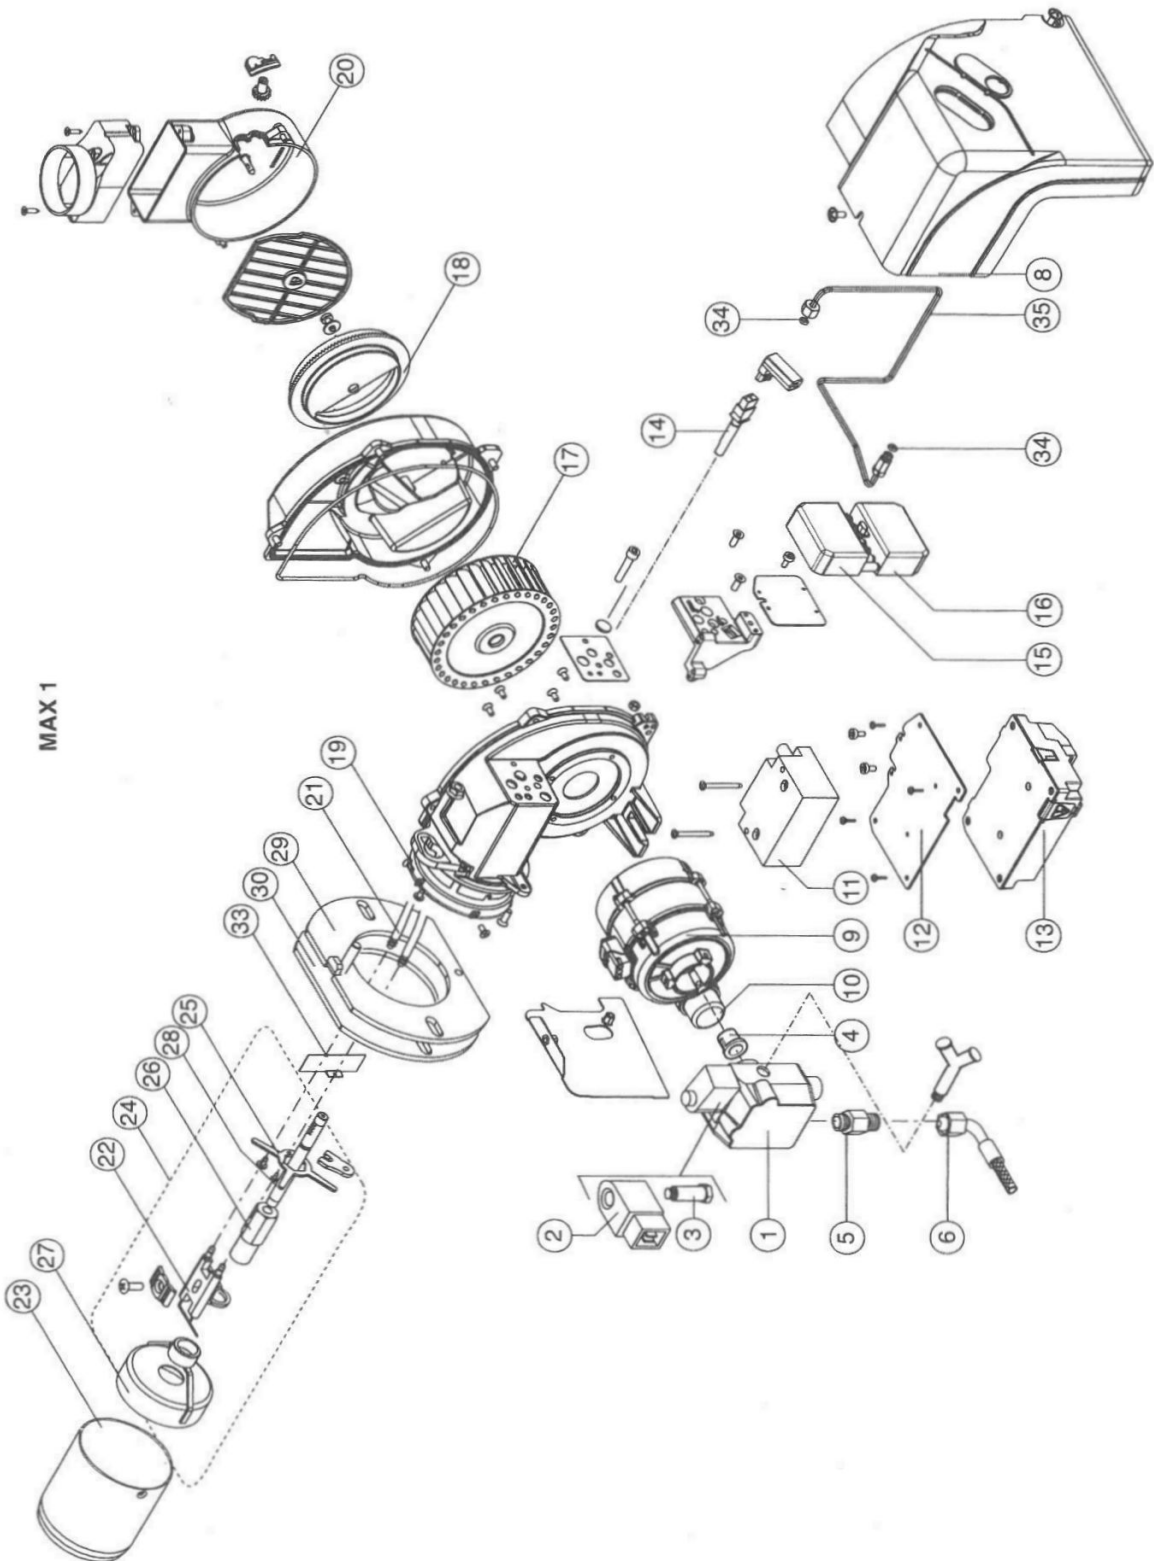

		MAX 1
n°	Description	code
1	OIL PUMP DANFOSS BFP11 R3 071NO143	65322967
2	COIL DANFOSS	65323773
3	OIL VALVE DANFOSS	65323751
4	COUPLING	65322920
5	NIPPLE	65321179
6	HOSES NW 4X700	65323198
7	FILTER	-
8	COVER	65325528
9	MOTOR 75 W AEG	65322868
10	CAPACITOR 3 µF AEG	65321857
	5 µF SIMEL	65325038
11	IGNITION TRANSFORMER	65323257
12	SUPPORT	65325251
13	CONTROL BOX WITH CABLES THERMOWATT E-BCU OIL	65325255
14	PHOTORESISTOR SATRONIC	65320083
15	SOCKET WIELAND	65322070
16	PLUG WIELAND	65322069
17	FAN 120 x 42	65323826
18	AIR DAMPER	65320519
19	ORING	65321066
20	COVER AIR INLET	65320132
21	CABLES TC	65325252
	TL	65325253
22	ELECTRODES	65320924
23	BLAST TUBE TC	65320333
	TL	65320339
24	FIRING HEAD TC	65325400
	TL	65325401
25	NOZZLE HOLDER SUPPORT TC	65320695
	TL	65320699
26	NOZZLE HOLDER TC	65320708
	TL	65320710
27	DIFFUSER	65320760
28	ROD TC	65324056
	TL	65320204
29	FLANGE	65325174
30	GASKET	65321071
31	AIR SELECTOR	-
32	REAR DISC	-
33	FAN SCOOP TC	65320505
	TL	65320506
34	PIPE GASKET	65321065
35	PIPE	65321508

TC = Short Head TL = Long Head
R= Version pre-heater

5. WARRANTY.

Please fill in the warranty form and return it back to the manufacturers for future spares reference purposes.

6. AMENDMENTS.

- 03-05-13 Nozzle angle changed from 60 degree solid to 45 degree solid.
- 31-01-15 Upgraded wiring diagram inserted.
- 05-11-18 Addition information on flue gas analysis added.
- 10-07-19 Current draw chart added, modified S Plan drg added, Quasi sign wave inverter info added.

5. 23-02-21 Notes added regarding antifreeze, distance from combustibles, smoke alarm, vertical distance of KBB remote sensing firevalve, and other heat generators fitted close to the appliance.

6. 11-02-22

Mods to distance from combustibles.

Mods to oil line notes and addition of tiger loop information.

Mods to wiring diagram for Horizontal version of boiler showing new water system pressure switch.

© HARWORTH HEATING LTD 30.6.2013

This publication may not be copied by any means, without written permission from the authors.

These products are subject to continuous development and improvement and it is consequently acknowledged that due to this process there may be some omissions and errors.

This publication is intended only to assist the reader in the use of this product and therefore Harworth Heating Ltd shall not be liable for any loss or damage whatsoever arising from the use of any information, error or omission found in this publication.