


Fitting The Air Inlet Duct

GRILLON WATER JACKET

(Réf. : 921 15 03 - 921 22 03 - 921 29 05)

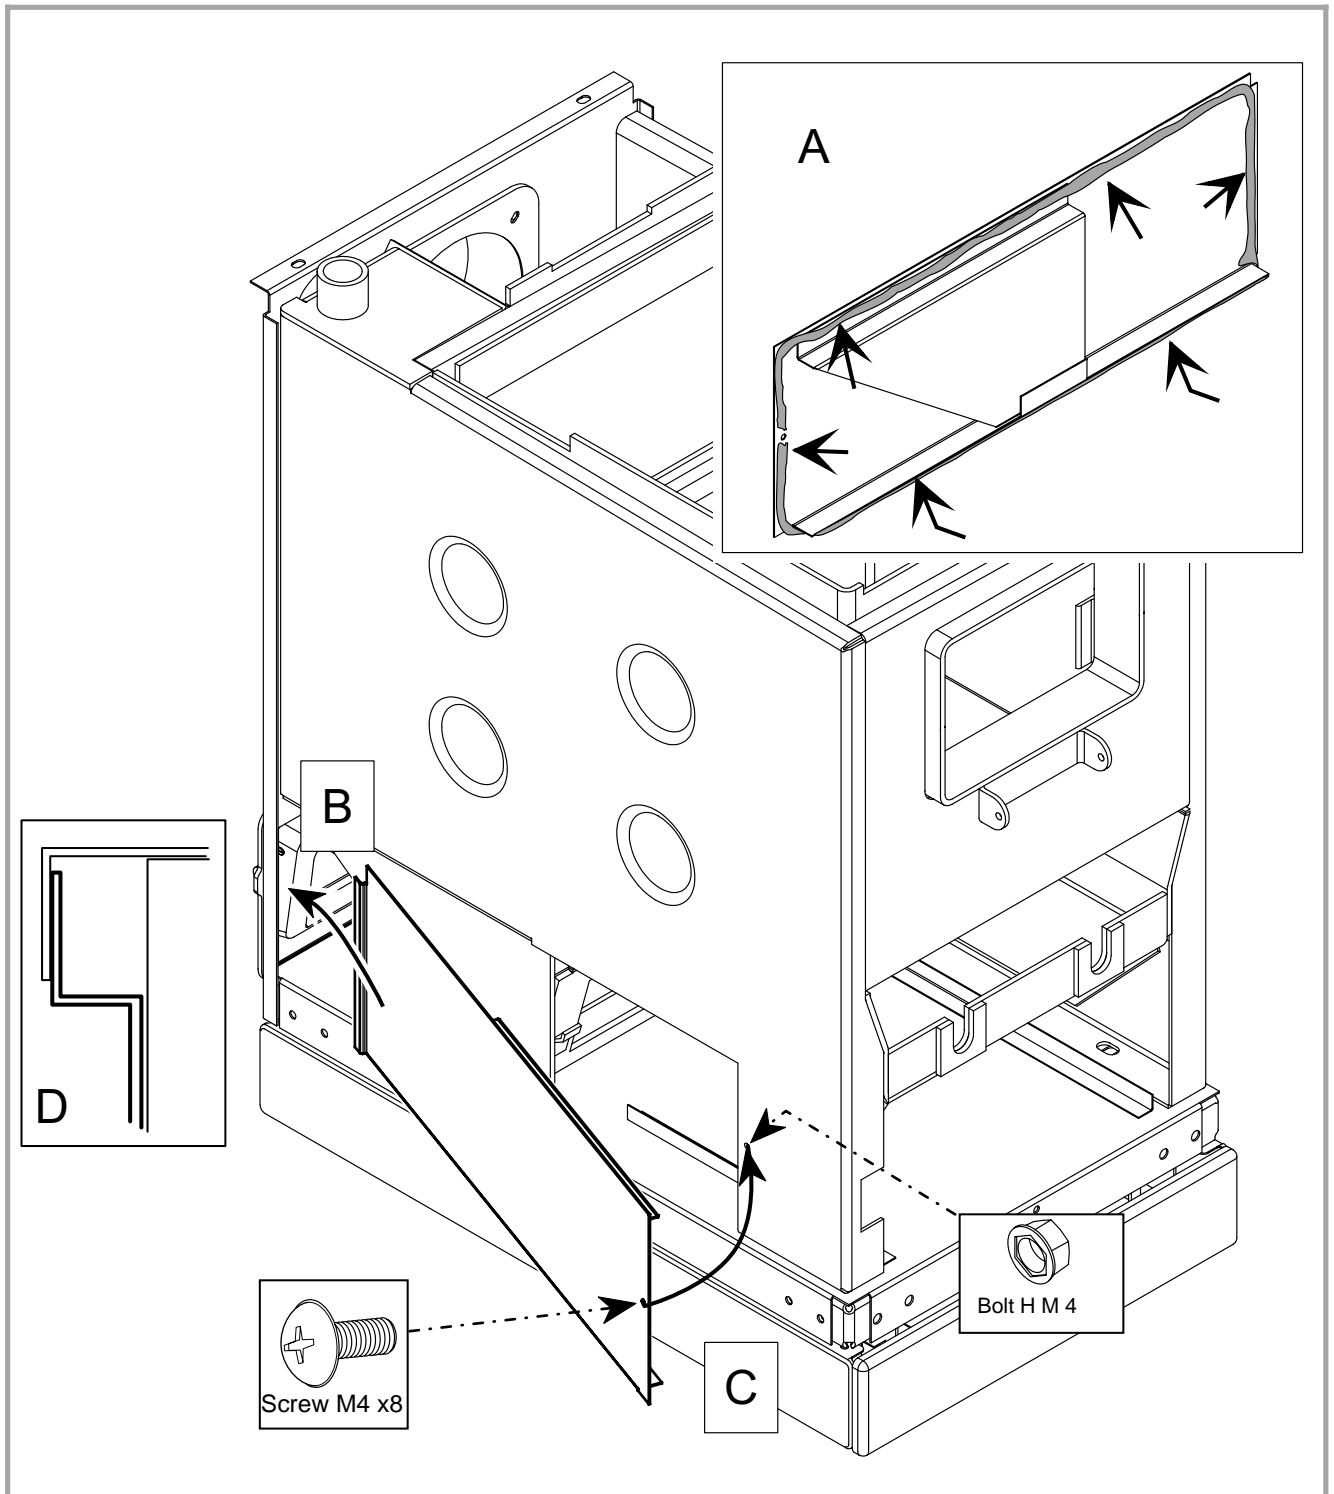

Procedure

- A - Apply fire cement to the surfaces indicated
- B - Fit the bent edge of the air duct inside the rear edge of the rear panel as illustrated
- C - Secure the air duct using the screw supplied (M4 x 8)
- D - Remove all the excess fire cement to leave a smooth finish

Société Industrielle de Chaudières
F 59660 Merville - FRANCE
Téléphone : 03.28.50.21.00
Fax : 03.28.50.21.97
RC Hazebrouck Siren 440555886
Matériel sujet à modifications sans
préavis
Document non contractuel.