




ANDIRONS

Bolt-In Andirons

These andirons fit over the drilled bosses located on the inside front plate of the Defiant® and on the inside of the Ash Fettles of the Vigilant® and Resolute™. The Left and Right Andirons are different to match the curvature of the stove front. These were used on the Defiant® to 03/86, the Vigilant® to 03/86 and the Resolute™ to 12/85.

Description	Part No.
Set of Left & Right Bolt-In Andirons	000-0051
Left Andiron	130-3057
Right Andiron	130-3054
1/4-20 x 3/4" Hex Hd Screws	120-1374
Flat Washers	120-2446

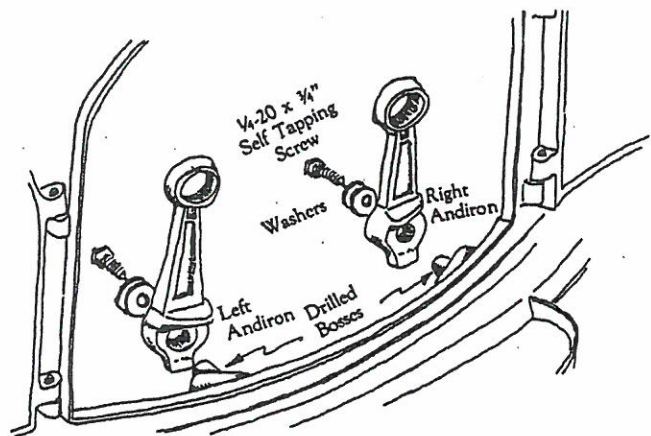

Drop-In Andirons

These andirons install by placing the slot at the bottom of the andiron over the boss on the back of the air distribution fettle and seat firmly in place. The two andirons are the same. These were used on the Vigilant® after 03/86 and the Resolute™ after 12/85.

Description	Part No.
Set of Left & Right Drop-In Andirons	000-0052
Single Drop-In Andiron	130-3051

