

Down draught.	<input checked="" type="checkbox"/>	- Install an anti-down draught cowl. Consult your Dealer.
Room is in decompression.		- In houses equipped with CMV, an outside air intake must be installed for the chimney.
<i>Low heat output.</i>	Incorrect Fuels.	- Use the recommended fuel.

4. Spare parts

For any order of spare parts, please indicate : model nr, code of the colour, description of the part, code number and colour index of the part.

Example : Insert 634 10 44, top plate 352148 ED. **A** = 634 10 44 **B** = 634 10 45

Qty = quantity per appliance

N°	Code	Description	Type	A	B	Qty
1	101043	Axle		A	B	01
2	109128	Wiring system		A		01
3	134107	Glove		A	B	01
4	134702	Pin	5x32	A	B	02
5	134711	Pin	6x30	A	B	01
6	134749	Pin	4x20	A	B	01
7	134758	Pin	4 x16	A	B	04
11	166035	Spring		A	B	01
12	174201	Clamp		A		01
13	179042	Thermostat		A		01
14	181622	Ceramic rope	Ø 8	A	B	2,60 m
15	181625	Ceramic rope	Ø 7	A	B	2,23 m
16	988529	Turbine		A		01
17	988530	Turbine		A		01
18	188810	Ceramic glass	550x345x4	A	B	01
19	913300	Base		A	B	01
21	217131	Shell		A	B	01
22	217202	Shell top		A	B	01
23	222557	Flue baffle		A	B	01
24	224045	Ash-pan		A	B	01
25	249315	Slide plate		A	B	01
26	271008	Bracket		A	B	04
28	300989	EF Handle		A	B	01
29	301166	EF Ash pan door		A	B	01
30	301828	EF Handle		A	B	01
31	303809	ED Flue collar		A	B	01
32	306275	ED Back wall		A	B	01
33	306802	ED Flue collar	Ø 125	A	B	02
34	309229	ED Grate		A	B	01
35	359817	EF Front plate		A	B	01
36	310211	ED Side panel		A	B	02
37	314111	EF Hinge		A	B	01
38	319736	ED Grate support		A	B	01
39	320613	ED Sliding door		A	B	01
40	328229	ED Fuel retainer		A	B	01
41	330020	ED Hearth plate		A	B	01
42	331101	EF Main door		A	B	01
43	352148	ED Top plate		A	B	01
44	900948	EF Knob		A	B	01
45	988853	Complete door		A	B	01
46	900956	Complete sliding door		A	B	01
47	988531	Fan		A		01
48	324112	EF Grate		A	B	01
49	324011	EF Grate		A	B	01

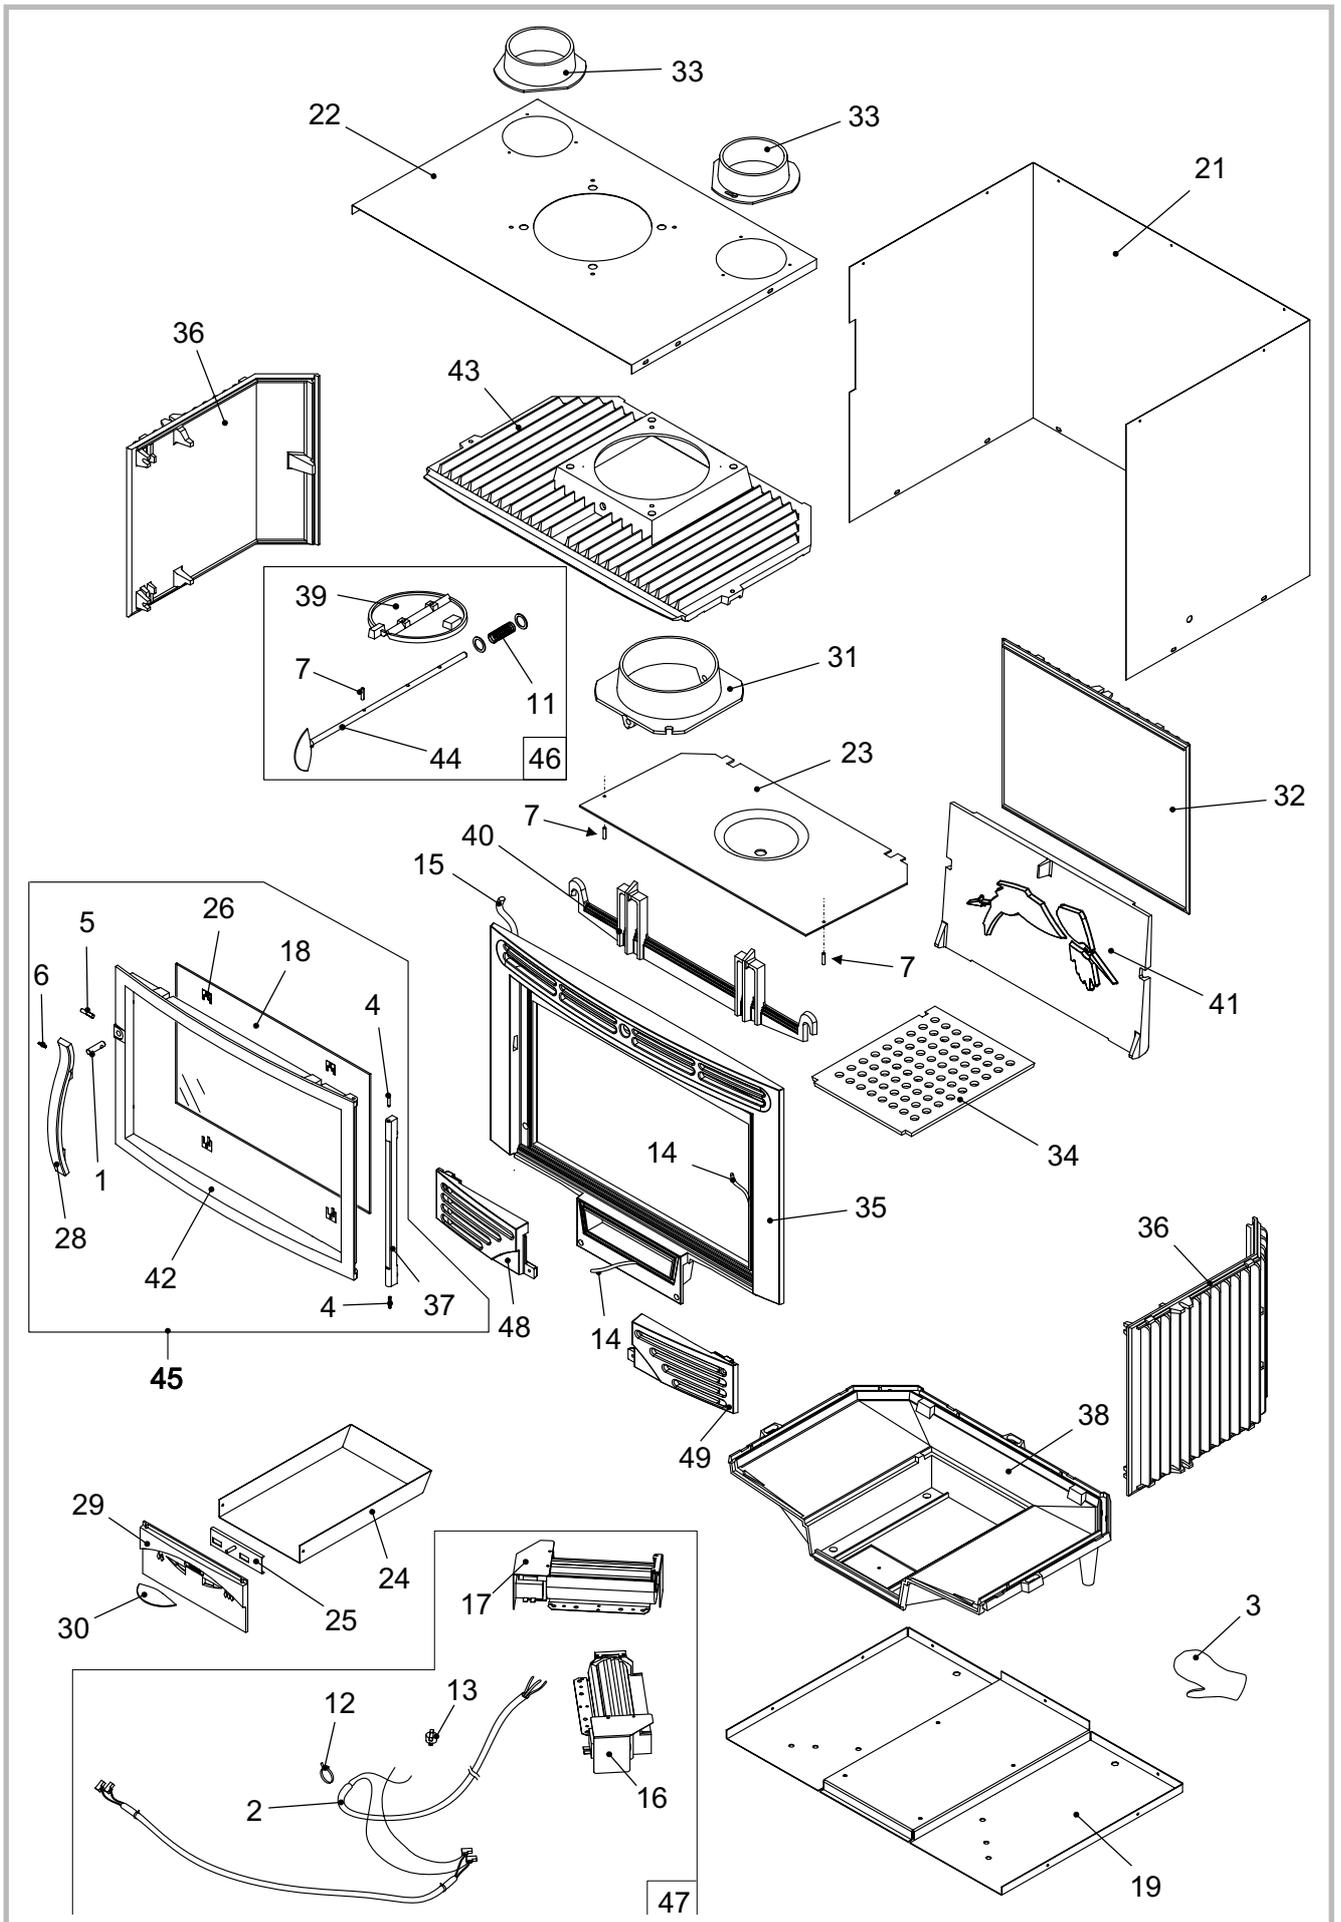


Figure 16 - Stove - exploded view