

# CHARNWOOD MULTIFUEL INSTRUCTION SUPPLEMENT

If your Housing Authority permits it, then, in addition to the smokeless fuels listed in the main instruction booklet, the following fuels may also be used:

Housecoal (doubles, trebles or cobbles), Dry well seasoned wood, Dry Peat

The operation of the appliance is slightly different when using the above fuels than when using smokeless fuels, so please read this supplement carefully to enable you to make the most of your fire.

## BURNING HOUSECOAL

**Fuel Types:** Doubles or Trebles - Not Singles or coal dust

**Grate Position:** Solid fuel

**Throat Plate:** On LA45iB and LA50iB position the throat plate on the lower set of lugs at the front of the appliance.

**Secondary Air Control:** Keep open at all times.

**Throat Plate Cleaning:** Clean daily.

**Refuelling:** It is important not to smother the flames. Load the fire in two stages waiting for flames to appear above the firebed before the next stage.

**Chimney Sweeping:** Sweep at least twice per heating season, more frequently if necessary

**Other Important Points:** After a period of slumbering turn the thermostat up and wait for flames to appear above the firebed before opening the doors.

## BURNING WOOD AND PEAT

**Fuel Information:** Dry well seasoned wood or peat. Wood should be cut split and allowed to season in a dry well ventilated place for at least one year but preferably two years before use. Hard wood is preferable to soft wood.

**Grate Position:** Wood position - maintain a bed of ash on the grate at least 12mm(1/2 inch) thick.


**Throat Plate:** On LA45iB and LA50iB position the throatplate on the lower set of lugs at the front of the appliance.

**Secondary Air Control:** Keep open most of the time.

**Throat Plate Cleaning:** Clean the throatplate weekly, or more frequently if soot deposits are very heavy.

**Chimney Sweeping** Sweep at least twice per heating season, more frequently if necessary

**Other Important Points:** Allow ash to build up on the grate and do not riddle until the ash begins to restrict the slots at either side of the grate. If a mixture of wood or peat and coal is to be burned then keep the grate in the solid fuel position.

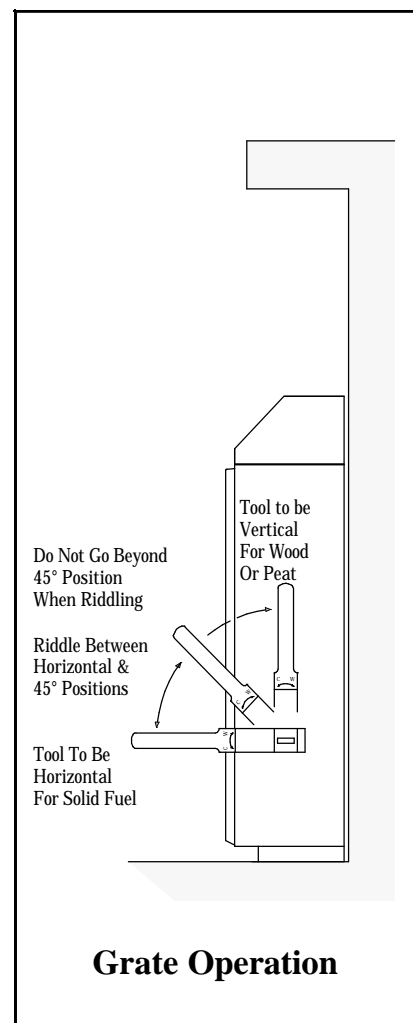

A. J. WELLS & SONS

Bishops Way, Newport, Isle of Wight, PO30 5WS, U.K.  
Tel (01983) 537799 Fax. (01983) 537788