WARNING

This information is a copy of an original archive, therefore Aga cannot be held responsible for its continued accuracy.

THE COALBROOKDALE GS3i

Users Instructions

Natural Gas Model

Consumer Protection Act 1987

As manufacturers and suppliers of cooking and heating products, in compliance with Section 10 of the Consumer Protection Act 1987. We take every care to ensure, as far as is reasonably practical, that these products are so designed and constructed as to meet the general safety requirement when properly used and installed. To this end, our products are thoroughly tested and examined before despatch.

IMPORTANT NOTICE: Any alteration that is not approved by Aga-Rayburn could invalidate the approval of the appliance, operation of the warranty and could affect your statutory rights.

Control of Substances - Health and Safety Important

This appliance may contain some of the materials that are indicated


It is the Users/Installers responsibility to ensure that the necessary personal protective clothing is worn when handling where applicable, the pertinent parts that contain any of the listed materials that could be interpreted as being injurious to health and safety, see below for information.

Firebricks, Fuel beds, Artificial Fuels - when handling use disposable gloves.

Fire cement - when handling use disposable gloves.

Glues and Sealants - exercise caution - if these are still in liquid form use face mask and disposable gloves.

Glass Yarn, Mineral Wool, Insulation Pads, Ceramic Fibre, Kerosene/Gas Oil - may be harmful if inhaled. May be irritating to skin, eyes, nose and throat. When handling avoid contact with skin or eyes. Use disposable gloves, face-masks and eye protection. After handling wash hands and other exposed parts. When disposing of the product, reduce dust with water spray, ensure that parts are securely wrapped.

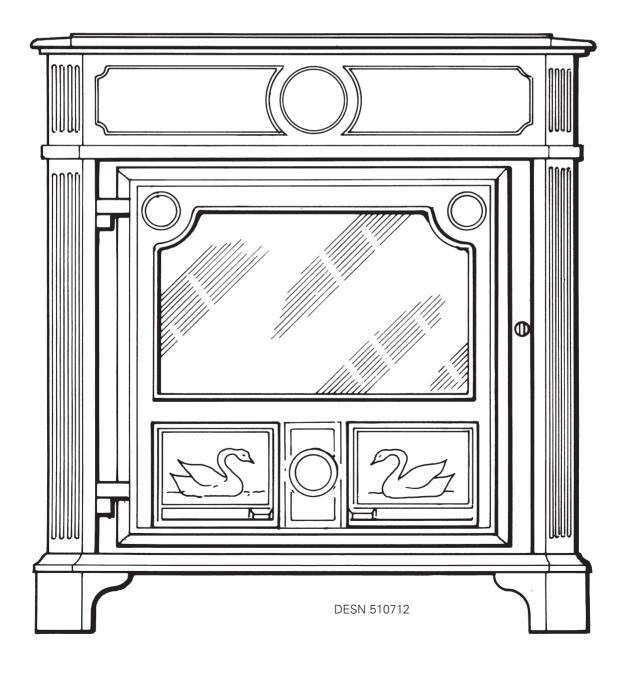

Dear Customer

Your gas stove is for use on **natural gas only** and **must not** be used on any other gas. It **must be** installed by a competent person (e.g A CORGI Registered Installer) in accordance with the Installation Instructions and operated in accordance with these Users Instructions. If so it should provide many years of safe and efficient operation.

Please complete the separate guarantee card and return it to us within 28 days of purchase. This will enable us to record the details of your purchase and keep you advised of any future developments.

We thank you for purchasing our product and trust it will provide many years of excellent service.

GUARANTEE

The components of this appliance are guaranteed for one year. We agree to repair free of charge or, at our option replace the appliance or parts thereof which may prove to be defective within one year of purchase.

Please retain your purchase receipt. Our Service Engineer will need to see this in the event of a claim under warranty.

IMPORTANT NOTES

Your Coalbrookdale GS3i is a natural gas stove.

Due to the newness, the stove may give off a slight smell for a short period after commissioning. This is quite normal and will disappear after a few hours of operation, open doors and windows if required.

The installation of the stove must be carried out by a competent person (e.g. CORGI Registered Installer) in accordance with the installation instructions and the current Gas Safety (Installation and Use) Regulations 1994. Failure to install the appliance correctly could lead to prosecution.

Before installation of your stove your installer should check that the chimney is sound free from obstruction and clean. If a brick chimney is to be used for the gas stove it **MUST** be swept prior to the installation.

The hearth under the stove should never be covered with combustible flooring or material. Do not obstruct the space beneath the stove.

WARNING: DO NOT OPERATE THE STOVE WITH THE GLASS PANELS IN THE DOOR OR SIDES CRACKED OR BROKEN. THE DOOR MUST ALWAYS BE CLOSED USING THE TOOL PROVIDED.

The Coalbrookdale GS3i has been designed similar to a solid fuel stove to relevant safety standards, but during use, many parts of the appliance can become **HOT** to touch. We recommend that you provide and secure a fireguard complying with BS.6539 when the room is used by elderly, infirm or young persons.

Any alteration after the initial installation must be in accordance with the requirements of the Installation and Servicing Instructions. Clarification of combustible material clearances, hearth dimensions, shelf heights and fluing requirements are detailed in the section 'Location' and the 'Flue'.

This appliance should be checked on a regular basis to ensure continued clearance of combustion products and that there is no accumulation of soot etc. It is recommended that the appliance is inspected/serviced annually by a competent person (e.g A CORGI Registered Installer).

To ensure safe operation of the appliance the room containing the stove must have purpose provided ventilation such as an air brick or door grill. This serves to replace the air used in the combustion process and it is particularly important that the vent remains free from obstruction at all times. Therefore you should have periodic checks to ensure that the ventilation is free from obstructions.

Combustible furniture or material MUST NOT be placed closer than 1.5m in front of the stove.

It is NOT recommended to have any material, such as curtains, above the appliance or to within 1.5m of the sides.

Clothing or other flammable materials should NOT be placed on the stove.

Blown vinyl wallpaper or similar materials which have a raised pattern, are easily affected by heat and may scorch or discolour if placed too close to a heating appliance. Please bear this in mind when installing this stove and when re-decorating.

The door tool must be stored in a safe place out of the reach of children.

The appliance should under NO circumstances be utilized for solid fuel.

OPERATION OF THE STOVE

The gas to the stove is controlled by a pilot light. control knob and a safety feature called a flame supervision device.

To gain access to the gas control knob, open the control access door (Fig. 1).

The tap knob bezel is marked with position for (OFF) (\bullet). PILOT (\star) and a graduated section for minimum, and maximum gas rate (fig. 2).

The stove is fitted with a piezo spark ignitor.

Note: If the main burner or pilot are extinguished for any reason, DO NOT attempt to relight the pilot for three minutes.

TO LIGHT THE PILOT

Open the control access door. Ensure that the glass door is closed and locked and that the control knob is in the OFF (\bullet) position (fig. 2).

Fully depress the control knob and turn anti-clockwise (keeping the control knob fully depressed) until the pilot position (4) is reached (fig. 2). If the pilot has not lit repeat the operation. The pilot may be viewed through the bottom of the window towards the left hand side.

Once the pilot is lit continue to hold in the control knob for a further 10 - 15 seconds to establish the pilot. When the control knob is released the pilot should remain alight. If the pilot fails to remain alight repeat the procedure but hold the knob in longer to allow the pilot to establish.

If required the pilot may be lit by a long spill or taper as follows:

Open the door of the stove (using the tool supplied) (see Fig. 3).

Apply a lighted long spill or taper to the pilot (See Fig. 4) positioned at the front LH side of the burner tray.

Fully depress the control knob and turn anti-clockwise (keeping the control knob fully depressed) until the pilot position (≼) has been reached and the pilot should light.

Once the pilot is lit remove the long spill or taper, continue to hold the control knob for 10 - 15 seconds to establish the pilot. When the knob is released, the pilot should remain alight - if the pilot fails to remain alight, repeat the procedure, but hold the knob in longer.

When pilot is established close the door (using the tool supplied).

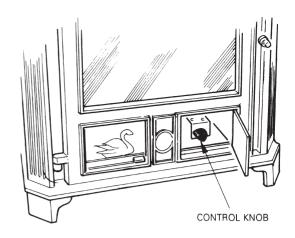


FIG. 1 DESN 510713






PILOT





MAX

FIG. 2

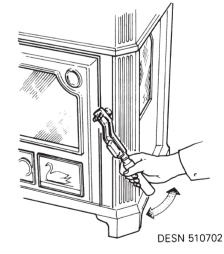



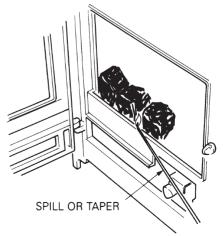


FIG. 4 DESN 510710

TO LIGHT THE STOVE

If the pilot is not already alight, light the pilot as described. Slightly depress and turn the control knob anti-clockwise from the pilot position to the maximum position (()) (see Fig. 5). The fire will ignite.

Adjust the heat output as required by turning the control knob clockwise towards the minimum position (&) (see Fig. 6).

To ensure correct operation of the stove it is recommended that it is **NOT** operated below the minimum setting.

Close the control access door.

TO TURN THE STOVE OFF

Turn the gas control knob to the minimum gas rate position (&) (Fig. 7), slightly depress the knob and continue turning to the pilot position (\star) (Fig. 8). The fire will go out and the pilot will remain lit and may be left on permanently.

When turning off appliance some 'popping' may occur, this is quite normal as it is the residual gas being burnt off.

Turn the stove off as described. Depress the control

knob, turn to the off (●) (Fig. 9) and the pilot will go out.





FIG 6



FIG. 7



FIG. 8



FIG. 9



CLEANING

Cleaning should be carried out when the stove is turned OFF and is cold.

The exterior of the stove can be cleaned with a vacuum cleaner, or dusted with a soft brush, either dry or moistened by drawing the bristles over a damp cloth.

A cloth is not recommended as it can leave fibres behind.

The flame effect of the stove may deposit some soot on the coals, or back of the stove. This is quite normal and need not be cleaned off but if desired can be removed by carefully using a soft brush.

WARNING: DO NOT USE A VACUUM CLEANER

Remove the coals for cleaning and replace as described.

REMOVING AND REPLACING COALS

Ensure that the stove and pilot are turned OFF and that the stove is cold.

Open the door of the stove. (Using the tool supplied). (Fig. 3).

In time, due to expansion and contraction the 'coals' may settle. The settlement of the 'coals' may cause minor abrasions and expose some white spots. These white spots, usually add realism to the stove when in operation.

Position the blanking plates as illustrated in fig. 10.

If the clay aggregate has settled 'top up' as necessary (fig. 11) and ensure that the ceramic turbulators (fig. 11) are correctly positioned prior to relaying the 'coals'.

Positioning the Coals

Carefully place the coals on the coal bed as illustrated in Figs 12, 13, 14 and 15.

Close the door and lock (using the tool supplied).


WARNING: USE ONLY THE SIMULATED COALS AND AGGREGATE SUPPLIED WITH THE APPLIANCE TO BUILD THE BED. UNDER NO CIRCUMSTANCES USE EXTRA COALS OR PUT ANY OTHER MATERIAL ON THE FUEL BED.

DO NOT OPERATE THE STOVE WITH THE DOOR OPEN OR IF ANY OF GLASS PANELS IN THE DOOR OR SIDES ARE CRACKED OR BROKEN.

Hands should be washed after handling coals. (if gloves are not used).

LAYING THE FUEL BED


LOCATE SIDE AND REAR BLANKING PLATES AS SHOWN.

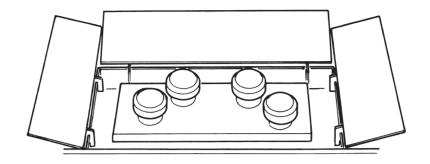

DESN 510703

FIG. 10


LOCATE THE TURBULATORS AS SHOWN. POUR THE CLAY AGGREGATE SUPPLIED INTO THE TRAY UNTIL IT IS FLUSH WITH THE TOP OF THE BURNER TRAY.

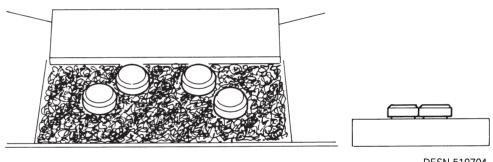

DESN 510704


FIG. 11

LOCATE 4 COALS ON TOP OF THE TURBULATORS AS SHOWN.

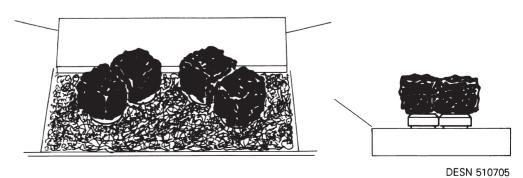

PLACE 5 COALS TO THE REAR OF THE BURNER TRAY AS SHOWN.






DESN 510706

FIG. 13

PLACE 4 COALS ONTO THE BURNER TRAY AS SHOWN.

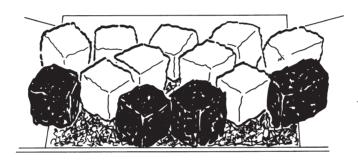




DESN 510707

FIG. 14

PLACE THE REMAINING 5 COALS ONTO THE BURNER TRAY AS SHOWN.

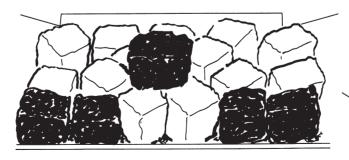



DESN 510708

FIG. 15

MAINTENANCE

f you require any of the below user replacement items or if you have any difficulty with the fire, consult your original supplier quoting the stoves name. Coalbrookdale GS3i and the Serial No (found on the Data Plate on inside of glass door).

Serial No.

The appliance should be serviced annually by a competent person (e.g. CORGI registered installer).

HEAT OUTPUT (GROSS)

Maximum Setting Minimum Setting

7.1 kW 2.25 kW

REPLACEMENT ITEMS

ITEM MAKERS PART NUMBER

Control Knob HG4M999413
Coals Pack HG4M420674
Turbulator FG4M 420450

Aggregate Pack TCLY417047

Door Tool HS9M 47520 COMP

With Aga-Rayburn's policy of continuous product improvement, the Company reserves the right to change specifications and make modifications to the appliance described and illustrated at any time.



For further advice or information contact your local distributor/stockist