

---

# SAVOIE


---

## Wood stove

EN 13240

**Model : 134 08 03**

Output : 8 kW

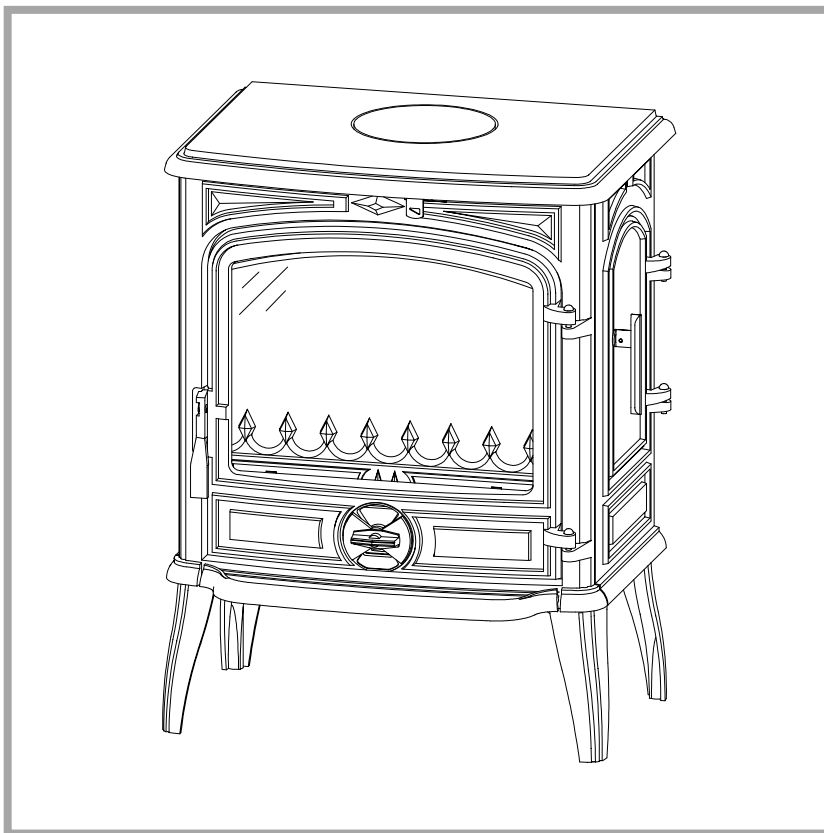

Description of the appliance

Installation instructions

Operating instructions

Spare parts

Warranty certificate

---

Document n° 957-16 ~ 15/12/2006

FR

NL

IT

PT


EN

### Technical manual

to be saved

by the user

for future reference

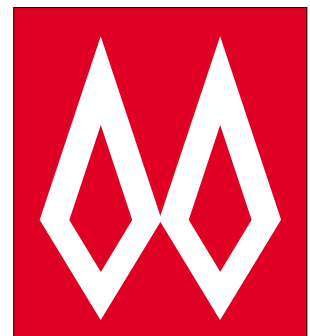

**FRANCO BELGE**

**STAUB FONDERIE**

SARL with the capital of 6 359 540 €

Head Office Address

2, rue Saint Gilles

68230 TURCKHEIM

RCS Colmar

SIREN 444 881 953

Address

Administration and manufacturing

BP 73

59660 MERVILLE (FRANCE)

Telephone : 00 333 28 43 43 00

Fax : 00 333 28 43 43 99

Subject to modifications.

FRANCO BELGE congratulates you on your choice.  
FRANCO BELGE, guarantees the quality of its appliances and is committed to meet its customers' needs.  
FRANCO BELGE, which can boast a 80-year experience in the industry of heating devices, uses state-of-the-art technologies to design and manufacture its whole range of products.  
This document contains instructions on how to install your appliance and make full use of its functions, both for your comfort and safety.

---

## CONTENTS

---

<b>Product information . . . . . p. 3</b>	
Package . . . . . p. 3	Description . . . . . p. 3
Optional . . . . . p. 3	Principle of operation. . . . . p. 3
General characteristics. . . . . p. 3	
<hr/>	
<b>Installation instructions . . . . . p. 4</b>	
Warning to the user . . . . . p. 4	Mounting the tray . . . . . p. 6
Location of the unit . . . . . p. 4	Door closing pressure . . . . . p. 6
Chimney . . . . . p. 5	Pre-utilisation check . . . . . p. 7
Assembly of flue spigot . . . . . p. 5	Maintenance of the Chimney . . . . . p. 7
Chimney connector. . . . . p. 6	
<hr/>	
<b>Instructions for user . . . . . p. 8</b>	
Fuel . . . . . p. 8	Maintenance of the stove body . . . . . p. 9
Lighting . . . . . p. 9	Maintenance of the Chimney . . . . . p. 9
Operating procedure . . . . . p. 9	Recommendations . . . . . p. 10
Loading the fuel . . . . . p. 9	Trouble Shooting . . . . . p. 10
De-ashing . . . . . p. 9	
<hr/>	
<b>Spare parts . . . . . p. 12</b>	

This appliance is meant to burn wood safely

## Warning

An incorrectly installed wood stove can cause serious accidents.

We recommend that you engage the services of a professional engineer for its installation and the regular maintenance requirements

# 1. Product information

## 1.1. Package

- 1 package : Stove complete.

## 1.2. Optional

- Set of 4 short legs (only 134 08 03 Y)

## 1.3. General characteristics

<b>Reference</b> . . . . .	<b>134 08 03</b>
Maximum output . . . . . kW	8
Chimney draught required . . . . . Pa	12
Usable firebox dimensions	
- width . . . . . mm	450
- depth . . . . . mm	240
- height . . . . . mm	365
Log dimensions	
- Length maxi . . . . . cm	40
Ash pan capacity . . . . . litres	3
Net weight . . . . . kg	100
Volume heated . . . . . m <sup>3</sup>	300
Autonomy . . . . . h	10
<i>Flue mass flow on the rear</i>	
- Efficiency classification . . . . . %	74,1
- Co (13% O <sub>2</sub> ) . . . . . %	0,29
- Mean flue gas temperature . . . . . °C	305
- Flue mass flow . . . . . g/s	8,48

Flue mass flow on the top	
- Efficiency . . . . . %	73,6
- Co (13% O <sub>2</sub> ) . . . . . %	0,28
- Mean flue gas temperature . . . . . °C	301
- Flue mass flow . . . . . g/s	8,72

**Note** : The performances indicated result from tests carried out in accordance with standard EN13240 with logs of Ø 12 of 40 cm and a draught of 12 Pa.

## 1.4. Description

- Wood stove **in conformity with EN 13240**
- Continuous-burning heating appliance.
- Wood burnt on grate
- Enclosed combustion chamber with refractory brick walls.
- Removable appliance, to be installed near a wall.
- Detachable flue spigot for rear or top chimney connection.
- Detachable top for easy handling and cleaning (rear smoke exit only).
- Loading door with a side opening (to the right of the appliance)
- Adjustable air controls for controlling the burning rate.
- Spin wheel for lighting.
- Large ash-pan.

- Long lasting burning cycle : When the appliance is loaded with à 4,8 kg (see page 8, § 3.1.) of dry rate (primary and secondary air inlet closed) with a 6 Pa draught, it runs for 11 hours.

## 1.5. Principle of operation

The appliance is designed for operation with the door closed. Heat is mainly diffused by radiation, through the window and body of the appliance.

Combustion occurs on the grate, with draught entry through the top of the combustion chamber when using wood and under the grate when using coal.

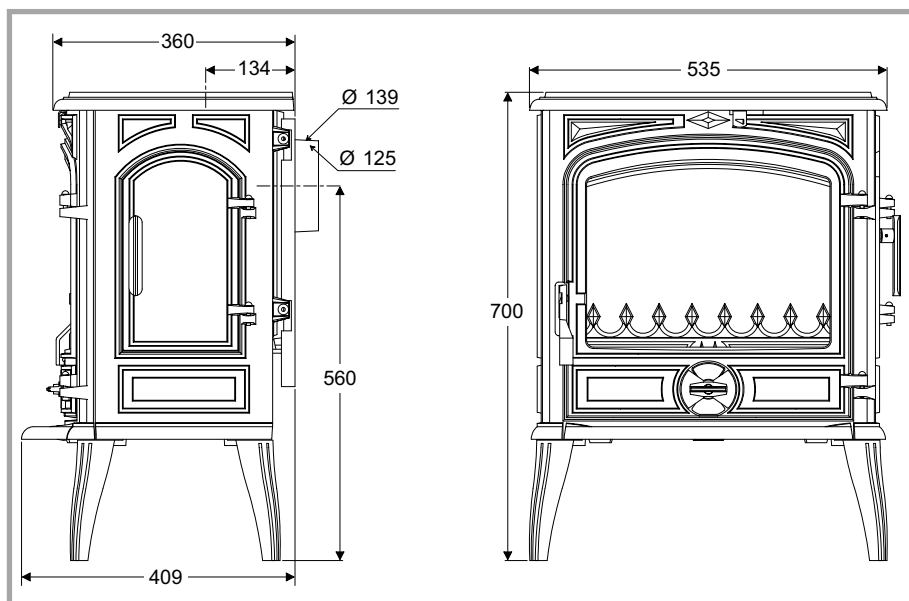


Figure 1 - Dimensions in mm

## 2. Installation instructions

### 2.1. Warning to the user

All the local and national regulations, and in particular those relating to national and European standards, must be observed when installing the appliance.

An incorrectly installed heating appliance can cause serious accidents (chimney fires, burning of plastic insulation materials, in partition walls, etc.).

The insulation of both the appliance and the exhaust gas pipe has to be reinforced and done according to the Standards and the Building Regulations for safety reasons.

Failure to respect the mounting instructions leads to engage the responsibility of the one doing the installation.

The manufacturer’s responsibility shall be limited to the supply of the equipment.

### 2.2. Location of the unit

**Ventilation** : For satisfactory appliance operation with a natural draught, check that sufficient air for combustion is available in the room.

**Position of the unit** : For new installations, select a central position within the house, to provide a good heat distribution around the building.

The heat distribution towards the other rooms will be made through the communicating doors.

These rooms must be in negative pressure or must include ventilation gratings.

**Floor and walls** : Make sure they are not combustible or covered with combustible material (as per the Building regulations).

Otherwise it must necessary to install a non-combustible protection.

There must be a clearance of at least 150 mm at each side of the appliance and at the back of the appliance from a non-combustible wall.

This distance must be extended to a minimum clearance of 350 mm from any combustible materials.

This measurement may be reduced to a minimum gap of 50 mm when the non-combustible wall is at least 200 mm thick.

When using a single wall flue pipe, there must be a clearance (A) of at least three times its diameter (B) from any combustible materials.

If the appliance has to be located in an opening, this distance must be extended to a minimum clearance (A) of 375 mm from the pipe or the stove body to any combustible materials.

**Hearth** : The appliance must stand on a fireproof hearth.

It is possible to provide a hearth made of non combustible board/sheet material or tiles at least 12 mm thick.

Constructional hearths should be constructed of solid non combustible material at least 125 mm thick (including the thickness of any non combustible floor under the hearth).

The hearth must protrude at least 225 mm in front of the stove and 150 mm each side.

If the hearth is constructed on timber, there must be a clearance of at least 250 mm from the timber to the top surface of the hearth.

See section J of the Building regulations.

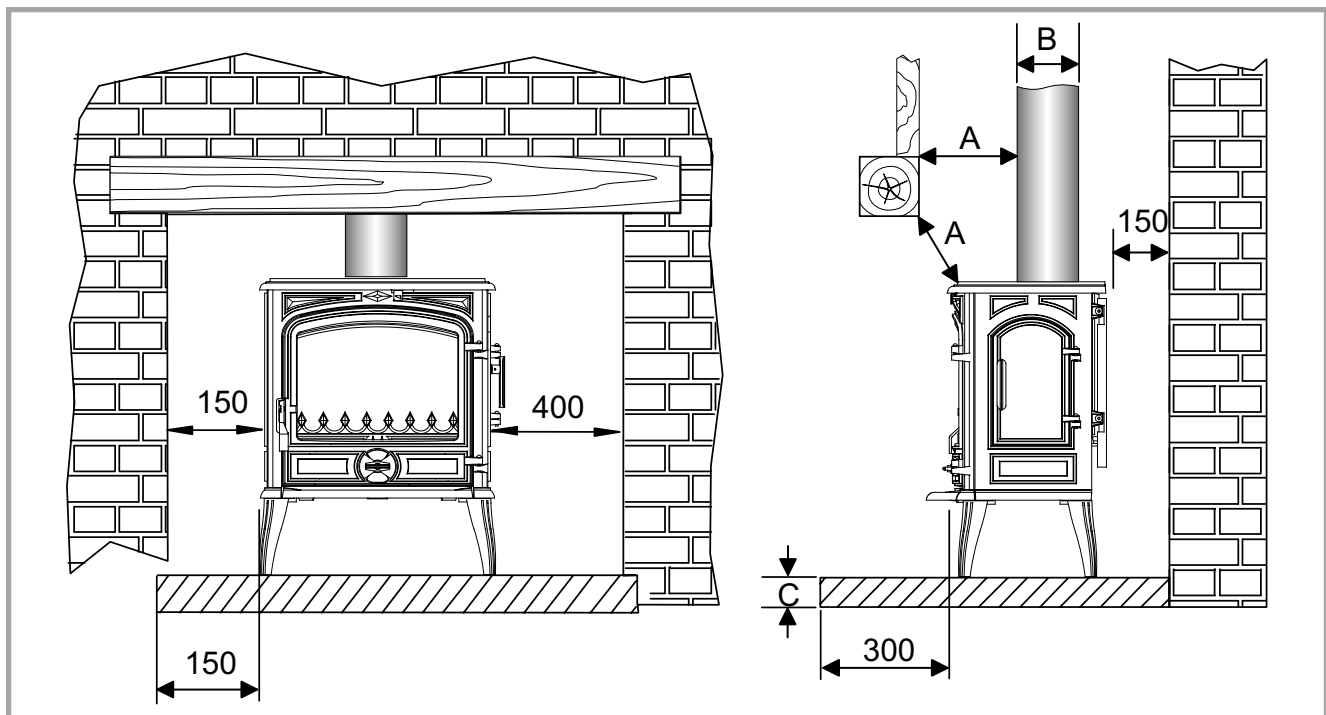


Figure 2 - Minimum clearances

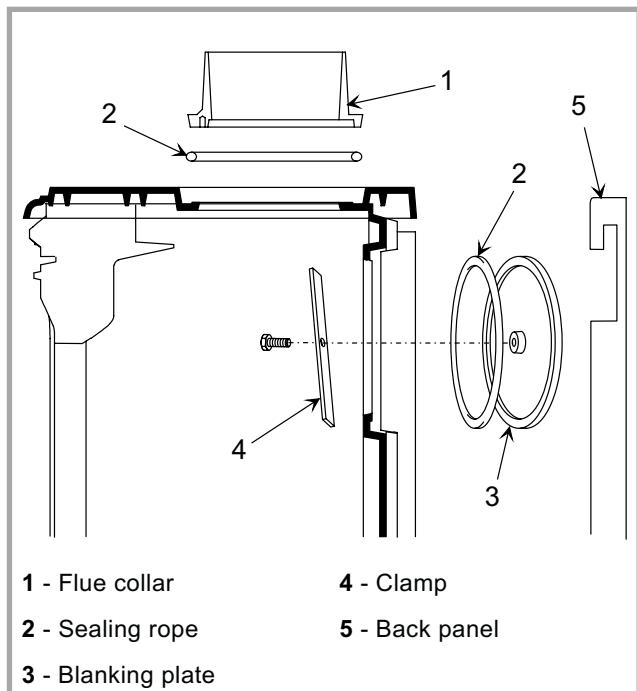


Figure 3 - Smoke exit on the top

### 2.3. Chimney

The chimney must comply with Current Building Regulations. If in doubt, consult your Dealer or local Building Inspector.

#### Existing flue :

- The flue must be in good condition and must provide sufficient draught (refer to technical details p. 3).
- The flue must be suitable for the installation of fuel burning appliances, otherwise it must necessary to install a tubing.
- The flue must be clean. It should be swept to remove soot and dislodge tar deposits.
- The flue must be well insulated. If the flue inner wall surfaces are cold, a good thermal draw is impossible causing condensation problems (tar formation etc) to occur.
- The flue must be watertight.
- The flue must not be shared with other appliances.
- The chimney must have a constant cross section.
- When the cross-section of the chimney is too large, it has difficulties in obtaining a good draught.
- The recommended minimum flue height is 5 metres.
- In case of a flat roof or when the roof gradient is lower than 15°, the stack must be 1,2 m (4 feet) high at least.
- If the chimney has any down draught tendency, due to its position in relation to nearby obstacles, then an anti-down draught cowl must be installed on the chimney or the chimney height must be increased.
- If the chimney draught is excessive or irregular, a draught stabiliser must be installed. **It must be visible and accessible.**

**Chimney to be built / new flue :** The chimney must comply with Current Building Regulations. If in doubt, consult your Dealer or local Building Inspector.

- The appliance must not support the weight of the flue.
- Consult a chimney specialist for advice on suitable flue systems for solid fuel appliances.

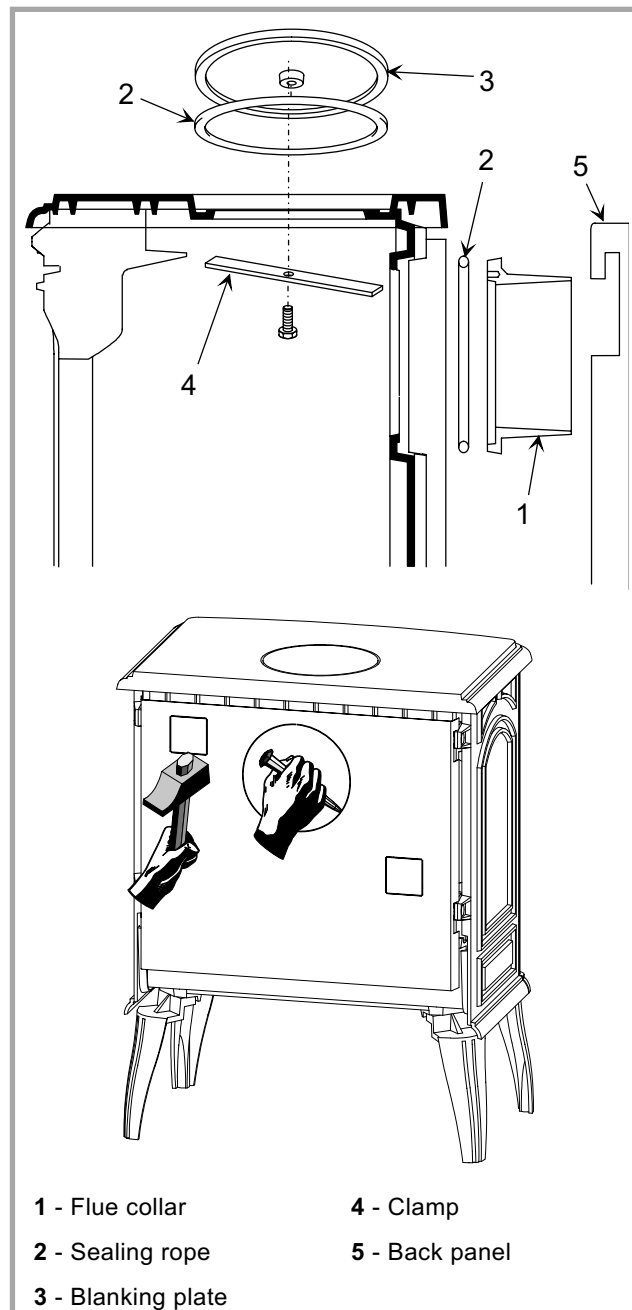


Figure 4 - Smoke exit at rear

- It must be distant from any combustible material (walls, cross members)
- It must permit an easy sweeping.

### 2.4. Assembly of flue spigot

The stove is supplied with a connection flue spigot with an inner diameter of 125 mm and an outer diameter of 139 mm.

#### 2.4.1. Smoke exit on the top (figure 3)

- Fit the sealing rope 2 in the groove on the top and fix the flue collar 1 with 3 bolts and washers supplied.

#### 2.4.2. Smoke exit at rear (figure 4)

- Remove the rear heat shield and remove the preformed hole plate.

- Remove the retainer fuel (fig. 8, p. 7), the two side bricks # 23 and 24 p. 15) and the flue baffle (fig. 7, p. 6).
- Remove the blanking plate 3 and the clamp 4 and assembly in the top, ensuring there is a good seal.
- Fix the flue collar 1 at rear with 3 bolts and washers supplied, ensuring there is a good seal.
- Replace all the internal parts in the reverse order.  
Replace the rear heat shield.

### 2.5. Chimney connector

- The connection to flue must be carried out according to local building regulations.
- The stove must be installed as close as possible to the chimney.
- The connector pipe must be approved for installation with combustion products (either 24 ga. black painted or blued steel or 316 grade 20 ga. Stainless steel or 1 mm vitreous enamelled steel)..
- Pipe diameter must not be less than the appliance spigot diameter. Otherwise the reducing must be 1 diameter lower than the flue spigot and be situated as distant as possible from the flue connection of the appliance.
- The connection can be either vertical or horizontal. For horizontal connections, avoid right angle bends.
- The joint between the connection pipe and the stovepipe, and the flue, must be leak tight.
- For the premises equipped with a mechanical controlled ventilation, the airtightness has to prevent the exhauster drawing out the smokes from the exhaust gas pipe.
- The connection pipe and any draught stabiliser must have access for cleaning.


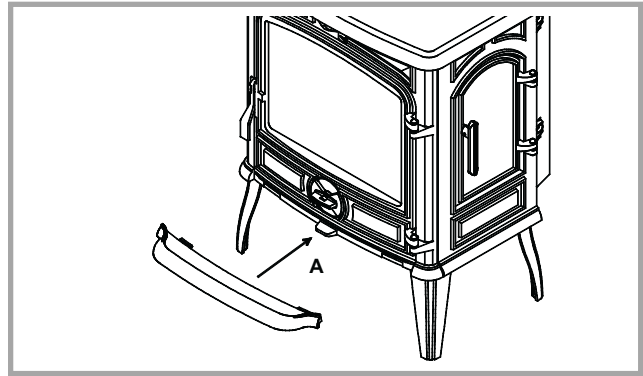


Figure 5 - Mounting the tray

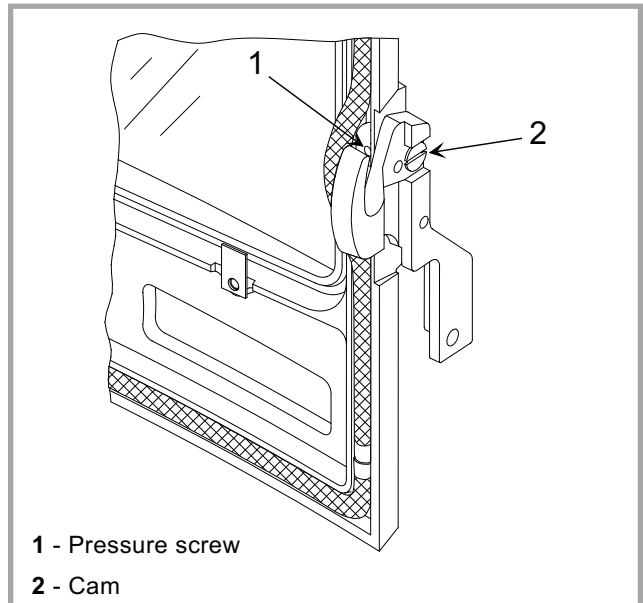

1 - Pressure screw  
2 - Cam

Figure 6 - Door closing pressure

### 2.6. Mounting the tray

#### Figure 5

To avoid damage during transport, the tray has been stored behind the main door.  
Center the tray on tab “A” and lower into place.

### 2.7. Door closing pressure

#### Figure 6

The closing latch rotates around a pressure screw positioned cam.

- Remove gently the ceramics rope
- Loosen pressure screw 1.
- Turn cam 2 to desired position.
- Tighten pressure screw 1

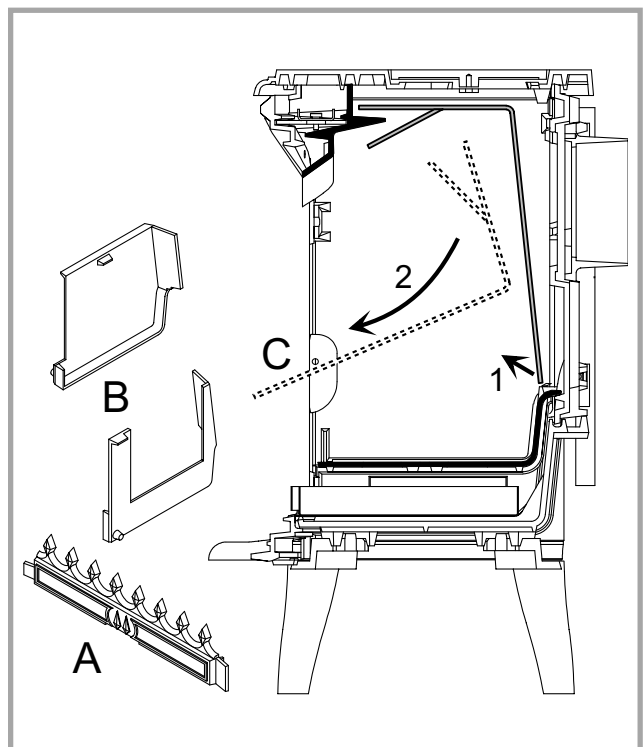


Figure 7 - Removing the flue baffle

## 2.8. Pre-utilisation check

- Check that the glasses are not damaged.
- Check that the smoke passages are not obstructed by packaging or removable parts.
- Check that the seals of the smoke-line are in good condition.

**Note** : if it acts of a ceramics braid, it is consumable and thus brought to be changed by the user.

- Check that the doors close correctly.
- Check that all removable parts are correctly installed. (bricks, flue baffle, etc.)

## 2.9. Maintenance of the Chimney

In order to avoid any incident (chimney fire, etc...), maintenance tasks must be carried out regularly.

If the appliance is regularly used, the chimney should be swept several times per year, together with the stovepipe connection section.


First remove the retainer grate (fig. 8), the two side bricks and the flue baffle (fig. 7).

Replace all parts in the reverse order.

**If the chimney catches fire, you must cut off the flue draught, close the doors and windows, hatches and keys, remove the embers from the stove, stop up the connection hole with wet cloths and call the Fire Brigade.**

**Do not open the door of the appliance (or air inlet) under any circumstances.**

Chimney condition should be checked at least once per year by a professional engineer.

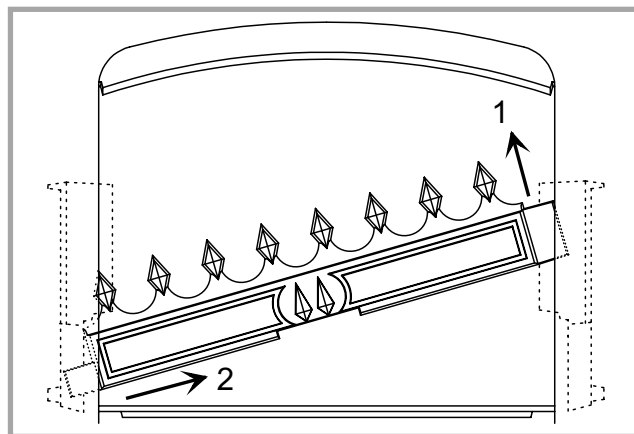

*Figure 8 - Removing the retainer grate*

### 3. Instructions for user

The manufacturer will not be responsible for damages on parts of the appliance due to the use of prohibited fuel or due to an alteration of the appliance or its installation.

**Only use replacement parts supplied by the manufacturer.**

**All the local and national regulations, and in particular those relating to national and European standards, must be observed when using the appliance.**

Don't run the stove in mild weather with coal ! Under certain circumstances (e.g. fog and repeated thaw) the chimney will not draw sufficiently well and thus be at the origin of asphyxia.

#### 3.1. Fuel

**This appliance is not an incinerator.**

• **Recommended fuel : Wood** with the grate provided

Use hard wood logs, which have been cut for at least two years and stored, under shelter.

Hardwood has a higher calorific value per cu metre (oak, ash, maple, birch, elm, beech, etc.).

Large logs must be split and cut to a usable length, before being stored in a sheltered and ventilated place.

**Recommended fuel with the coal grate 308711**

Smokeless fuels, including coolite nuts, phurnacite, ancit and extracite.

• **Not recommended as fuel :**

“green wood”. Green or damp wood reduces stove efficiency and soils the glass, the internal walls and the flue (soot, tar, etc.).

“used timbers”. Burning treated wood (railway sleepers, telegraph poles, offcuts of plywood or chip board, pallets, etc.) quickly clogs the flue ways (soot, tar, etc.), pollutes the environment (pollution and smell, etc.) and cause the fire to burn too quickly and overheat.

“Green wood” and “recovered wood” can eventually cause a chimney fire.

• **Prohibited fuel :**

Any form of bituminous coal or petroleum based coke.

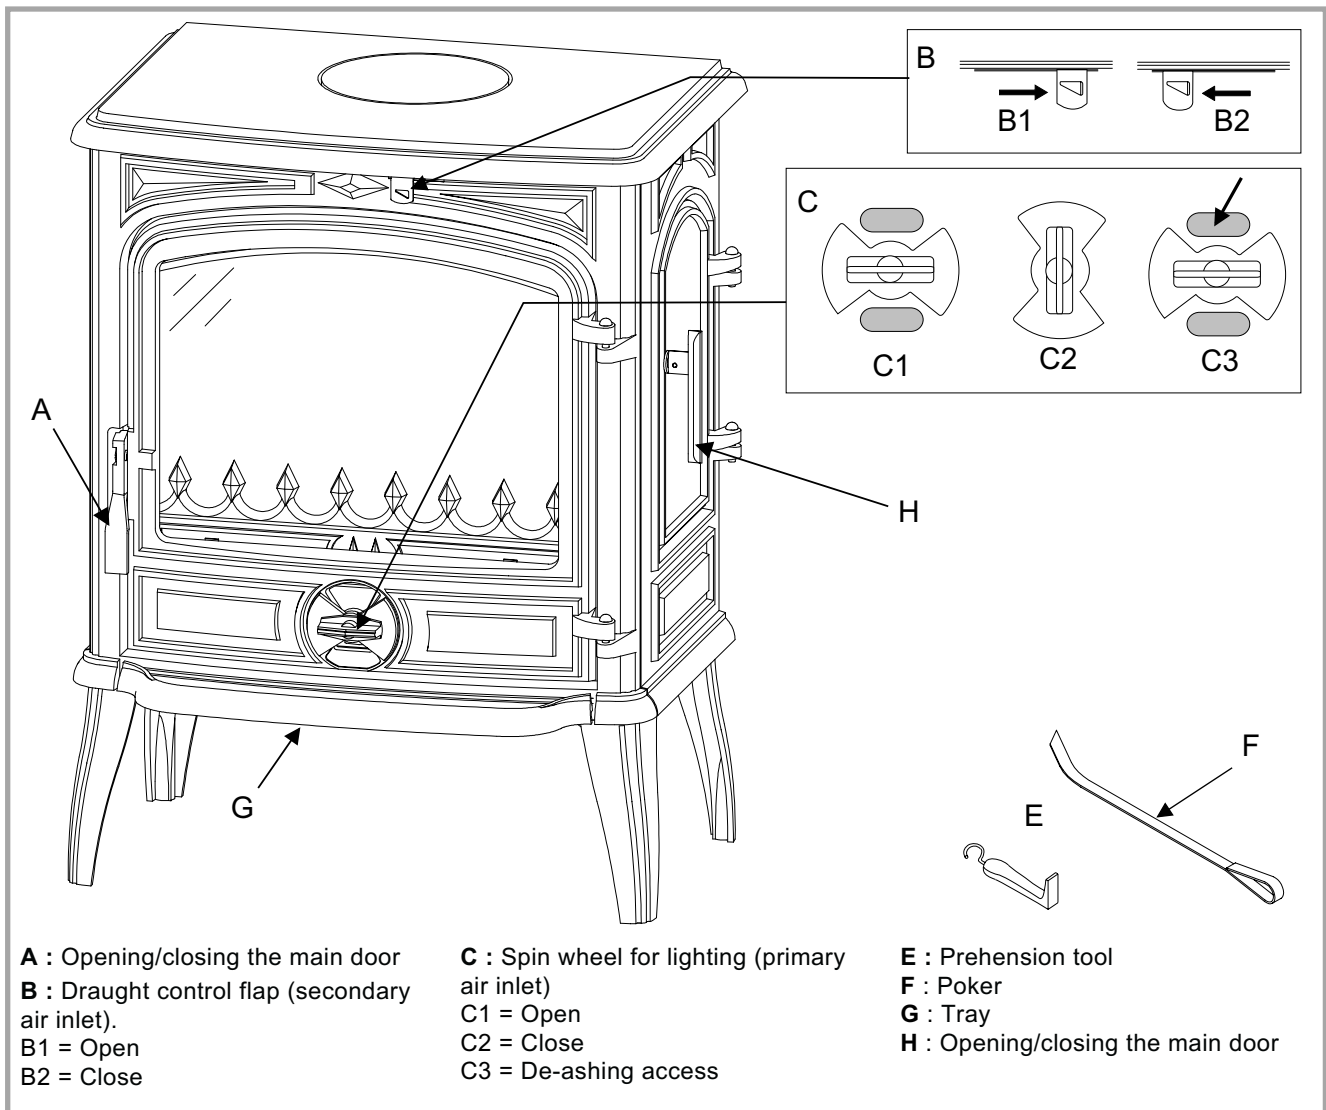


Figure 9 - Operating devices



## 3.2. Lighting

### Figure 9

- Slide the top air control (secondary air inlet) (# B1) to the right. Open the lower spin wheel (primary air inlet) (# C1).
- Open the main door.
- Lay firelighters or rolled up newspapers on the grate with a reasonable quantity, if necessary, of dry kindling wood. Place 2 or 3 small logs on top.
- Light the newspaper or firelighters using a long taper and close the door (# A).
- When the fire is burning fiercely, add further logs of a diameter up to 10 cms.
- When the stove body is very hot, close the lower spin wheel (# C2).
- The burning rate can now be adjusted by moving the top air control to the left (# B1). Experience will show you which settings are best for your situation.

At the first lighting, the fire must be progressively increased to allow the various parts to expand normally and to dry up.

**Note :** When the fire is lit for the first time, the stove may give off fumes from the new paint. This is normal but ensure the room is well ventilated during the first few hours of operation.

- The minimum reloading interval for nominal heat output is 1.5 hours.

## 3.3. Operating procedure

The appliance must function all door and the lighting flap properly closed.

The burning rate can be adjusted by moving the top air control (# B1). Experience will show you which settings are best for your situation.

## 3.4. Loading the fuel

It is advisable to wait for the fire to be reduced to hot embers before re-loading.

The door should be opened slowly, avoiding a sudden rush of intake air, so that smoke does not escape into the room.

The logs must be placed on the glowing embers.

For a briskly burning fire, there should always be at least two logs in the grate. The fire will burn better if there are several logs.

For a slower burning fire (for example, at night), select larger logs.

After loading the firebox, Close the loading door.

Open the lighting flap for a while.

## 3.5. De-ashing

It is essential to keep the grate free from a heavy build up of ashes.

**REMEMBER TO BURN SOLID FUEL CORRECTLY, AIR SHOULD BE ALLOWED TO FLOW FROM THE ASH PIT AREA THROUGH THE GRATE AND THROUGH THE FUEL. IF THE GRATE OR ASH PAN ARE CONGESTED, THE PERFORMANCE WILL BE EFFECTED.**

If burning solid fuel, always empty the ash pan at least once a day or whenever it is full of ashes. Never allow the ashpan to overflow allowing ash to be in contact with the underside of the grate. If this condition is allowed, the grate will wear out pre-maturely.

## 3.6. Maintenance of the stove body

- The appliance must be cleaned regularly, together with the connecting pipe and the flue pipe.
- Remove all deposits from the combustion chamber and clean the grate area.
- The vitro ceramic glass can only be cleaned using a soft cloth and stove glass cleaner, available from your Franco Belge Dealer. **DO NOT USE ABRASIVES**
- The vitro ceramic glass resists a temperature of 750°C. If the glass should be broken, it is recommended that only an original factory replacement should be fitted.
- For enamelled finishes, the stove body can be cleaned using a soft cloth either dry, or slightly damp with a very mild detergent.

### **NEVER CLEAN ENAMEL SURFACES WHILST THE STOVE IS HOT.**

- The cast iron body panels of non-enamelled stoves can be cleaned with a proprietary stove cleaner or re-sprayed / touched up using a stove paint. These products are available from your Franco Belge Dealer.
- Check that there are no obstructions before relighting after a long period of disuse.
- The appliance must not be used with a flue serving several appliances.
- To maintain the grates ventilation free of any obstruction.
- Check that joints are in good enough condition to provide perfect sealing (loading buffer, glazed door and ash door). Replace gasket if necessary.

## 3.7. Maintenance of the Chimney

**Very important :** In order to avoid any incident (chimney fire, etc...), maintenance tasks must be carried out regularly.

**If the appliance is regularly used, the chimney should be swept several times per year, together with the stovepipe connection section.**

**If the chimney catches fire, you must cut off the flue draught, close the doors and windows, hatches and keys, remove the embers from the stove, stop up the connection hole with wet cloths and call the Fire Brigade.**

**Do not open the door of the appliance (or air inlet) under any circumstances.**

Chimney condition should be checked at least once per year by a professional engineer.

### 3.8. Recommendations

This room heater is a high heat producing appliance and may cause severe burns if touched on the glass front door, or on top directly over the burner

The stove may still be hot even when fire has burnt out.

**KEEP CHILDREN AWAY.**

### 3.9. Trouble Shooting



: This sign means that you should ask for a qualified engineer to do the work.

<i>Problem</i>	<b>Probable causes</b>	- Action
<i>Fire difficult to start Fire goes out</i>	<b>Wood green, too damp.</b>	- Use hard wood logs, which have been cut for at least two years and stored, under shelter.
	<b>Logs are too big.</b>	- To light the fire, use small, very dry twigs. To maintain the fire, use split logs.
	<b>Poor quality wood.</b>	- Use hardwood that have a higher calorific value per cu metre (Yoke-elm, oak, ash, maple, birch, elm, beech, etc.)
	<b>Air starvation.</b>	- Open lower spin wheel and top air control lever.
<i>Fire burns too quickly.</i>	<b>Insufficient draught.</b> <input checked="" type="checkbox"/>	- Check that the flue is not obstructed, sweep it if necessary - Seek advice from a chimney specialist.
	<b>Too much draught.</b>	- Ensure that the lower spin wheel is closed - Partially close the top air control lever.
	<b>Excessive draw.</b> <input checked="" type="checkbox"/>	- Install a draught stabiliser. Consult your Dealer.
<i>Smokes when lighting up.</i>	<b>Poor quality wood.</b>	- Do not continuously burn small wood, sticks, bundles, carpentry offcuts (plywood, pallets), etc.
	<b>Flue duct is cold.</b>	- Burn paper and kindling wood to increase heat.
<i>Smokes while burning.</i>	<b>Room is in decompression.</b>	- In houses equipped with mechanical ventilation, partly open a window until the fire is well established.
	<b>Draught is insufficien.</b> <input checked="" type="checkbox"/>	- Consult a chimney specialist. - Check that the flue is not obstructed, sweep if necessary.
	<b>Down draught.</b> <input checked="" type="checkbox"/>	- Install an anti-down draught cowl. Consult your Dealer.
<i>Low heat output.</i>	<b>Room is in decompression.</b> <input checked="" type="checkbox"/>	- In houses equipped with Mechanical Ventilation, an outside air intake must be installed for the chimney.
	<b>Incorrect Fuels.</b>	- Use the recommended fuel.
	<b>Poor mixing of the convection air.</b>	- Check that the next rooms are equipped with ventilation grids to help out the hot air circulation.



## 4. Spare parts

When ordering spare parts, specify **the stove type** and **serial number**, including the **colour index** (on the guarantee or identification plate), the **name** of the part and the **part number**.

**Example** : Wood stove “SAVOIE”, ref. 134 08 03, colour Y, top plate 352150 EF.

A = 134 08 03 Y ; B = 134 08 03 J ; C = 134 08 03 L ; D = 134 08 03 D  
E = 134 08 03 C ; F = 134 08 03 N ; G = 134 08 03 Q

N°	Code	Description	Type	A	B	C	D	E	F	G	Qty
1	100917	Cam pin	12x20 M7	A	B	C	D	E	F	G	01
2	101809	Bushing		A	B	C	D	E	F	G	02
3	110404	Hinge pin	6x30	A	B	C	D	E	F	G	02
4	134258	Bushing		A	B	C	D	E	F	G	01
5	181632	Adhesive rope		A	B	C	D	E	F	G	1,30 m
6	166003	Spring	11x15	A	B	C	D	E	F	G	01
7	808001 ED	Handle		A	B	C	D	E	F	G	01
8	181607	Ceramic rope	Ø 9,5	A	B	C	D	E	F	G	2,60 m
9	188812	Ceramic glass	379x293	A	B	C	D	E	F	G	01
10	189103	Screw	27x8x6	A	B	C	D	E	F	G	01
11	189825	Screw	M 6x5	A	B	C	D	E	F	G	01
12	205362	Back panel		A	B	C	D	E	F	G	01
13	222556	Flue baffle		A	B	C	D	E	F	G	01
14	237411 60	Reducing plate		A	B	C	D	E	F	G	01
15	259015	Fixing plate		A	B	C	D	E	F	G	04
16	270408	Air control flap		A	B	C	D	E	F	G	01
17	300126 EF	Leg	(180 mm)	A			D				04
17	300125 79	Leg	(180 mm)		B						04
17	300125 77	Leg	(180 mm)			C					04
17	300125 MK	Leg	(180 mm)					E			04
17	300125 EP	Leg	(180 mm)						F		04
17	300125 ER	Leg	(180 mm)							G	04
18	300481 EF	Base		A	B	C	D	E	F	G	01
19	301526 EF	Door lock		A							01
19	301526 79	Door lock			B						01
19	301526 77	Door lock				C					01
19	301526 66	Door lock					D				01
19	301526 MK	Door lock						E			01
19	301526 EP	Door lock							F		01
19	301526 ER	Door lock								G	01
20	301742 EF	Air damper		A			D				01
20	301742 79	Air damper			B						01
20	301742 77	Air damper				C					01
20	301742 MK	Air damper						E			01
20	301742 EP	Air damper							F		01
20	301742 ER	Air damper								G	01
21	303718 EF	Blanking plate		A			D				01
21	303718 79	Blanking plate			B						01
21	303718 77	Blanking plate				C					01
21	303718 MK	Blanking plate						E			01
21	303718 EP	Blanking plate							F		01
21	303718 ER	Blanking plate								G	01
22	303860 EF	Flue collar		A			D				01
22	303860 79	Flue collar			B						01
22	303860 77	Flue collar				C					01
22	303860 MK	Flue collar						E			01
22	303860 EP	Flue collar							F		01
22	303860 ER	Flue collar								G	01
23	305014	Wall		A	B	C	D	E	F	G	01

A = 134 08 03 Y ; B = 134 08 03 J ; C = 134 08 03 L ; D = 134 08 03 D  
 E = 134 08 03 C ; F = 134 08 03 N ; G = 134 08 03 Q

N°	Code	Description	Type	A	B	C	D	E	F	G	Qty
24	305213	Wall		A	B	C	D	E	F	G	01
25	306276	EF. Back wall		A	B	C	D	E	F	G	01
26	307434	EF. Fuel retainer		A	B	C	D	E	F	G	01
27	309228	Grate		A	B	C	D	E	F	G	01
28	309891	EF. Front plate		A			D				01
28	309891	79. Front plate			B						01
28	309891	77. Front plate				C					01
28	309891	MK Front plate						E			01
28	309891	EP. Front plate							F		01
28	309891	ER Front plate								G	01
29	310727	EF. R. side panel		A			D				01
29	310727	79. R. side panel			B						01
29	310727	77. R. side panel				C					01
29	310727	MK R. side panel						E			01
29	310727	EP. R. side panel							F		01
29	310727	ER. R. side panel								G	01
30	310824	EF. L. side panel		A			D				01
30	310824	79. L. side panel			B						01
30	310824	77. L. side panel				C					01
30	310824	MK L. side panel						E			01
30	310824	EP. L. side panel							F		01
30	310824	ER L. side panel								G	01
31	315607	Air duct		A	B	C	D	E	F	G	01
32	325304	Reducing plate		A	B	C	D	E	F	G	02
33	327903	EF. Ash pan panel		A			D				01
33	327903	79. Ash pan panel			B						01
33	327903	77. Ash pan panel				C					01
33	327903	MK Ash pan panel						E			01
33	327903	EP. Ash pan panel							F		01
33	327903	ER Ash pan panel								G	01
34	331104	EF. Main door		A							01
34	331104	79. Main door			B						01
34	331104	77. Main door				C					01
34	331104	66. Main door					D				01
34	331104	MK Main door						E			01
34	331104	EP. Main door							F		01
34	331104	ER Main door								G	01
35	352150	EF. Top plate		A			D				01
35	352150	79. Top plate			B						01
35	352150	77. Top plate				C					01
35	352150	MK Top plate						E			01
35	352150	EP. Top plate							F		01
35	352150	ER Top plate								G	01
36	406816	Clamp		A	B	C	D	E	F	G	01
37	624042	Ash-pan		A	B	C	D	E	F	G	01
38	162545	Descriptive plate		A							01
38	162544	Descriptive plate			B	C	D	E	F	G	01
39	415504	60. Poker		A	B	C	D	E	F	G	01
40	101045	Axle		A	B	C	D	E	F	G	01
41	134711	Pin		A	B	C	D	E	F	G	01
42	134749	Pin	4X20	A	B	C	D	E	F	G	01
43	262010	Door heat shield		A	B	C	D	E	F	G	01
44	300991	EF. Door lock		A			D				01
44	300991	79. Door lock			B						01
44	300991	77. Door lock				C					01
44	300991	MK Door lock						E			01

A = 134 08 03 Y ; B = 134 08 03 J ; C = 134 08 03 L ; D = 134 08 03 D  
 E = 134 08 03 C ; F = 134 08 03 N ; G = 134 08 03 Q

N°	Code	Description	Type	A	B	C	D	E	F	G	Qty
44	300991	EP. Door lock							F		01
44	300991	ER. Door lock								G	01
45	303514	EF. Door		A			D				01
45	303514	79. Door			B						01
45	303514	77. Door				C					01
45	303514	MK. Door						E			01
45	303514	EP. Door							F		01
45	303514	ER. Door								G	01
46	105006	Ceramic rope	Ø 15.	A	B	C	D	E	F	G	1,60 m
47	134107	Glove		A	B	C	D	E	F	G	01
48	181622	Ceramic rope	Ø 8	A	B	C	D	E	F	G	0,90 m
49	300127	EF. Leg (option)	(140 mm)	A			D				04
50	262607	Heat shield		A	B	C	D	E	F	G	01
51	988867	Complete door		A							01
51	988878	Complete door			B						01
51	988879	Complete door				C					01
51	988890	Complete door					D				01
51	988917	Complete door						E			01
51	988891	Complete door							F		01
51	988991	Complete door								G	01
52	142881	Rope		A	B	C	D	E	F	G	04

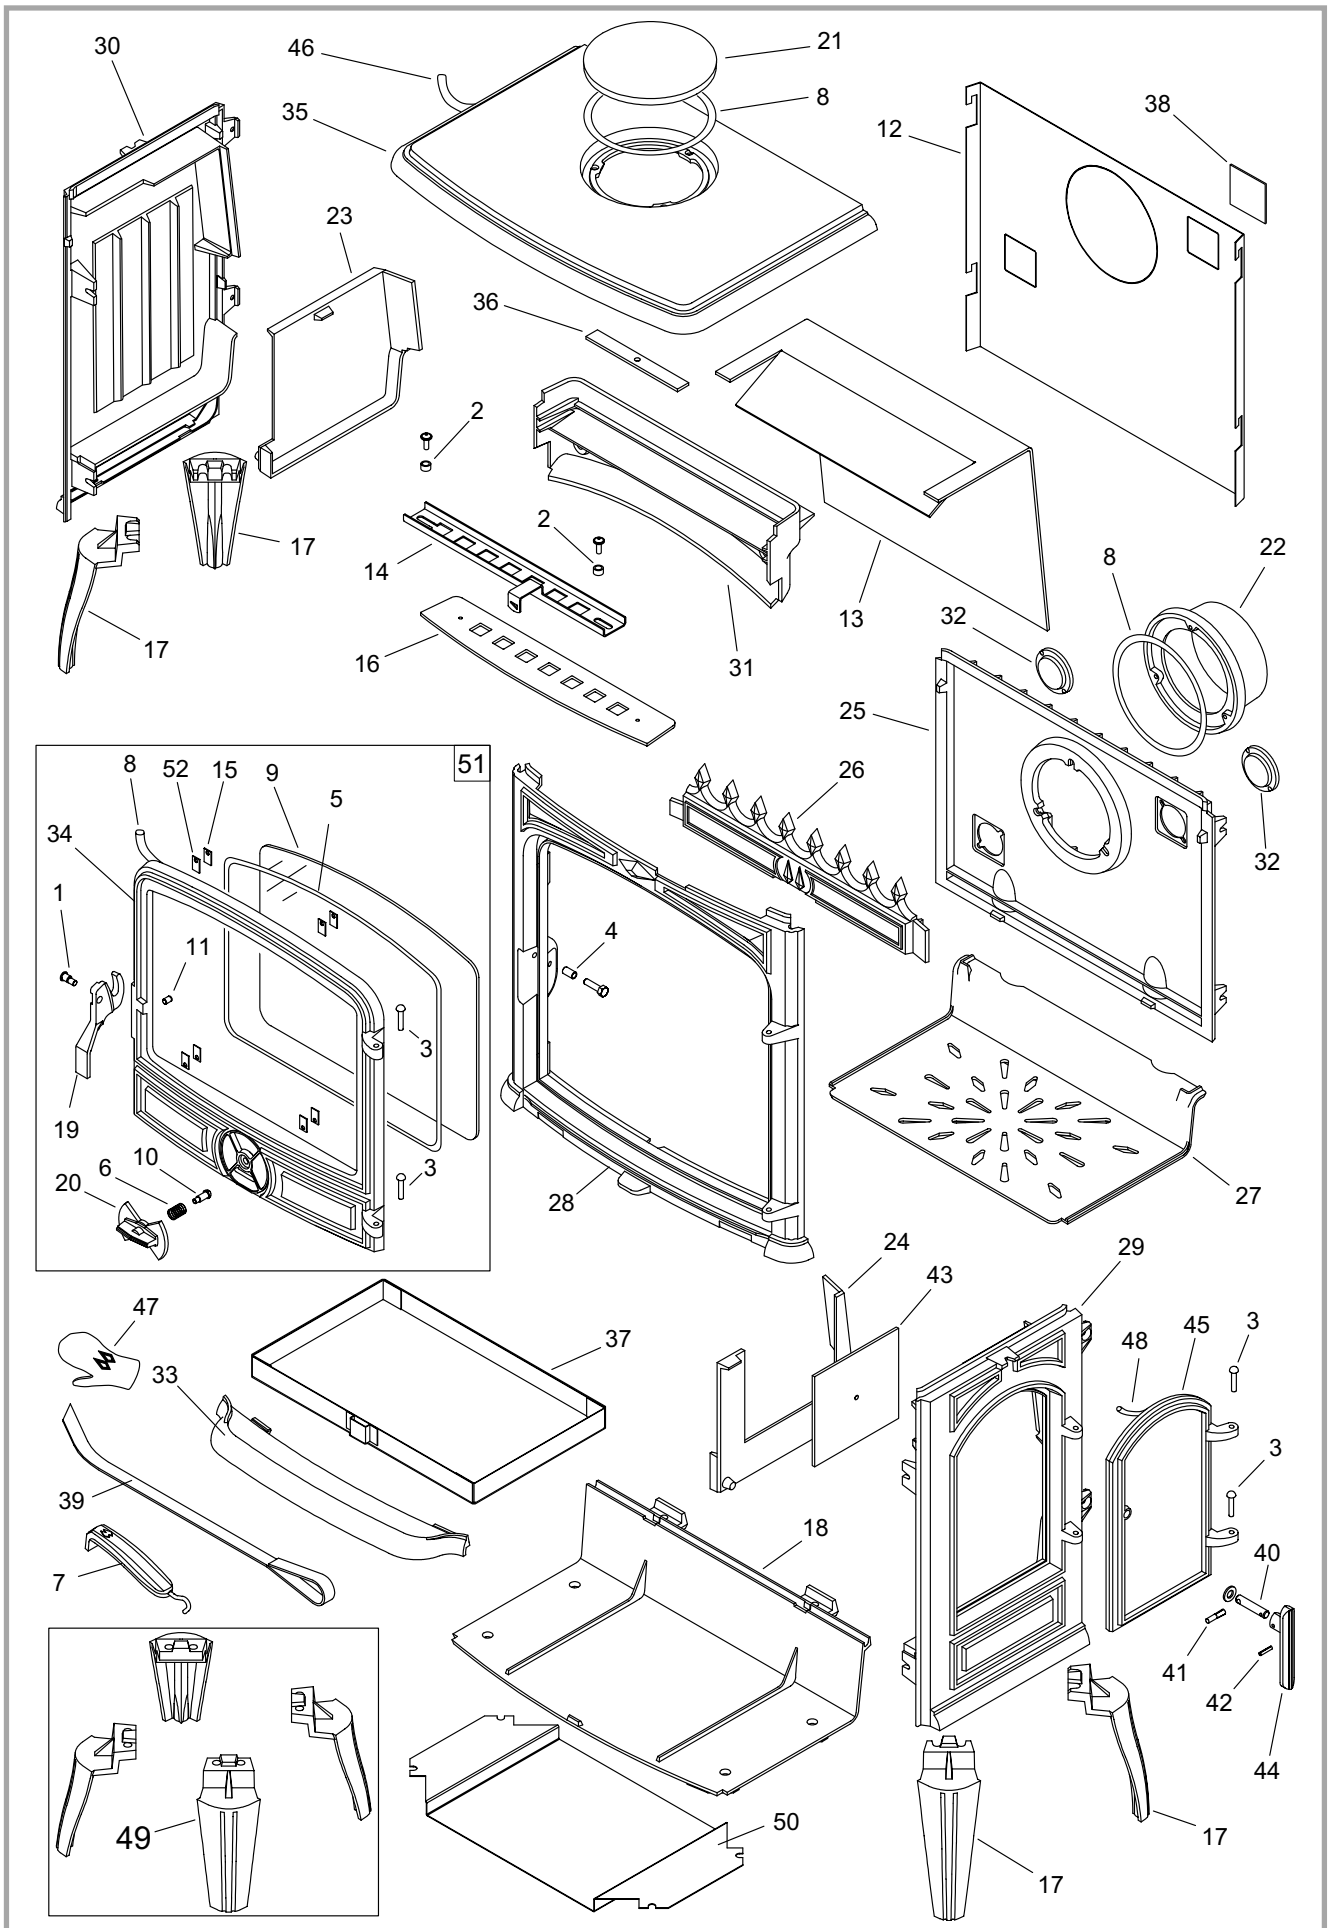


Figure 10 - Spare parts view



## Guarantee certificate

### Legal guarantee

The specifications, dimensions and information shown on our documents are provided for information purposes only and under no circumstances are binding upon the vendor.

With the aim of constantly improving our equipment, all modifications considered as necessary by our departments may be made without notice.

The provisions of the present guarantee certificate are not excluding or limiting the owner of the equipment's rights, concerning the legal guarantee regarding faults or hidden vices which applies in all circumstances, in the conditions detailed in articles 1641 and following of the civil code, and in the country in which the equipment was purchased.

### Contractual guarantee

Our equipment is guaranteed against faults and hidden vices subject to the following conditions:

- 1) Installation and adjustment of the device by a professional installer.
- 2) Observance of the instructions provided in our technical documents and our installation/adjustment instructions.
- 3) The installation, use and maintenance of the device carried out in conformity with the applicable standards and legislation, and with the indications provided in the technical instructions accompanying the device.

This guarantee covers the replacement, in our factory, of parts recognised as being defective from the outset by our "Guarantee Inspection" Department. Carriage and

labour is at the user's cost. Moreover, if the repair or replacement of parts covered by the guarantee is found to be too costly vis-à-vis the price of the appliance, the decision to replace or repair the appliance will be taken by the vendor.

Our guarantee is for 2 (two) years for all appliances, with the exception of closed combustion fireplace and inserts for which our guarantee is 5 (five) years excluding the following:

- 1) Indicator lights, fuses, electrical elements and fans.
- 2) Parts subject to wear or in contact with high temperatures namely: soles and burner grills, bottom plates baffles, ash pans, paintwork and surface treatments for decorative parts. Also excluded from this guarantee are seals and windows.
- 3) Any damage which may result from the use of the appliance with a fuel other than that stipulated in our instructions.
- 4) Damage occurring to parts caused by elements outside the appliance (down draught, storm damage, damp, abnormal pressure or vacuum, heat shocks, etc.).
- 5) Damage to electrical parts caused by plugging in and using the appliance on a mains system, the voltage of which (measured at the entrance to the appliance) is 10% above or below the nominal voltage of 220 V.

### Exclusion of liability

In the case of a product manufactured at the client's request, under no circumstances may we, as a subcontractor, be considered liable vis-a-vis the client or third parties for defects arising from the installation or a design fault with the item in question.

<input type="checkbox"/>	Name and address of the installer : _____ _____
<input type="checkbox"/>	Telephone : _____
<input type="checkbox"/>	Name and address of the customer : _____ _____
Date of installation :     ___ / ___ / _____	
Model of the appliance : <input checked="" type="checkbox"/> 134 08 03	
Color : <input type="checkbox"/> Y <input type="checkbox"/> J <input type="checkbox"/> L <input type="checkbox"/> D <input type="checkbox"/> C <input type="checkbox"/> N <input type="checkbox"/> Q	
Serial number :            _____	
<p>• This certificate has to be completed and kept carefully. In case of claims, send a copy of this to :</p> <p><b>STAUB FONDERIE, BP 73, 59660 MERVILLE, FRANCE.</b></p>	